

Installation Instructions

Reference Enthalpy

Foundation™ Packaged Rooftop Units with Low Leak Economizer 3 to 5 Tons

Model Number: BAYENTH322*
Used With: E/GB*036-060
E/GD*036-060

SAFETY WARNING

Only qualified personnel should install and service the equipment. The installation, starting up, and servicing of heating, ventilating, and air-conditioning equipment can be hazardous and requires specific knowledge and training. Improperly installed, adjusted or altered equipment by an unqualified person could result in death or serious injury. When working on the equipment, observe all precautions in the literature and on the tags, stickers, and labels that are attached to the equipment.

August 2024

ACC-SVN209E-EN

©2024

Warnings, Cautions, and Notices

Read this manual thoroughly before operating or servicing this unit. Safety advisories appear throughout this manual as required. Your personal safety and the proper operation of this machine depend upon the strict observance of these precautions.

The three types of advisories are defined as follows:

WARNING

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION

Indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury. It could also be used to alert against unsafe practices.

NOTICE

Indicates a situation that could result in equipment or property-damage only accidents.

Important Environmental Concerns

Scientific research has shown that certain man-made chemicals can affect the earth's naturally occurring stratospheric ozone layer when released to the atmosphere. In particular, several of the identified chemicals that may affect the ozone layer are refrigerants that contain Chlorine, Fluorine and Carbon (CFCs) and those containing Hydrogen, Chlorine, Fluorine and Carbon (HCFCs). Not all refrigerants containing these compounds have the same potential impact to the environment. Trane advocates the responsible handling of all refrigerants.

Important Responsible Refrigerant Practices

Trane believes that responsible refrigerant practices are important to the environment, our customers, and the air conditioning industry. All technicians who handle refrigerants must be certified according to local rules. For the USA, the Federal Clean Air Act (Section 608) sets forth the requirements for handling, reclaiming, recovering and recycling of certain refrigerants and the equipment that is used in these service procedures. In addition, some states or municipalities may have additional requirements that must also be adhered to for responsible management of refrigerants. Know the applicable laws and follow them.

2

WARNING

Proper Field Wiring and Grounding Required!

Failure to follow code could result in death or serious injury. All field wiring MUST be performed by qualified personnel. Improperly installed and grounded field wiring poses FIRE and ELECTROCUTION hazards. To avoid these hazards, you MUST follow requirements for field wiring installation and grounding as described in NEC and your local/state/national electrical codes.

WARNING

Personal Protective Equipment (PPE) Required!

Failure to wear proper PPE for the job being undertaken could result in death or serious injury. Technicians, in order to protect themselves from potential electrical, mechanical, and chemical hazards, MUST follow precautions in this manual and on the tags, stickers, and labels, as well as the instructions below:

- Before installing/servicing this unit, technicians MUST put on all PPE required for the work being undertaken (Examples; cut resistant gloves/sleeves, butyl gloves, safety glasses, hard hat/bump cap, fall protection, electrical PPE and arc flash clothing). ALWAYS refer to appropriate Safety Data Sheets (SDS) and OSHA guidelines for proper PPE.
- When working with or around hazardous chemicals, ALWAYS refer to the appropriate SDS and OSHA/GHS (Global Harmonized System of Classification and Labeling of Chemicals) guidelines for information on allowable personal exposure levels, proper respiratory protection and handling instructions.
- If there is a risk of energized electrical contact, arc, or flash, technicians MUST put on all PPE in accordance with OSHA, NFPA 70E, or other country-specific requirements for arc flash protection, PRIOR to servicing the unit. NEVER PERFORM ANY SWITCHING, DISCONNECTING, OR VOLTAGE TESTING WITHOUT PROPER ELECTRICAL PPE AND ARC FLASH CLOTHING. ENSURE ELECTRICAL METERS AND EQUIPMENT ARE PROPERLY RATED FOR INTENDED VOLTAGE.

3

WARNING

Follow EHS Policies!

Failure to follow instructions below could result in death or serious injury.

- All Trane personnel must follow the company's Environmental, Health and Safety (EHS) policies when performing work such as hot work, electrical, fall protection, lockout/tagout, refrigerant handling, etc. Where local regulations are more stringent than these policies, those regulations supersede these policies.
- Non-Trane personnel should always follow local regulations.

WARNING

R-454B Flammable A2L Refrigerant!

Failure to use proper equipment or components as described below could result in equipment failure, and possibly fire, which could result in death, serious injury, or equipment damage. The equipment described in this manual uses R-454B refrigerant which is flammable (A2L). Use ONLY R-454B rated service equipment and components. For specific handling concerns with R-454B, contact your local representative.

Copyright

Trademarks

All trademarks referenced in this document are the trademarks of their respective owners.

4

Inspection

1. Check carefully for shipping damage. If any damage is found, report it immediately, and file a claim against the transportation company. Replace damaged parts with authorized parts only.
2. Compare the order number on the shipping label with the accessory identification information on the ordering and shipping documents to verify that the correct accessory has been received.

Parts List

Table 1. Parts list

Qty	Description
1	Outside air temperature/humidity sensor
2	Screws 6-32 x 0.75
1	Harness; wire - OA humidity sensor
1	Installed accessory label

5

Installation Procedure

WARNING

Hazardous Voltage w/Capacitors!

Failure to disconnect power and discharge capacitors before servicing could result in death or serious injury. Disconnect all electric power, including remote disconnects and discharge all motor start/run capacitors before servicing. Follow proper lockout/ tagout procedures to ensure the power cannot be inadvertently energized. Verify with a CAT III or IV voltmeter rated per NFPA 70E that all capacitors have discharged.

NOTICE

Electrostatic Discharge!


Electrostatic discharge can short equipment circuitry. Ensure that you are properly grounded before handling sensitive electronic equipment.

6

Outside Air Temperature/Humidity Sensor Installation – Downflow Units

1. Remove access panels. See Figure 1.


Figure 1. Remove access panels

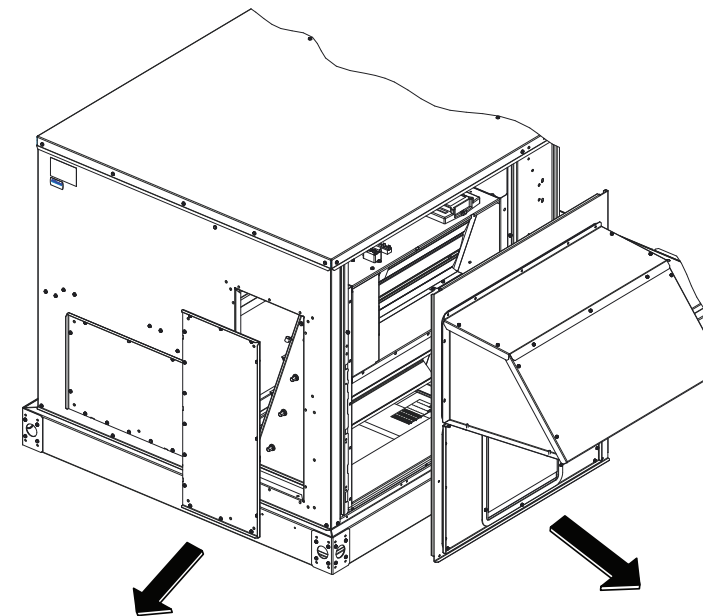

7


2. Remove the existing outside air temperature (OAT) sensor and disconnect the OAT sensor harness from the OAT pin of the controller. See Figure 2 and Figure 3. Discard existing OAT sensor and OAT harness.

Figure 2. Remove sensor

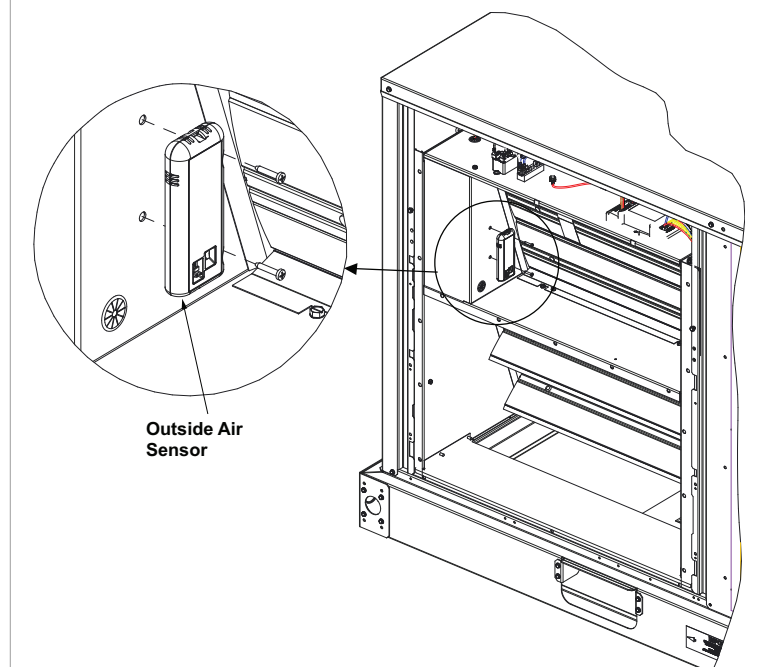

Note: The new sensor in this kit reads both temperature and humidity. The existing OAT sensor harness must be removed from the OAT pin on the controller or the controller will display a configuration error.

Figure 3. Disconnect OAT sensor harness

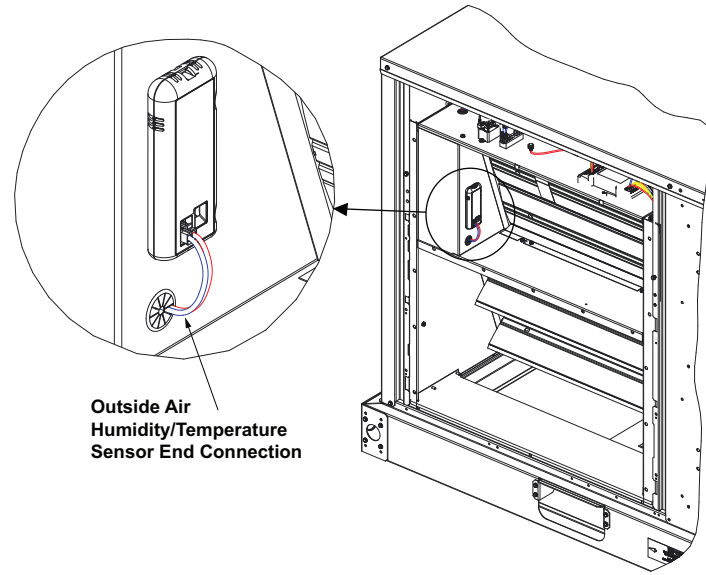

- Remove the new outside air temperature/humidity (OAE) sensor from box and verify DIP switch settings are set to OA per the label on the sensor. See Figure 3.

Note: The protective film on the DIP switch is only necessary during the assembly process. Simply push through the film to set the DIP switches. This will not harm the device.

Figure 4. Verify DIP switches on new sensor

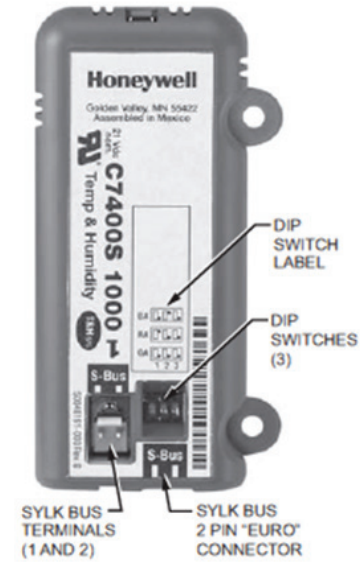



Table 2. Sensor DIP switch positions for switches 1, 2, and 3

Use	1	2	3
RA	ON	OFF	OFF
OA	OFF	OFF	OFF

RA = Return Air Temp/Humidity
OA = Outside Air Temp/Humidity (default setting)

- Secure OAE sensor to LLE panel using the screws provided in this kit as shown in Figure 5.

Figure 5. Attach outside air humidity sensor

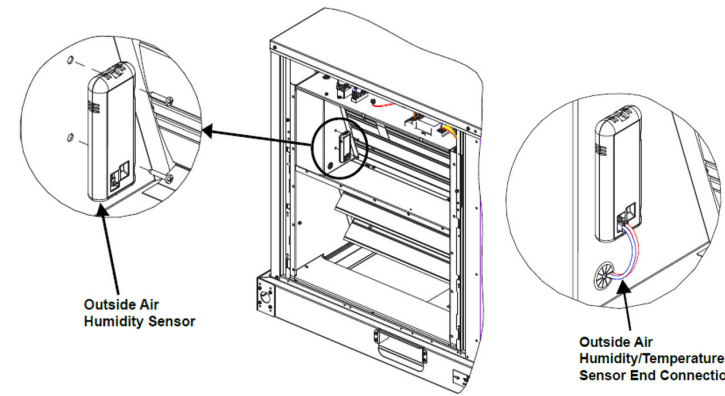


- Connect OAE sensor harness provided in this kit to S-BUS pins on the sensor and route through bushing in the LLE panel. See Figure 5.

Note: Polarity insensitive connections.

- Route harness to controller using pop in wire ties provided in locations shown in Figure 6.

Figure 6. Wire routing and connections

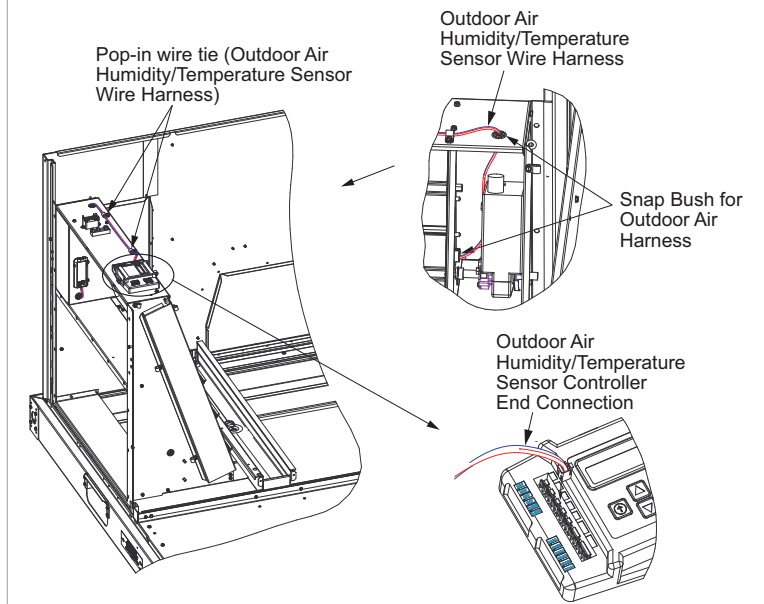


- Connect OAE wire harness to economizer controller S-BUS pin per unit wiring diagram as shown in Figure 6.

Outside Air Temperature/Humidity Sensor Installation – Horizontal Unitsa

- Follow the same instruction as downflow unit from Step 1 to Step 5 and route OAE harness.
- Connect OAE wire harness to economizer controller S-BUS pin. See Figure 7.

Figure 7. Wire routing and connections

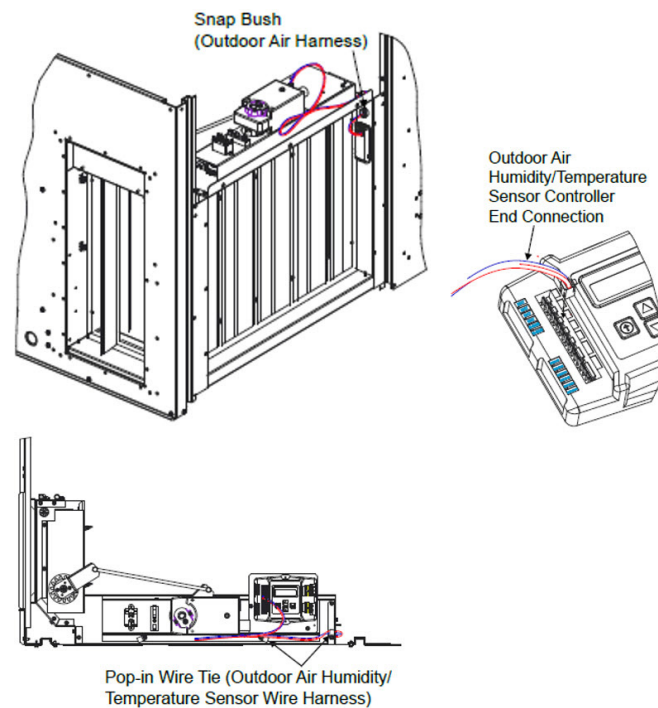

Controller Setup (Field and Factory Installed)

- Verify the correct ENTH CURVE parameter is set in the economizer controller. See Table 3.

Note: The default parameter value for enthalpy is set to ES3 on the controller.

Table 3. Single enthalpy and dual enthalpy boundaries (parameters ES1 through ES5)

Enth. curve	Temp. dry-bulb (°F)	Temp. dew point (°F)	Enthalpy (btu/lb/da)	Point P1		Point P2	
				Temp. °F	Humidity %RH	Temp. °F	Humidity %RH
ES1	80.0	60.0	28.0	80.0	36.8	66.3	80.1
ES2	75.0	57.0	26.0	75.0	39.6	63.3	80.0
ES3	70.0	54.0	24.0	70.0	42.3	59.7	81.4
ES4	65.0	51.0	22.0	65.0	44.8	55.7	84.2
ES5	60.0	48.0	20.0	60.0	46.9	51.3	88.5
HL	86.0	66.0	32.4	86.0	38.9	72.4	80.3

Note: For differential enthalpy there is a high limit boundary. The high limit boundary is ES1 when there are no stages of mechanical cooling energized and HL when a compressor stage is energized.

- To change the enthalpy parameter on the controller use the down arrow, navigate to SETPOINTS, and press Enter. Scroll down (using down arrow) to ENTH CURVE, press Enter and use the Up/Down arrow to view the parameter values.


To select the parameter, press Enter to accept the displayed value and store it in non-volatile RAM. The screen will then display CHANGE STORED. Press the Menu (Up/Exit) button to return to the previous menu. See Table 3 and Figure 8.

Notes:

- During setup, the economizer module is live at all times.
- There will be a slight delay during start-up while the controller and OAE sensor communicate.

- Place label next to unit nameplate.
- Secure filter access panel back on to the unit.

Figure 8. Single enthalpy curve and boundaries

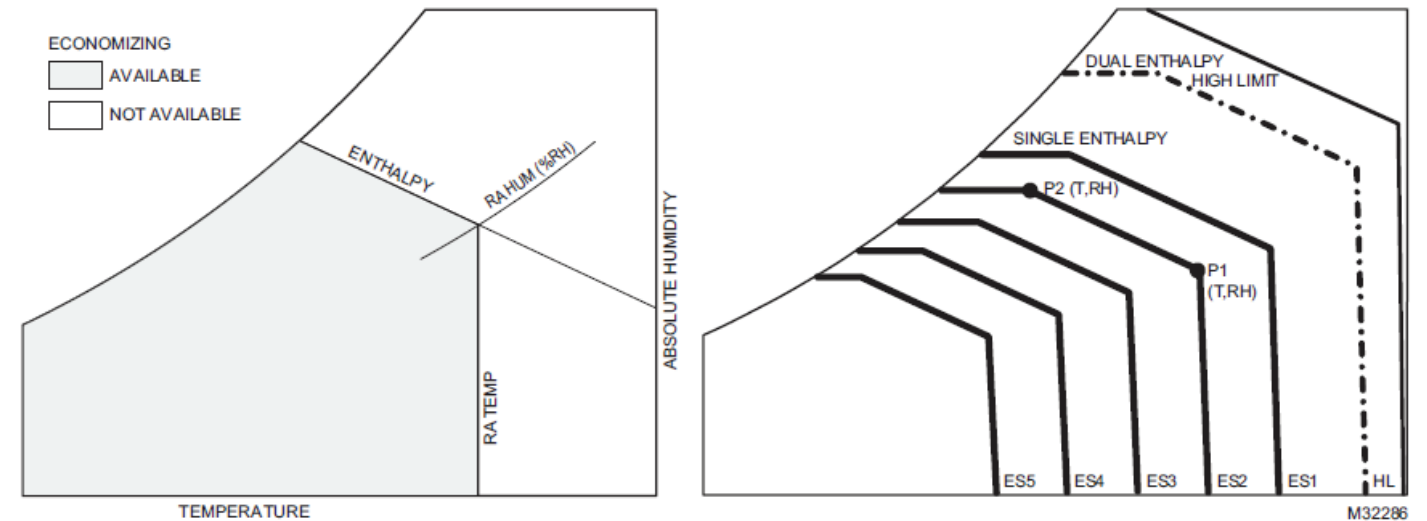

Trane and American Standard create comfortable, energy efficient indoor environments for commercial and residential applications. For more information, please visit trane.com or americanstandardair.com.

Trane and American Standard have a policy of continuous product and product data improvement and reserve the right to change design and specifications without notice. We are committed to using environmentally conscious print practices.