


Installation

UHEC-IN-30

Library	Service Literature
Product Section	Air Terminal Devices and Heating Products
Product	Unit Heaters
Model	UHEC Accessories
Literature Type	Installation
Sequence	30
Date	April 1997
File No.	SV-TD-UH-UHEC-IN-30-497
Supersedes	EUH-IN-30A-1094

Line-Voltage Ceiling-Mounted Energy-Fitness Thermostat

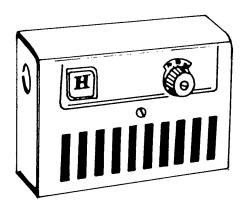

Model TC 1602 Order No. 236-718

Since the Trane Company has a policy of continuous product improvement, it reserves the right to change specifications and design without notice. The installation and servicing of the equipment referred to in this booklet should be done by qualified, experienced technicians.

Installation Instructions

Procedure

WARNING! Open disconnect switches before servicing unit. Failure to do so may result in personal injury or death from electrical shock.

- 1. Disconnect heater from power supply.
- 2. Wire the thermostat to the heater following the wiring diagrams located on the unit. All wiring must in accordance with NEC, CEC and local electrical codes.
- 3. Remove the front cover of the thermostat by unscrewing the single screw in front.
- 4. Remove knockouts where necessary for wiring.
- 5. Attach thermostat to mounting surface. A wooden panel should be placed between the thermostat and any brick, metal or concrete mounting surface.
- Run wiring through the knockout holes. The wiring should not interfere with the adjusting knob or the dial.
- 7. Complete the wiring connections to the unit, and check for proper operation.