


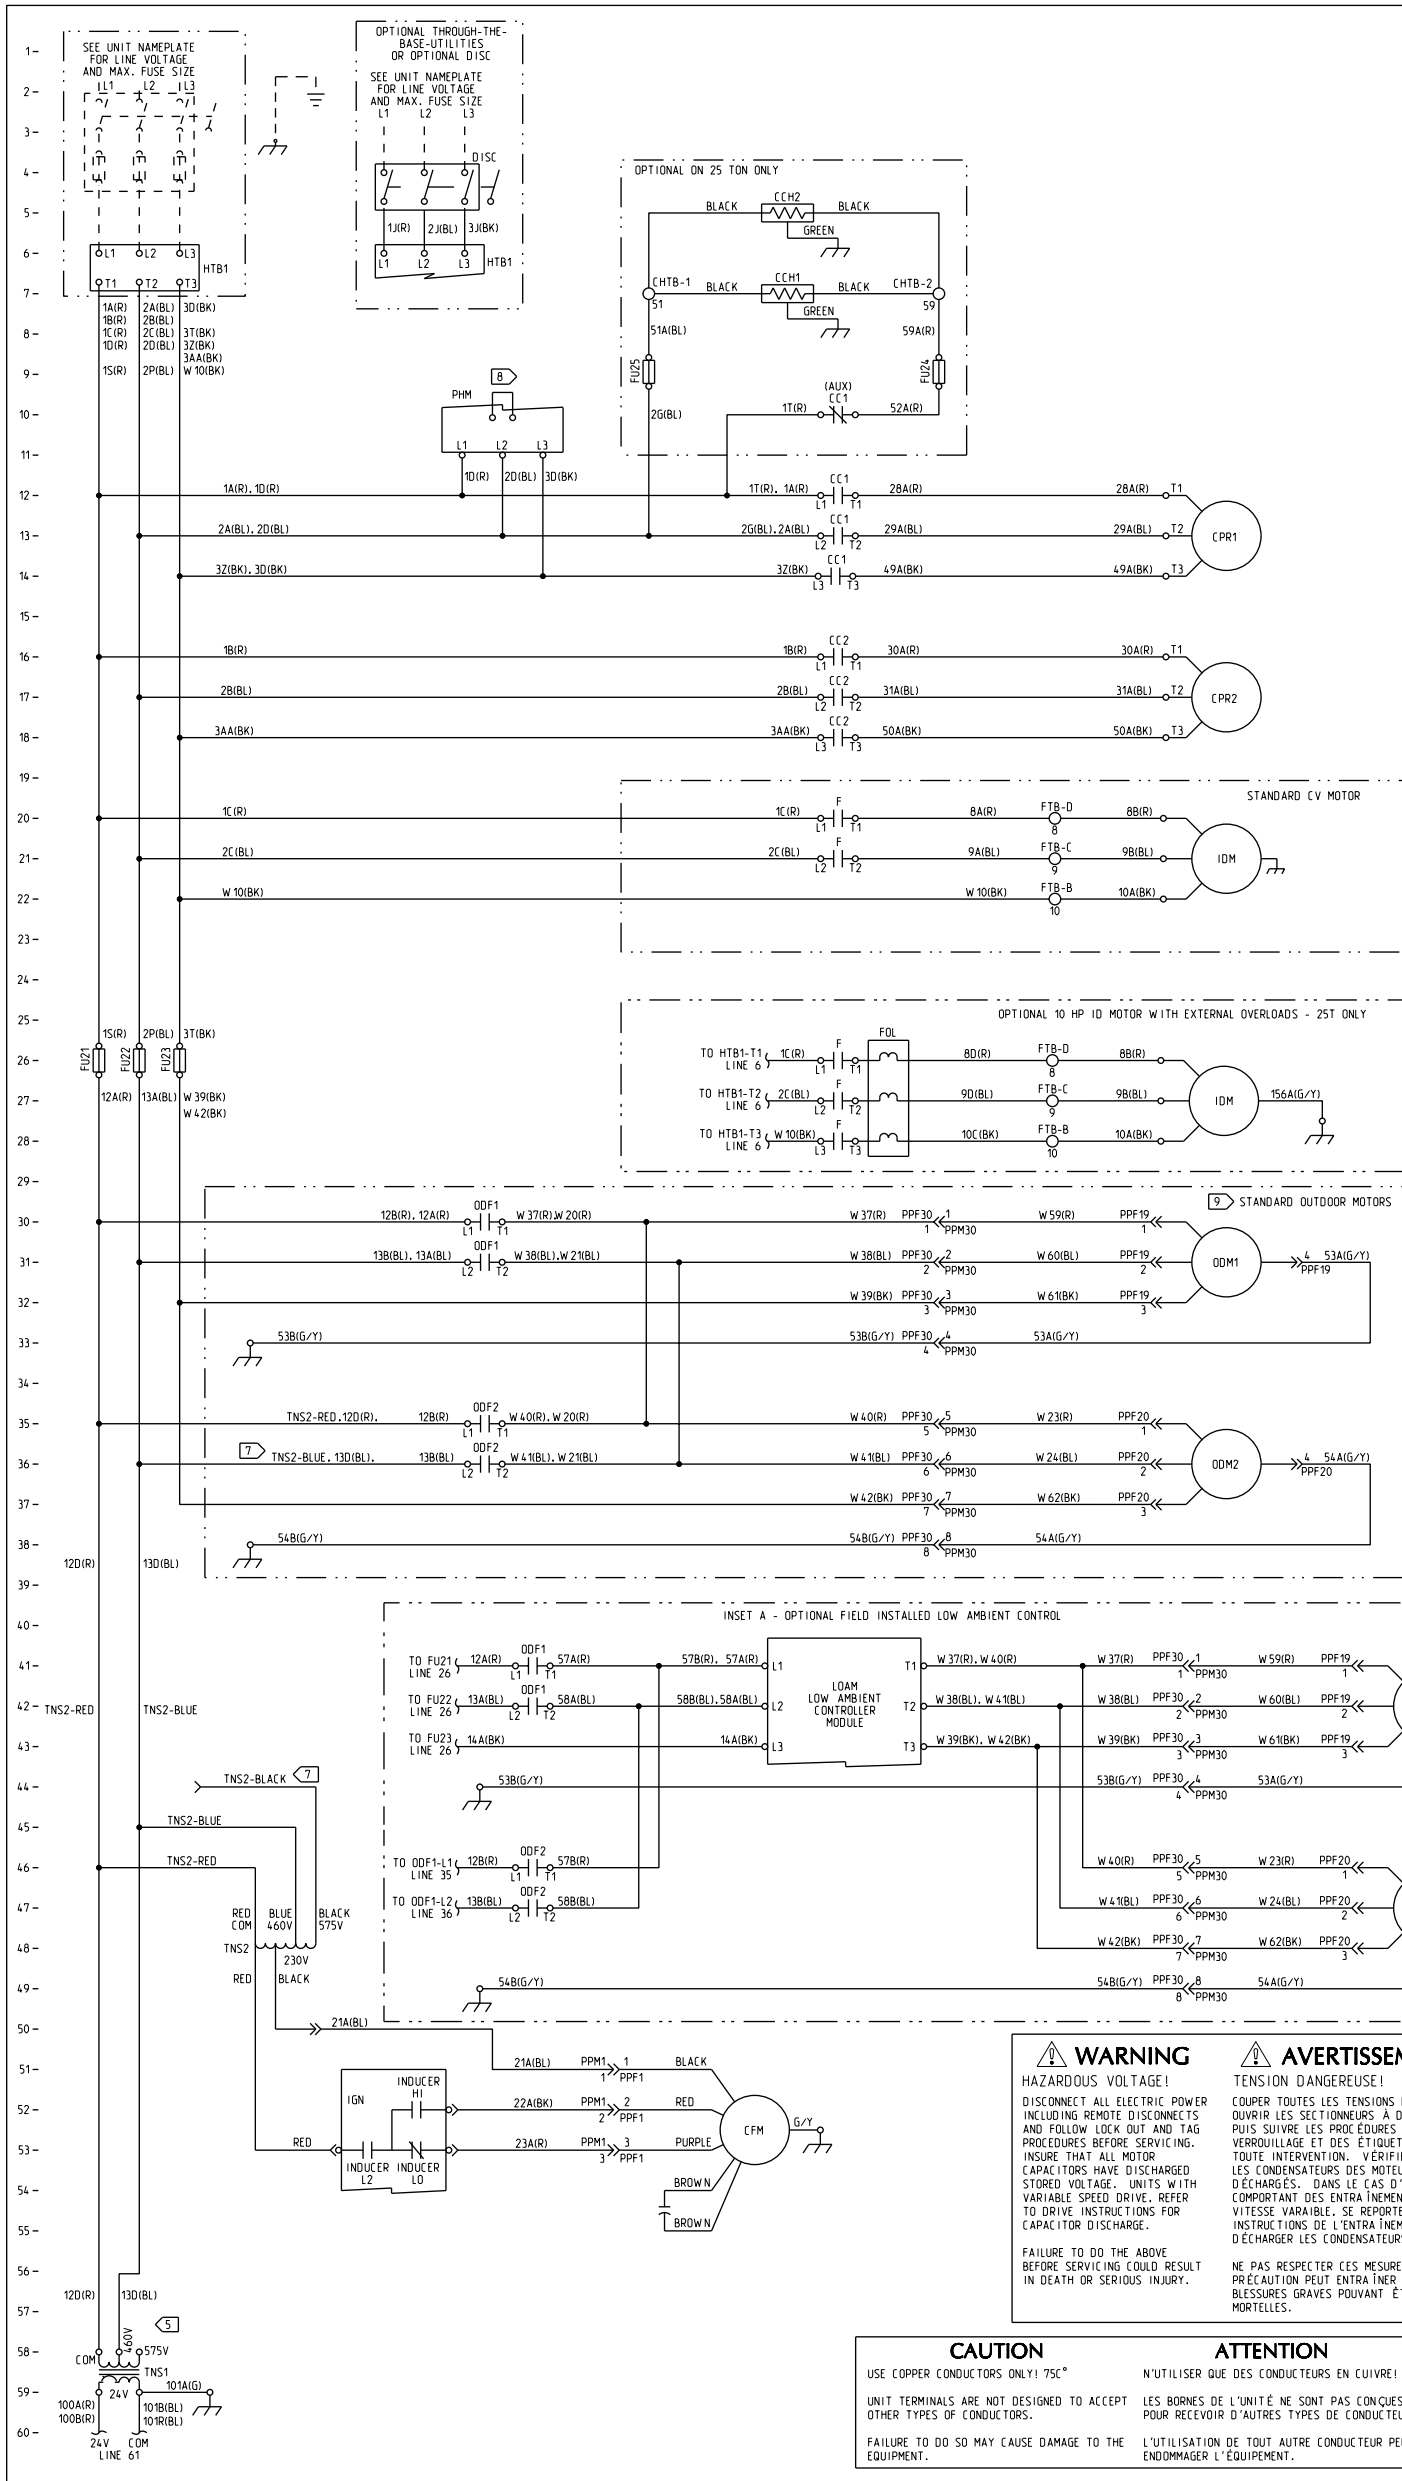

DEVICE DESIGNATION	DESCRIPTION	LINE NUMBER
CC1	CONTACTOR - COMPRESSOR 1	10,12,13,14
CC2	CONTACTOR - COMPRESSOR 2	16,17,18
CCH1	HEATER - CRANKCASE 1	7
CCH2	HEATER - CRANKCASE 2	5
CFM	MOTOR - COMBUSTION FAN	52
CHTB	TERMINAL BLOCK - CRANKCASE HEATER	7
CPR1	COMPRESSOR 1	12
CPR2	COMPRESSOR 2	16
DISC	DISCONNECT - FACTORY INSTALLED	4
F	CONTACTOR - INDOOR FAN	20,21,22,26,27,28
FOL	OVERLOAD - SUPPLY FAN	26
FTB	TERMINAL BLOCK - INDOOR FAN	20,21,22,26,27,28
FU21	FUSE - OUTDOOR MOTOR	26
FU22	FUSE - OUTDOOR MOTOR	26
FU23	FUSE - OUTDOOR MOTOR	26
FU24	FUSE - CRANKCASE HEATER	9
FU25	FUSE - CRANKCASE HEATER	9
HTB1	TERMINAL BLOCK - HIGH VOLTAGE	6,10
IDM	MOTOR - INDOOR	20,26
IGN	MODULE - IGNITION CONTROL	53
LOAM	MODULE - LOW AMBIENT CONTROLLER	41
ODF1	CONTACTOR - OUTDOOR FAN 1	30,31,41,42
ODF2	CONTACTOR - OUTDOOR FAN 2	35,36,46,47
ODM1	MOTOR - OUTDOOR 1	31,42
ODM2	MOTOR - OUTDOOR 2	36,47
PHM	MODULE - PHASE MONITOR	11
TNS1	TRANSFORMER - 24V CONTROLS	58
TNS2	TRANSFORMER - GAS HEAT	47

- NOTES:
- UNLESS OTHERWISE NOTED, ALL SWITCHES ARE SHOWN AT 25°C (77°F), AT ATMOSPHERIC PRESSURE, AT 50% RELATIVE HUMIDITY, WITH ALL UTILITIES TURNED OFF, AND AFTER A NORMAL SHUTDOWN HAS OCCURRED.
 - DASHED LINES INDICATE RECOMMENDED FIELD WIRING BY OTHERS. DASHED LINE ENCLOSURES AND/OR DASHED DEVICE OUTLINES INDICATE COMPONENTS PROVIDED BY THE FIELD. PHANTOM LINE ENCLOSURES INDICATE ALTERNATE CIRCUITRY OR AVAILABLE SALES OPTIONS. SOLID LINE INDICATES WIRING BY TRANE CO.
 - NUMBERS ALONG THE LEFT SIDE MARGIN OF THE SCHEMATIC DESIGNATE, BY LINE NUMBER, THE LOCATION OF CONTACTS ENERGIZED BY COIL. AN UNDERLINED NUMBER INDICATES A NORMALLY CLOSED CONTACT. AN OPEN ARROWHEAD POINTING UPWARD BELOW THE LINE NUMBER INDICATES A TIMED CONTACT WHICH BEGINS TIMING WHEN ENERGIZED.
- 5 CONNECTIONS SHOWN ARE FOR 460V UNITS. FOR 575V OPERATION, MOVE ALL WIRES FROM THE 460V TERMINAL TO THE 575V TERMINAL ON TNS1.
- 7 CONNECTIONS SHOWN ARE FOR 460V UNITS. FOR 575V OPERATION, REMOVE WIRE TNS2-BLUE FROM ODF2-L2 AND CONNECT TNS2-BLACK TO ODF2-L2.
- 8 CUT RED WIRE ON PHASE MONITOR AS SHOWN ON THE DEVICE FOR 50HZ OPERATION.
- 9 FOR OPTIONAL FIELD INSTALLED LOW AMBIENT CONTROL SEE INSET A.

ABBR	COLOR	ABBR	COLOR
BK	BLACK	V.(PR)	PURPLE
BL	BLUE	R	RED
BR	BROWN	TN	TAN
G	GREEN	W	WHITE
GR	GRAY	Y	YELLOW
O	ORANGE		

WARNING
HAZARDOUS VOLTAGE!
DISCONNECT ALL ELECTRIC POWER INCLUDING REMOTE DISCONNECTS AND FOLLOW LOCK OUT AND TAG PROCEDURES BEFORE SERVICING. INSURE THAT ALL MOTOR CAPACITORS HAVE DISCHARGED STORED VOLTAGE. UNITS WITH VARIABLE SPEED DRIVE, REFER TO DRIVE INSTRUCTIONS FOR CAPACITOR DISCHARGE.

FAILURE TO DO THE ABOVE BEFORE SERVICING COULD RESULT IN DEATH OR SERIOUS INJURY.

AVERTISSEMENT
TENSION DANGEREUSE!
COUPER TOUTES LES TENSIONS ET OUVRIR LES SECTIONNEURS A DISTANCE. PUIS SUIVRE LES PROCEDURES DE VERROUILLAGE ET DES ETIQUETTES AVANT TOUTE INTERVENTION. VERIFIER QUE TOUTS LES CONDENSATEURS DES MOTEURS SONT DECHARGES. DANS LE CAS D'UNITES COMPORTANT DES ENTRAINEMENTS A VITESSE VARIABLE, SE REPORTER AUX INSTRUCTIONS DE L'ENTRAINEMENT POUR DECHARGER LES CONDENSATEURS.

NE PAS RESPECTER CES MESURES DE PRECAUTION PEUT ENTRAÎNER DES BLESSURES GRAVES POUVANT ÊTRE MORTELLES.

ADVERTENCIA
¡VOLTAJE PELIGROSO!
DESCONECTE TODA LA ENERGÍA ELÉCTRICA, INCLUIDO LAS DESCONEXIONES REMOTAS Y SIGA LOS PROCEDIMIENTOS DE CIERRE Y ETIQUETADO ANTES DE PROCEDER AL SERVICIO. ASEGURESE DE QUE TODOS LOS CAPACITORES DEL MOTOR HAYAN DESCARGADO EL VOLTAJE ALMACENADO. PARA LAS UNIDADES CON EJE DE DIRECCIÓN DE VELOCIDAD VARIABLE, CONSULTE LAS INSTRUCCIONES PARA LA DESCARGA DEL CONDENSADOR.

EL NO REALIZAR LO ANTERIORMENTE INDICADO, PODRÍA OCASIONAR LA MUERTE O SERIAS LESIONES PERSONALES.

CAUTION	ATTENTION	PRECAUCIÓN
USE COPPER CONDUCTORS ONLY! 75C°	N'UTILISER QUE DES CONDUCTEURS EN CUIVRE!	¡UTILICE ÚNICAMENTE CONDUCTORES DE COBRE!
UNIT TERMINALS ARE NOT DESIGNED TO ACCEPT OTHER TYPES OF CONDUCTORS.	LES BORNES DE L'UNITÉ NE SONT PAS CONÇUES POUR RECEVOIR D'AUTRES TYPES DE CONDUCTEURS.	LAS TERMINALES DE LA UNIDAD NO ESTÁN DISEÑADAS PARA ACEPTAR OTROS TIPOS DE CONDUCTORES.
FAILURE TO DO SO MAY CAUSE DAMAGE TO THE EQUIPMENT.	L'UTILISATION DE TOUT AUTRE CONDUCTEUR PEUT ENDOMMAGER L'EQUIPEMENT.	SI NO LO HACE, PUEDE OCASIONAR DAÑO AL EQUIPO.

FILE NUMBER	DRAWING NUMBER	SHEET	REV
12132716	12132719	1 OF 1	C

THIS DRAWING IS PROPERTY OF TRANE AND SHALL NOT BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, WITHOUT THE WRITTEN CONSENT OF TRANE.

DRAWN BY: D. SHANNON
CHECKED BY: J. SHANNON
DATE: 12-01-2017
REVISION DATE: 5-FEB-2018
SYMBOL TO: SIMILAR TO: --

TRANE FOUNDATION
SCHEMATIC - POWER - ELECTRO-MECHANICAL
460V/575V - 2-STAGE GAS HEAT - CV - 15-25T