


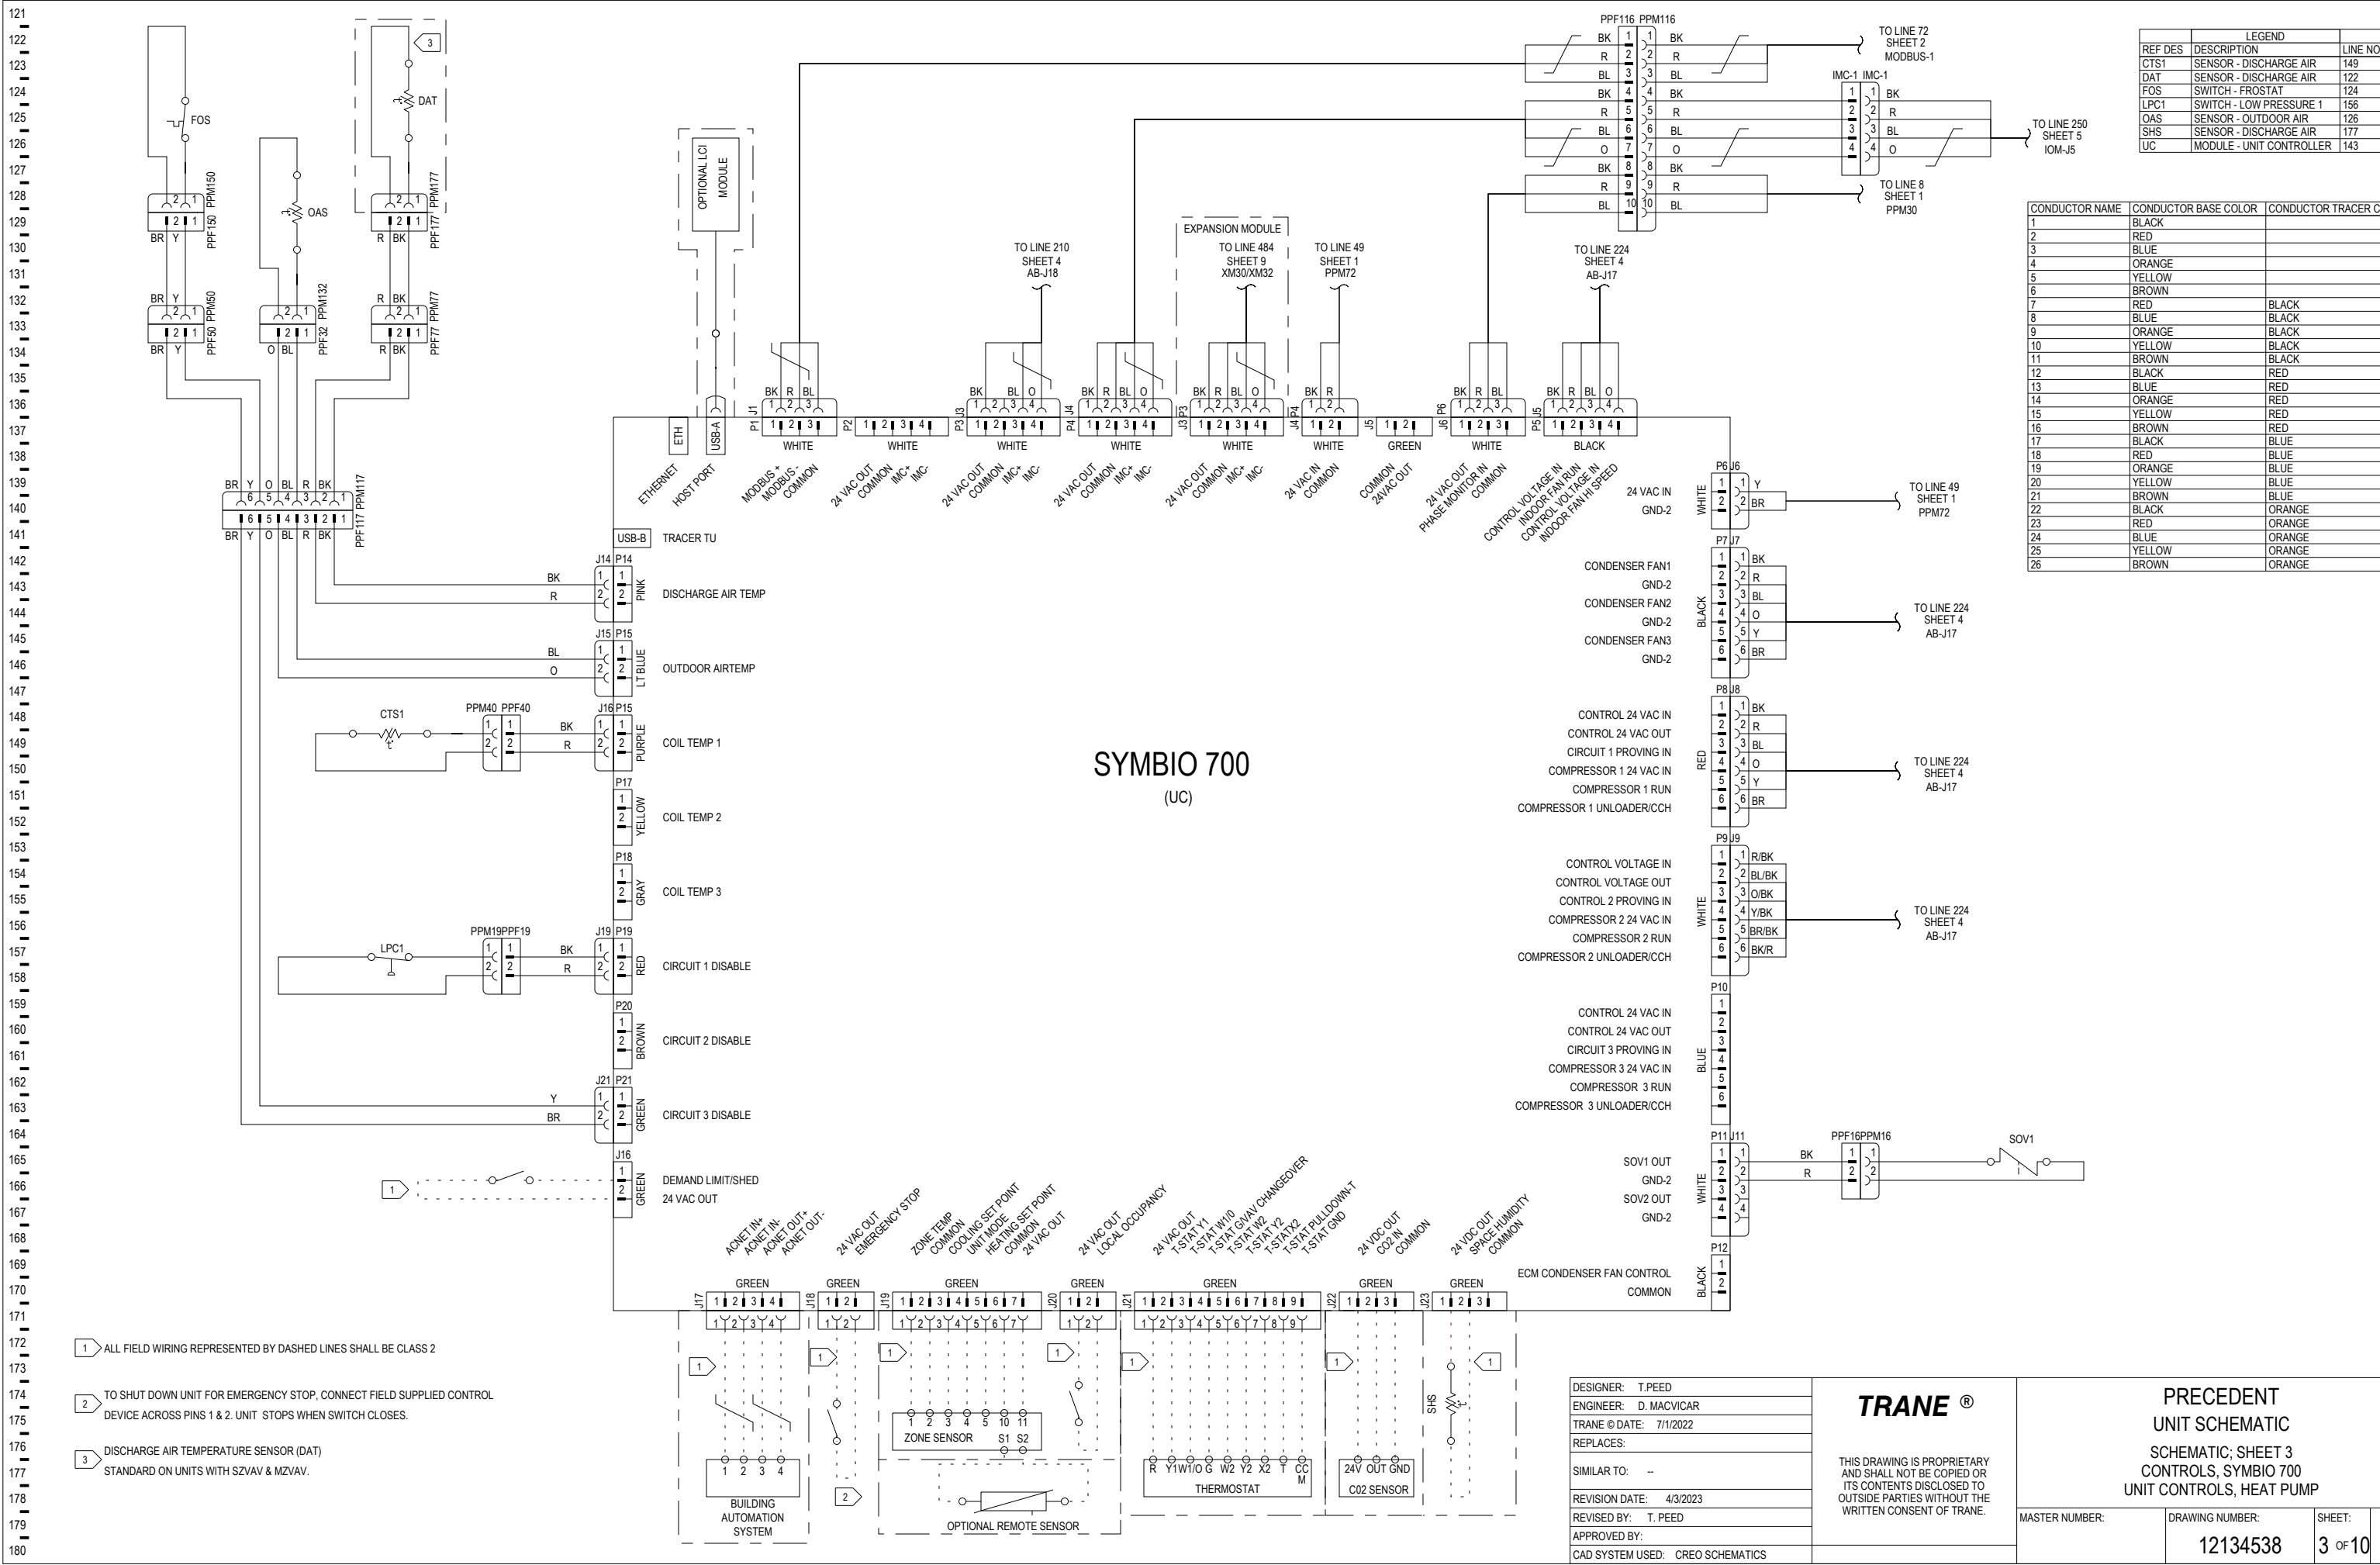

- 1 ALL FIELD WIRING REPRESENTED BY DASHED LINES SHALL BE CLASS 2
- 2 TO SHUT DOWN UNIT FOR EMERGENCY STOP, CONNECT FIELD SUPPLIED CONTROL DEVICE ACROSS PINS 1 & 2. UNIT STOPS WHEN SWITCH CLOSSES.
- 3 DISCHARGE AIR TEMPERATURE SENSOR (DAT) STANDARD ON UNITS WITH SZVAV & MZVAV.