


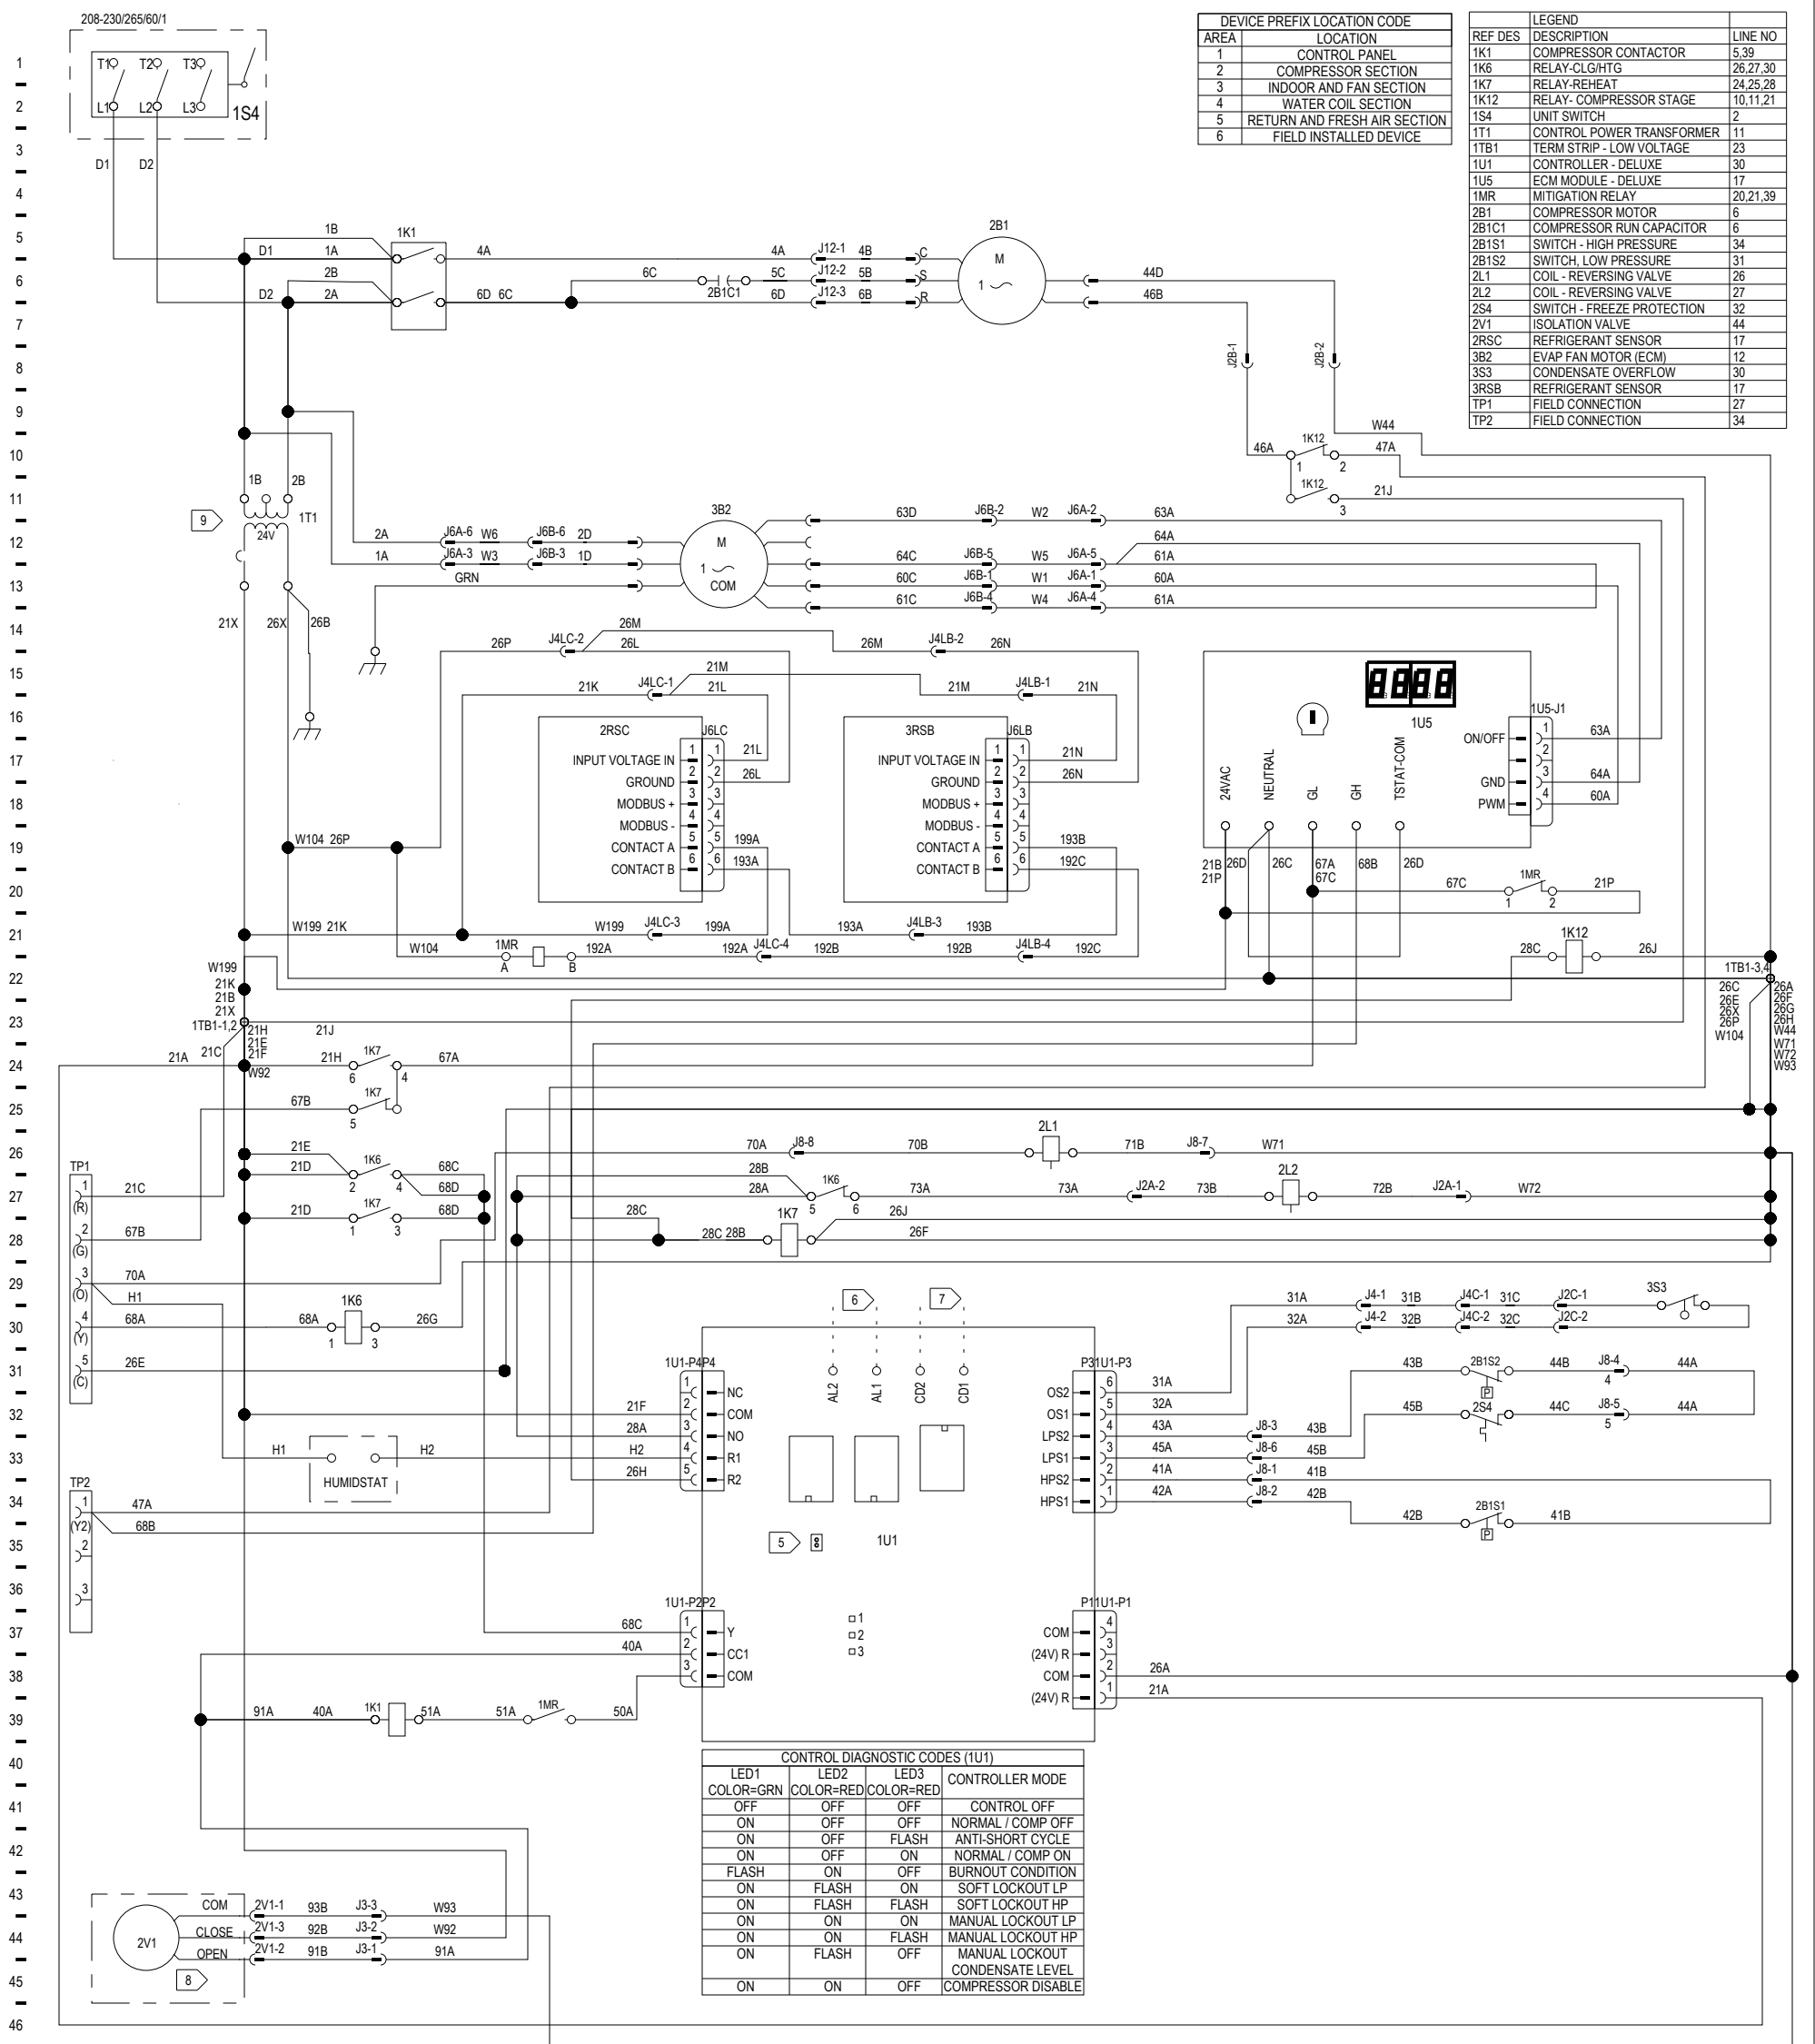

- NOTES:

1. UNLESS OTHERWISE NOTED, ALL SWITCHES ARE SHOWN AT 25° C (77° F), AT ATMOSPHERIC PRESSURE, AT 50% RELATIVE HUMIDITY, WITH ALL UTILITIES TURNED OFF, AND AFTER A NORMAL SHUTDOWN HAS OCCURRED.

2. DASHED LINES INDICATE RECOMMENDED FIELD WIRING BY OTHERS. DASHED LINE ENCLOSURES AND/OR DASHED DEVICE OUTLINES INDICATE COMPONENTS PROVIDED BY THE FIELD. PHANTOM LINE ENCLOSURES INDICATE ALTERNATE CIRCUITRY OR AVAILABLE SALES OPTIONS. SOLID LINE INDICATES WIRING BY TRANE CO.

3. NUMBERS ALONG THE RIGHT SIDE OF THE SCHEMATIC DESIGNATE THE LOCATION OF CONTACTS BY THE LINE NUMBER. AN UNDERLINED NUMBER INDICATES A NORMALLY CLOSED CONTACT. AN OPEN ARROW BELOW THE LINE NUMBER POINTING UPWARD INDICATES A TIMED CONTACT WHICH BEGINS TIMING WHEN ENERGIZED.

4. ALL FIELD WIRING MUST BE IN ACCORDANCE WITH THE NATIONAL ELECTRIC CODE (NEC), STATE AND LOCAL REQUIREMENTS. ALL LOW VOLTAGE FIELD CONNECTIONS ARE CLASS 2.

5 VERIFY TEST JUMPER IS NOT CONNECTED/REMOVED TO PREVENT CONTROL TIMING ERRORS.

6 ISOLATED GENERAL ALARM CONTACTS. CONTACTS CLOSE WHEN CONTROL 1U1 GOES INTO MANUAL LOCKOUT MODE. CONTACTS RATED FOR CLASS 2 24V.

7 CONNECTION FOR 24VAC CLASS 2 COMPRESSOR DISABLE INPUT.

8 FOR TWO WIRE VALVES CONNECT TO WIRES 91B AND 93B.
FOR FIELD INSTALLED VALVE WIRES 91B, 92B, AND 93B ARE COILED BEHIND CONTROL BOX.

9 FOR 208/230V UNITS TRANSFORMER IS FACTORY WIRED FOR 230V. FOR 208V APPLICATION MOVE PRIMARY WIRE FROM THE 230V TAB TO THE 208V TAB.

 WARNING	 AVERTISSEMENT	 ADVERTENCIA
HAZARDOUS VOLTAGE! DISCONNECT ALL ELECTRIC POWER INCLUDING REMOTE DISCONNECTS AND FOLLOW LOCK OUT AND TAG PROCEDURES BEFORE SERVICING. INSURE THAT ALL MOTOR CAPACITORS HAVE DISCHARGED STORED VOLTAGE. UNITS WITH VARIABLE SPEED DRIVE, REFER TO DRIVE INSTRUCTIONS FOR CAPACITOR DISCHARGE. FAILURE TO DO THE ABOVE BEFORE SERVICING COULD RESULT IN DEATH OR SERIOUS INJURY.	TENSION DANGEREUSE! COUPER TOUTES LES TENSIONS ET OUVRIR LES SECTIONNEURS A DISTANCE, PUIS SUIVRE LES PROCEDURES DE VERROUILLAGE ET DES ETIQUETTES AVANT TOUTE INTERVENTION. VERIFIER QUE TOUTS LES CONDENSATEURS DES MOTEURS SONT DECHARGES. DANS LE CAS D'UNITES COMPORTANT DES ENTRAÎNEMENTS A VITESSE VARIABLE, SE REPORTER AUX INSTRUCTIONS DE L'ENTRAÎNEMENT POUR DECHARGER LES CONDENSATEURS. NE PAS RESPECTER CES MESURES DE PRECAUTION PEUT ENTRAÎNER DES BLESSURES GRAVES POUVANT ÊTRE MORTELLES.	¡VOLTAJE PELIGROSO! DESCONECTE TODA LA ENERGÍA ELÉCTRICA, INCLUIDO LAS DESCONEXIONES REMOTAS Y SIGA LOS PROCEDIMIENTOS DE CIERRE Y ETIQUETADO ANTES DE PROCEDER AL SERVICIO. ASEGURESE DE QUE TODOS LOS CAPACITORES DEL MOTOR HAYAN DESCARGADO EL VOLTAJE ALMACENADO. PARA LAS UNIDADES CON EJE DE DIRECCIÓN DE VELOCIDAD VARIABLE, CONSULTE LAS INSTRUCCIONES PARA LA DESCARGA DEL CONDENSADOR. EL NO REALIZAR LO ANTERIORMENTE INDICADO, PODRÍA OCASIONAR LA MUERTE O SERÍAS LESIONES PERSONALES.

DESIGNER:	SULTHAN MOHIDDIN
ENGINEER:	M COOMBS
TRANE © DATE:	25-JAN-2024
REPLACES:	
SIMILAR TO:	
REVISION DATE:	13-FEB-2025
REVISED BY:	SULTHAN MOHIDDIN
APPROVED BY:	M COOMBS
CAD SYSTEM USED:	CREO SCHEMATICS

TRANE®

THIS DRAWING IS PROPRIETARY
AND SHALL NOT BE COPIED OR
ITS CONTENTS DISCLOSED TO
OUTSIDE PARTIES WITHOUT THE
WRITTEN CONSENT OF TRANE.

WSHP
SCHEMATIC DIAGRAM
DLX 2 STG W/HGR, LDS 1PH
DXV/DXH

MASTER NUMBER:	DRAWING NUMBER:	SHEET:	REV
	23116495	1 OF 1	B