



- 1 ALL UNITS SHIP WITH AN OPTIONS HARNESS ROUTED FROM THE CONTROL BOX TO THE RETURN AIR SECTION.
IF NO OPTIONS ARE INSTALLED DO NOT CONNECT PPGS TO THE RTM.
IF NO ECA IS INSTALLED DO NOT CONNECT PPGs TO THE RTM.
REFER TO ACCOMPANYING LITERATURE FOR CONNECTION AND COMBINATION OF OPTIONAL COMPONENTS.
- 2 WHEN OPTIONAL REMOTE MINIMUM POSITION POTENTIOMETER IS REQUIRED. WIRE AS SHOWN.
- 3 REQUIRED FOR OPTIONAL REFERENCE ENTHALPY CONTROL.
- 4 REQUIRED FOR OPTIONAL COMPARATIVE ENTHALPY CONTROL.
- 5 OPTIONAL MAS, RAS, RSH, OHS AND ASSOCIATED WIRING NOT USED WITH MOTORIZED OUTSIDE AIR.
- 6 POWER EXHAUST OUTPUT FOR FIELD SUPPLIED DEVICE.
- 7 STANDARD ECONOMIZER ECA IS ATTACHED TO THE BACK OF THE RTM