


Installation, Operation, and Maintenance

Single Packaged Heat Pump, Priority, Two Stage, Convertible, 2 to 5 Ton, R-454B

5WCZ5024A1000A
5WCZ5030A1000A
5WCZ5036A1000A
5WCZ5042A1000A
5WCZ5048A1000A
5WCZ5060A1000A
5WCZ5036A3000A
5WCZ5048A3000A
5WCZ5060A3000A
5WCZ5036A4000A
5WCZ5048A4000A
5WCZ5060A4000A

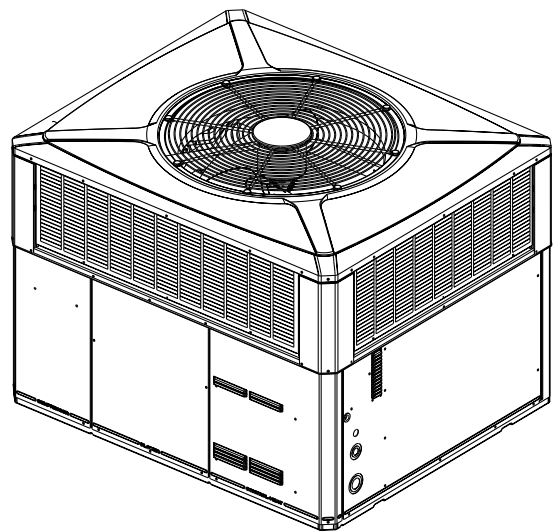

Note: Graphics in this document are for representation only.
Actual model may differ in appearance.



⚠ SAFETY WARNING

Only qualified personnel should install and service the equipment. The installation, starting up, and servicing of heating, ventilating, and air-conditioning equipment can be hazardous and requires specific knowledge and training. Improperly installed, adjusted or altered equipment by an unqualified person could result in death or serious injury. When working on the equipment, observe all precautions in the literature and on the tags, stickers, and labels that are attached to the equipment.

Introduction

Read this manual thoroughly before operating or servicing this unit.

This document is customer property and is to remain with this unit. Return to the service information pack upon completion of work.

Warnings, Cautions, and Notices

Safety advisories appear throughout this manual as required. Your personal safety and the proper operation of this machine depend upon the strict observance of these precautions.

The three types of advisories are defined as follows:



WARNING

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION

Indicates a potentially hazardous situation which, if not avoided, could result in minor or moderate injury. It could also be used to alert against unsafe practices.

NOTICE

Indicates a situation that could result in equipment or property-damage only accidents.

Important Environmental Concerns

Scientific research has shown that certain man-made chemicals can affect the earth's naturally occurring stratospheric ozone layer when released to the atmosphere. In particular, several of the identified chemicals that may affect the ozone layer are refrigerants that contain Chlorine, Fluorine and Carbon (CFCs) and those containing Hydrogen, Chlorine, Fluorine and Carbon (HCFCs). Not all refrigerants containing these compounds have the same potential impact to the environment. Trane advocates the responsible handling of all refrigerants.

Important Responsible Refrigerant Practices

Trane believes that responsible refrigerant practices are important to the environment, our customers, and the air conditioning industry. All technicians who handle refrigerants must be certified according to local rules. For the USA, the Federal Clean Air Act (Section 608) sets forth the requirements for handling, reclaiming, recovering and recycling of certain refrigerants and the equipment that is used in these service procedures. In addition, some states or municipalities may have additional requirements that must also be adhered to for responsible management of refrigerants. Know the applicable laws and follow them.

⚠ WARNING

Proper Field Wiring and Grounding Required!

Failure to follow code could result in death or serious injury.

All field wiring **MUST** be performed by qualified personnel. Improperly installed and grounded field wiring poses **FIRE** and **ELECTROCUTION** hazards. To avoid these hazards, you **MUST** follow requirements for field wiring installation and grounding as described in NEC and your local/state/national electrical codes.

⚠ WARNING

Personal Protective Equipment (PPE) Required!

Failure to wear proper PPE for the job being undertaken could result in death or serious injury.

Technicians, in order to protect themselves from potential electrical, mechanical, and chemical hazards, **MUST** follow precautions in this manual and on the tags, stickers, and labels, as well as the instructions below:

- Before installing/servicing this unit, technicians **MUST** put on all PPE required for the work being undertaken (Examples; cut resistant gloves/sleeves, butyl gloves, safety glasses, hard hat/bump cap, fall protection, electrical PPE and arc flash clothing). **ALWAYS** refer to appropriate Safety Data Sheets (SDS) and OSHA guidelines for proper PPE.
- When working with or around hazardous chemicals, **ALWAYS** refer to the appropriate SDS and OSHA/GHS (Global Harmonized System of Classification and Labelling of Chemicals) guidelines for information on allowable personal exposure levels, proper respiratory protection and handling instructions.
- If there is a risk of energized electrical contact, arc, or flash, technicians **MUST** put on all PPE in accordance with OSHA, NFPA 70E, or other country-specific requirements for arc flash protection, **PRIOR** to servicing the unit. **NEVER** **PERFORM ANY SWITCHING, DISCONNECTING, OR VOLTAGE TESTING WITHOUT PROPER ELECTRICAL PPE AND ARC FLASH CLOTHING. ENSURE ELECTRICAL METERS AND EQUIPMENT ARE PROPERLY RATED FOR INTENDED VOLTAGE.**

⚠ WARNING**Follow EHS Policies!**

Failure to follow instructions below could result in death or serious injury.

- All Trane personnel must follow the company's Environmental, Health and Safety (EHS) policies when performing work such as hot work, electrical, fall protection, lockout/tagout, refrigerant handling, etc. Where local regulations are more stringent than these policies, those regulations supersede these policies.
- Non-Trane personnel should always follow local regulations.

⚠ WARNING**Cancer and Reproductive Harm!**

This product can expose you to chemicals, including lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov.

⚠ WARNING**Safety Hazard!**

Failure to follow instructions below could result in death or serious injury or property damage.

This unit is not to be used by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.

Do not allow children to play or climb on the unit or to clean or maintain the unit without supervision.

⚠ WARNING**Hazardous Voltage!**

Failure to disconnect power before servicing could result in death or serious injury.

Disconnect all electric power, including remote disconnects before servicing. Follow proper lockout/tagout procedures to ensure the power can not be inadvertently energized. Verify that no power is present with a voltmeter.

⚠ WARNING**Safety and Electrical Hazard!**

Failure to follow instructions below could result in death or serious injury or property damage.

All servicing **MUST** be performed by qualified personnel only based on the operating instructions provided.

⚠ WARNING**Grounding Required!**

Failure to follow instructions below could result in death or serious injury, or property damage.

- Reconnect all grounding devices.
- All parts of this product that are capable of conducting electrical current are grounded.
- If grounding wires, screws, straps, clips, nuts, or washers used to complete a path to ground are removed for service, they must be returned to their original position and properly fastened.

⚠ WARNING**Risk of Fire — Flammable Refrigerant!**

Failure to follow instructions below could result in death or serious injury, and equipment damage.

- To be repaired only by trained service personnel.
- Do not puncture refrigerant tubing.
- Dispose of properly in accordance with federal or local regulations.

⚠ WARNING**Safety Hazard!**

Failure to operate the unit without the access panels properly installed could result in death or serious injury.

Do not operate the unit without the evaporator fan access panel or evaporator coil access panel in place. Reinstall the access panels after performing maintenance procedures on the fan.

⚠ WARNING**Leak Detection System Installed!**

Failure to follow instructions below could result in death or serious injury or equipment damage.

The unit is equipped with electrically powered safety measures and must be powered at all times after installation, except during servicing, to detect any leak.

⚠ CAUTION

Sharp Edges!

Failure to follow instructions below could result in minor to moderate injury.

The service procedure described in this document involves working around sharp edges. To avoid being cut, technicians **MUST** put on all necessary Personal Protective Equipment (PPE), including gloves and arm guards.

⚠ CAUTION

Unit Contains R-454B Refrigerant!

Failure to use proper service tools may result in equipment damage or personal injury.

Use only R-454B refrigerant and approved compressor oil.

Copyright

This document and the information in it are the property of Trane, and may not be used or reproduced in whole or in part without written permission. Trane reserves the right to revise this publication at any time, and to make changes to its content without obligation to notify any person of such revision or change.

Trademark

All trademarks referenced in this document are the trademarks of their respective owners.

Revision History

- Updated Product specifications tables.
- Updated Starting the unit in cooling mode in Unit Start-up chapter.
- Wiring diagrams section added.

Table of Contents

Information on Servicing	6	Rooftop Installation — No Curb/Frame.	23
Prior to Beginning Work	6	Ductwork Installation	26
Repairs to Electrical Components	6	Attaching Downflow Ductwork to Roof	
Detection of Flammable Refrigerants	6	Curb	26
Removal and Evacuation	7	Attaching Downflow Ductwork to Roof	
Charging Procedures	7	Frame	26
Recovery	7	Attaching Horizontal Ductwork to	
Decommissioning.	8	Unit	26
Introduction, Unit Inspection, and		Condensate Drain Piping	26
Specification	9	Air Filter Installation	27
Introduction	9	Electrical Wiring	27
Inspect Shipment	9	Unit Start-Up	31
Product Specifications.	9	Pre-Start Quick Checklist	31
Charging in Cooling above 55°F OD		Starting the Unit in Cooling Mode	31
Ambient	13	Starting the Unit in Heating Mode	31
Dimensional Data	15	Sequence of Operation	31
Review Location and Recommendation		Final Installation Checklist	33
Information	18	Verification of Mitigation Actions	33
Horizontal Airflow Units	18	Maintenance	34
Clearances	18	Owner Maintenance	34
Down Airflow Units	18	Service Maintenance	35
Clearances	18	Fault Detection	35
Refrigerant Leak Detection System	19	Pressure Curves	38
Unit Installation	20	Indoor Fan Performance	44
Ground Level Installation	20	Wiring Diagrams	47
Rooftop Installation - Curb Mounting.	20	Refrigerant Circuit	55
Lifting and Rigging	21	Troubleshooting	56
Rooftop Installation - Frame Mounting	22	Important Product Information	57

Information on Servicing

All replacement parts shall be in accordance with the manufacturer's specifications.

Prior to Beginning Work

Prior to beginning work on systems containing flammable refrigerants, safety checks are necessary to ensure that the risk of ignition is minimized. For repair to the refrigerating system, the following shall be completed prior to conducting work on the system:

- Work shall be undertaken under a controlled procedure to minimize the risk of a flammable gas or vapor being present while the work is being performed.
- All maintenance staff and others working in the local area shall be instructed on the nature of work being carried out. Work in confined spaces shall be avoided.
- The area shall be checked with an appropriate refrigerant detector prior to and during work, to ensure the technician is aware of potentially toxic or flammable atmospheres. Ensure that the leak detection equipment being used is suitable for use with all applicable refrigerants, i.e., non-sparking, adequately sealed or intrinsically safe.
- If any hot work is to be conducted on the refrigerating equipment or any associated parts, appropriate fire extinguishing equipment shall be available to hand. Have a dry powder or CO₂ fire extinguisher adjacent to the charging area.
- No person carrying out work in relation to a refrigerating system which involves exposing any pipe work shall use any sources of ignition in such a manner that it may lead to the risk of fire or explosion. All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repairing, removing and disposal, during which refrigerant can possibly be released to the surrounding space. Prior to work taking place, the area around the equipment is to be surveyed to make sure that there are no flammable hazards or ignition risks. No Smoking signs shall be displayed.
- Ensure that the area is in the open or that it is adequately ventilated before breaking into the system or conducting any hot work. A degree of ventilation shall continue during the period that the work is carried out. The ventilation should safely disperse any released refrigerant and preferably expel it externally into the atmosphere.
- The following checks shall be applied to installations using flammable refrigerants:
 - Marking to the equipment continues to be visible and legible. Markings and signs that are illegible shall be corrected;
 - Refrigerating pipe or components are installed in a position where they are unlikely to be exposed to

any substance which may corrode refrigerant containing components, unless the components are constructed of materials which are inherently resistant to being corroded or are suitably protected against being so corroded.

Repairs to Electrical Components

Where electrical components are being changed, they shall be fit for the purpose and to the correct specification. At all times the manufacturer's maintenance and service guidelines shall be followed. If in doubt, consult the manufacturer's technical department for assistance.

Repair and maintenance to electrical components shall include initial safety checks and component inspection procedures. If a fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it is satisfactorily dealt with. If the fault cannot be corrected immediately but it is necessary to continue operation, an adequate temporary solution shall be used. This shall be reported to the owner of the equipment, so all parties are advised.

Initial safety checks shall include:

- That capacitors are discharged; this shall be done in a safe manner to avoid possibility of sparking;
- That no live electrical components and wiring are exposed while charging, recovering or purging the system;
- That there is continuity of earth bonding.

Check that cabling will not be subject to wear, corrosion, excessive pressure, vibration, sharp edges or any other adverse environmental effects. The check shall also take into account the effects of aging or continual vibration from sources such as compressors or fans.

Detection of Flammable Refrigerants

Under no circumstances shall potential sources of ignition be used in the searching for or detection of refrigerant leaks. A halide torch (or any other detector using a naked flame) shall not be used.

The following leak detection method is deemed acceptable for all refrigerant systems:

- Electronic leak detectors may be used to detect refrigerant leaks but, in the case of flammable refrigerants, the sensitivity may not be adequate, or may need re-calibration. (Detection equipment shall be calibrated in a refrigerant-free area.) Ensure that the detector is not a potential source of ignition and is suitable for the refrigerant used. Leak detection equipment shall be set at a percentage of the LFL of

the refrigerant and shall be calibrated to the refrigerant employed, and the appropriate percentage of gas (25 % maximum) is confirmed.

Important: *The following leak detection methods are deemed acceptable for all refrigerant systems: Electronic leak detectors calibrated for R-454B (with a sensitivity of 5 grams/year)*

- Leak detection fluids are also suitable for use with most refrigerants but the use of detergents containing chlorine shall be avoided as the chlorine may react with the refrigerant and corrode the copper pipe-work.

Example of leak detection fluids are:

- Bubble method,
- Fluorescent method agents

If a leak is suspected, all naked flames shall be removed/ extinguished.

If a leakage of refrigerant is found which requires brazing, all of the refrigerant shall be recovered from the system, or isolated (by means of shut-off valves) in a part of the system remote from the leak.

Removal and Evacuation

When breaking into the refrigerant circuit to make repairs - or for any other purpose - conventional procedures shall be used. However, for flammable refrigerants it is important that best practice be followed, since flammability is a consideration. The following procedure shall be adhered to:

- Safely remove refrigerant following local and national regulations;
- Evacuate;
- Purge the circuit with inert gas;
- Evacuate;
- Continuously flush or purge with inert gas when using flame to open circuit;
- And open the circuit.

The refrigerant charge shall be recovered into the correct recovery cylinders if venting is not allowed by local and national codes. For appliances containing flammable refrigerants, the system shall be purged with oxygen-free nitrogen to render the appliance safe for flammable refrigerants.

This process might need to be repeated several times. Compressed air or oxygen shall not be used for purging refrigerant systems.

For appliances containing flammable refrigerants, refrigerants purging shall be achieved by breaking the vacuum in the system with oxygen-free nitrogen and continuing to fill until the working pressure is achieved, then venting to atmosphere, and finally pulling down to a vacuum. This process shall be repeated until no refrigerant is within the system. When the final oxygen-free nitrogen charge is used, the system shall be vented down to atmospheric pressure to enable work to take place.

The outlet for the vacuum pump shall not be close to any potential ignition sources, and ventilation shall be available.

Charging Procedures

In addition to conventional charging procedures, the following requirements shall be followed.

- Ensure that contamination of different refrigerants does not occur when using charging equipment. Hoses or lines shall be as short as possible to minimise the amount of refrigerant contained in them.
- Cylinders shall be kept in an appropriate position according to the instructions.
- Ensure that the refrigerating system is earthed prior to charging the system with refrigerant.
- Label the system when charging is complete (if not already).
- Extreme care shall be taken not to overfill the refrigerating system.

Prior to recharging the system, it shall be pressure-tested with the appropriate purging gas. The system shall be leak-tested on completion of charging but prior to commissioning. A follow up leak test shall be carried out prior to leaving the site.

Important: *The unit should not be tested higher than 450 psig for servicing or component replacement.*

See installation instructions below for further details.

Recovery

When removing refrigerant from a system, either for servicing or decommissioning, it is recommended good practice that all refrigerants are removed safely.

When transferring refrigerant into cylinders, ensure that only appropriate refrigerant recovery cylinders are employed. Ensure that the correct number of cylinders for holding the total system charge is available. All cylinders to be used are designated for the recovered refrigerant and labelled for that refrigerant (i.e., special cylinders for the recovery of refrigerant). Cylinders shall be complete with pressure-relief valve and associated shut-off valves in good working order. Empty recovery cylinders are evacuated and, if possible, cooled before recovery occurs.

The recovery equipment shall be in good working order with a set of instructions concerning the equipment that is at hand and shall be suitable for the recovery of the flammable refrigerant. If in doubt, the manufacturer should be consulted. In addition, a set of calibrated weighing scales shall be available and in good working order. Hoses shall be complete with leak-free disconnect couplings and in good condition.

The recovered refrigerant shall be processed according to local legislation in the correct recovery cylinder, and the relevant waste transfer note arranged. Do not mix refrigerants in recovery units and especially not in cylinders.

If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that flammable refrigerant does not remain within the lubricant. The compressor body shall not be heated by an open flame or other ignition sources to accelerate this process. When oil is drained from a system, it shall be carried out safely.

Decommissioning

Before carrying out this procedure, it is essential that the technician is completely familiar with the equipment and all its detail. It is recommended good practice that all refrigerants are recovered safely. Prior to the task being carried out, an oil and refrigerant sample shall be taken in case analysis is required prior to re-use of recovered refrigerant. It is essential that electrical power is available before the task is commenced.

1. Become familiar with the equipment and its operation.
2. Isolate system electrically.
3. Before attempting the procedure, ensure that:
 - a. Mechanical handling equipment is available, if required, for handling refrigerant cylinders;
 - b. All personal protective equipment is available and being used correctly;
 - c. The recovery process is supervised at all times by a competent person;
 - d. Recovery equipment and cylinders conform to the

appropriate standards.

4. Pump down refrigerant system, if possible.
5. If a vacuum is not possible, make a manifold so that refrigerant can be removed from various parts of the system.
6. Make sure that cylinder is situated on the scales before recovery takes place.
7. Start the recovery machine and operate in accordance with instructions.
8. Do not overfill cylinders (no more than 80 % volume liquid charge).
9. Do not exceed the maximum working pressure of the cylinder, even temporarily.
10. When the cylinders have been filled correctly and the process completed, make sure that the cylinders and the equipment are removed from site promptly and all isolation valves on the equipment are closed off.
11. Recovered refrigerant shall not be charged into another refrigerating system unless it has been cleaned and checked.

Equipment shall be labelled stating that it has been decommissioned and emptied of refrigerant. The label shall be dated and signed. For appliances containing flammable refrigerant, ensure that there are labels on the equipment stating the equipment contains flammable refrigerant.

Introduction, Unit Inspection, and Specification

Introduction

Read this manual carefully before attempting to install, operate, or perform maintenance on this unit. Installation and maintenance should be performed by qualified service technicians only. This unit is listed by Underwriters Laboratory.

Packaged units are designed for outdoor mounting with a vertical condenser discharge. They can be located either at ground level or on a roof in accordance with local codes. Each unit contains an operating charge of refrigerant as shipped.

Extreme mounting kits are available for slab (BAYEXMK003), utility curb (BAYEXMK002) and perimeter curb (BAYEXMK001) mountings.

2. Check the unit's nameplate to determine if the unit is correct for the intended application. The power supply must be adequate for both the unit and all accessories.
3. Check to be sure the refrigerant charge has been retained during shipment. Remove the Compressor access panel to access the 1/4-inch flare pressure taps.
4. If this unit is being installed on a curb, verify that the correct curb is provided with the unit.
 - 5WCZ5024–036 use model BAYCURB050,
 - 5WCZ5042–060 use model BAYCURB051
5. If the unit is being hoisted, accessory kit BAYLIFT002 is recommended. It includes a kit of four (4) lifting lugs and instructions.

Notes:

- *If practical, install any internal accessories to the unit at the shop.*
- *The packaged units have been evaluated in accordance with the Code of Federal Regulations, Chapter XX, Part 3280 or the equivalent. "Suitable for mobile home use."*

Inspect Shipment

1. Check for damage after the unit is unloaded. Report promptly to the carrier any damage found to the unit. Do not drop the unit.

Important: To prevent damage to the sides and top of the unit when hoisting, use "spreader bars" see, "Rooftop Installation — No Curb/Frame," p. 23.

Product Specifications

Table 1. Models – 5WCZ5024*1, 5WCZ5030*1, 5WCZ5036*1, 5WCZ5042*1, 5WCZ45048*1, and 5WCZ5060 *1

Model	5WCZ5024*1	5WCZ5030*1	5WCZ5036*1	5WCZ5042*1	5WCZ5048*1	5WCZ5060*1
Rated Volts/Ph/Hz	208–230/1/60	208–230*1/1/60	208–230/1/60	208–230/1/60	208–230/1/60	208–230/1/60
Performance Cooling^(a)						
BTUH (High)	23400	29600	35200	42000	46000	58000
Indoor Airflow (CFM) (High)	810	880	1100	1410	1600	1780
Power Input (kW)	1.94	2.64	3.12	3.55	4.09	5.06
BTUH (Low)	19200	24000	27800	34400	36600	46000
Indoor Airflow (CFM) (Low)	630	710	830	1090	1280	1290
Power Input (kW)	1.08	1.52	1.77	2.01	2.28	2.83
EER2 / SEER2 BTU/ Watt-Hr(b)	11.5/15.2	11.2/15.2	11.5/15.2	11.5/15.2	11.5/15.2	11.5/15.2
Sound Power Rating [dB (A)](c)	66.8	67.3	70	72	72	80
Performance Heating						
(High Temp.) BTUH/COP (High)	22200/3.57	28800/3.47	33000/3.38	39000/3.76	42000/3.59	56000/3.26
Power Input (kW)	1.82	2.43	2.86	3.04	3.43	5.03
(Low Temp.) BTUH/COP (High)	13800/2.48	18600/2.51	21800/2.48	25600/2.75	28000/2.6	37800/2.47
Power Input (kW)	1.63	2.17	2.58	2.73	3.16	4.49

Introduction, Unit Inspection, and Specification

Table 1. Models – 5WCZ5024*1, 5WCZ5030*1, 5WCZ5036*1, 5WCZ5042*1, 5WCZ45048*1, and 5WCZ5060 *1 (continued)

Model	5WCZ5024*1	5WCZ5030*1	5WCZ5036*1	5WCZ5042*1	5WCZ5048*1	5WCZ5060*1
(High Temp.) BTUH/COP (Low)	16000/3.52	20800/3.46	23600/3.32	28600/3.84	31400/3.85	40000/3.26
Power Input (kW)	1.33	1.76	2.08	2.18	2.39	3.59
(Low Temp.) BTUH/COP (Low)	8600/2	12200/2.13	14000/2.09	16600/2.34	17200/2.2	24000/2.07
Power Input (kW)	1.26	1.68	1.96	2.08	2.29	3.4
HSPF2 (BTUH/Watt-Hr)	7.2	7.2	7.7	7.2	8.1	7.2
Power Conn. — V/Ph/Hz	208–230/1/60	208–230/1/60	208–230/1/60	208–230/1/60	208–230/1/60	208–230/1/60
Min. Brch. Cir. Ampacity (b)	18	23	23	30	31	40
Fuse Size — Max. (amps)	25	35	35	45	45	60
Fuse Size — Recmd. (amps)	25	35	35	45	45	60
Compressor	2 Stage Scroll	2 Stage Scroll	2 Stage Scroll	2 Stage Scroll	2 Stage Scroll	2 Stage Scroll
Volts/Ph/Hz	208–230/1/60	208–230/1/60	208–230/1/60	208–230/1/60	208–230/1/60	208–230/3/60
R.L. Amps — L.R. Amps	10.3/62.0	14.6/82.0	14.69/90.0	18.2 / 106.0	18.3 / 138.0	25.2 / 147.3
Outdoor Coil — Type	Spine Fin	Spine Fin	Spine Fin	Spine Fin	Spine Fin	Spine Fin
Rows/F.P.I	2 / 24	2 / 24	2 / 24	2 / 24	2 / 24	2 / 24
Face Area (sq. ft.)	15.49	15.49	15.49	23.57	23.57	23.57
Tube Size (in.)	3/8	3/8	3/8	3/8	3/8	3/8
Refrigerant Control	Expansion Valve	Expansion Valve	Expansion Valve	Expansion Valve	Expansion Valve	Expansion Valve
Indoor Coil — Type	Plate Fin	Plate Fin	Plate Fin	Plate Fin	Plate Fin	Plate Fin
Rows/F.P.I	4/15	4/15	4 / 15	4 / 15	4 / 15	4 / 15
Face Area (Sq. Ft.)	3.5	3.5	3.54	5	5	5
Tube Size (in.)	3/8	3/8	3/8	3/8	3/8	3/8
Refrigeration Control	Expansion Valve	Expansion Valve	Expansion Valve	Expansion Valve	Expansion Valve	Expansion Valve
Drain Conn. Size (in.)	3/4 Female NPT	3/4 Female NPT	3/4 Female NPT	3/4 Female NPT	3/4 Female NPT	3/4 Female NPT
Outdoor Fan — Type	Propeller	Propeller	Propeller	Propeller	Propeller	Propeller
Dia. (in.)	23.4	23.4	23.4	28.0	28.0	28.3
Drive/No. Speeds	Direct/ 1	Direct/ 1	Direct/ 1	Direct/ 1	Direct/ 1	Direct/ 1
CFM @ 0.0 in. W.G.(c)	2550	2550	3020	4200	4200	5500
Motor— HP/R.P.M	1/12 /810	1/12 /810	1/6 / 830	1/6 / 830	1/6 / 830	1/3 / 825
Volts/Ph/Hz	208-230/1/60	208-230/1/60	208-230/1/60	208-230/1/60	208-230/1/60	208-230/1/60
F.L. Amps/L.R Amps	0.54 / 0.82	0.54 / 0.82	0.85 / 1.95	0.85 / 1.95	0.85 / 1.95	1.7 / 3.8
Indoor Fan — Type	Centrifugal	Centrifugal	Centrifugal	Centrifugal	Centrifugal	Centrifugal
Dia. x Width (in.)	10 X 10	10 X 10	10 X 10	11 X 10	10 X 10	11 X 10
Drive/No. Speeds	Direct / Variable	Direct / Variable	Direct / Variable	Direct / Variable	Direct / Variable	Direct / Variable
CFM @ 0.0 in. w.g.(d)	See fan performance table	See fan performance table	See fan performance table	See fan performance table	See fan performance table	See fan performance table
Motor—HP/R.P.M.	1/2/Variable	1/2/Variable	1/2/Variable	3/4 / Variable	3/4 / Variable	1/Variable
Volts/Ph/Hz	208–240/1/60	208–240/1/60	208–230/1/60	208–230/1/60	208–230/1/60	208–230/1/60
F.L. Amps/L.R Amps	4.3 / 4.3	4.3 / 4.3	4.3 / 4.3	6.8 / 6.8	6.8 / 6.8	6.9 / 6.9
Filter/ Furnished	No	No	No	No	No	No

Table 1. Models – 5WCZ5024*1, 5WCZ5030*1, 5WCZ5036*1, 5WCZ5042*1, 5WCZ45048*1, and 5WCZ5060 *1 (continued)

Model	5WCZ5024*1	5WCZ5030*1	5WCZ5036*1	5WCZ5042*1	5WCZ5048*1	5WCZ5060*1
Type Recommended	Throwaway	Throwaway	Throwaway	Throwaway	Throwaway	Throwaway
Recmd. Face Area (sq. ft) ^(e)	4.0	4.0	4.0	5.3	5.3	5.3
Refrigerant	R-454B	R-454B	R-454B	R-454B	R-454B	R-454B
Charge (lbs.)	7.1	6.8	7.1	7.5	7.2	9.1
Subcooling	9° F	8° F	12° F	11° F	11° F	10° F
Dimensions	H x W x L					
Crated (in.)	48 x 45 x 52	48 x 45 x 52	48 x 45 x 52	52 x 47 x 62	52 x 47 x 62	52 x 47 x 62
Weight						
Shipping (lbs.) / Net (lbs.)	445 / 375	448 / 378	472 / 376	586 / 458	613 / 485	627 / 499

(a) Rated in accordance with AHRI 210/240-2023.

(b) Calculated in accordance with currently prevailing Nat'l Electrical Code.

(c) Standard Air — Dry Coil — Outdoor.

(d) Standard Air — Dry Coil — Indoor.

(e) Filters must be installed in return air stream. Square footages listed are based on 300 f.p.m. face velocity. If permanent filters are used size per manufacturer's recommendation with a clean resistance of 0.05-in. W.C.

Table 2. Models – 5WCZ5036*3, 5WCZ5048*3, 5WCZ5060*3, 5WCZ5036*4, 5WCZ5048*4, and 5WCZ5060*4

Model	5WCZ5036*3	5WCZ5048*3	5WCZ5060*3	5WCZ5036*4	5WCZ5048*4	5WCZ5060*4
Rated Volts/Ph/Hz	208–230/3/60	208–230/3/60	208–230/3/60	460 / 3 / 60	460 / 3 / 60	460 / 3 / 60
Performance Cooling^(a)						
BTUH (High)	35000	46000	58000	35000	46000	58000
Indoor Airflow (CFM) (High)	1100	1600	1780	1100	1600	1780
Power Input (kW)	3.12	4.09	5.06	3.12	4.09	5.06
BTUH (Low)	27800	36600	46000	27800	36600	46000
Indoor Airflow (CFM) (Low)	830	1280	1290	830	1280	1290
Power Input (kW)	1.77	2.28	2.83	1.77	2.28	2.83
EER2 / SEER2 BTU/Watt-Hr ^(b)	11.5/15.2	11.5/15.2	11.5/15.2	11.5/15.2	11.5/15.2	11.5/15.2
Sound Power Rating [dB (A)] ^(c)	70	72	80	72	74	77
Performance Heating						
(High Temp.) BTUH/COP (High)	33000/3.38	42000/3.59	56000/3.26	33000/3.38	42000/3.59	56000/3.26
Power Input (kW)	2.86	3.43	5.03	2.86	3.43	5.03
(Low Temp.) BTUH/COP (High)	21800/2.48	28000/2.6	37800/2.47	21800/2.48	28000/2.6	37800/2.47
Power Input (kW)	2.58	3.16	4.49	2.58	3.16	4.49
(High Temp.) BTUH/COP (Low)	23600/3.32	31400/3.85	40000/3.26	23600/3.32	31400/3.85	40000/3.26
Power Input (kW)	2.08	2.39	3.59	2.08	2.39	3.59
(Low Temp.) BTUH/COP (Low)	14000/2.09	17200/2.2	24000/2.07	14000/2.09	17200/2.2	24000/2.07
Power Input (kW)	1.96	2.29	3.4	1.96	2.29	3.4
HSPF2 (BTUH/Watt-Hr)	7.7	8.1	7.2	7.7	8.1	7.2
Power Conn. — V/Ph/Hz	208–230/3/60	208–230/3/60	208–230/3/60	460/3/60	460/3/60	460/3/60

Introduction, Unit Inspection, and Specification

Table 2. Models – 5WCZ5036*3, 5WCZ5048*3, 5WCZ5060*3, 5WCZ5036*4, 5WCZ5048*4, and 5WCZ5060*4 (continued)

Model	5WCZ5036*3	5WCZ5048*3	5WCZ5060*3	5WCZ5036*4	5WCZ5048*4	5WCZ5060*4
Min. Brch. Cir. Ampacity (d)	20	23	27	12	16	17
Fuse Size — Max. (amps)	30	30	40	15	20	20
Fuse Size — Recmd. (amps)	30	30	40	15	20	20
Compressor	2 Stage Scroll	2 Stage Scroll	2 Stage Scroll	2 Stage Scroll	2 Stage Scroll	2 Stage Scroll
Volts/Ph/Hz	208–230/3/60	208–230/3/60	208–230/3/60	460/3/60	460/3/60	460/3/60
R.L. Amps — L.R. Amps	9.9 / 82.0	11.9 / 112	13.8 / 150	4.8 / 44.3	6.8 / 61.8	6.9 / 58
Outdoor Coil — Type	Spine Fin	Spine Fin	Spine Fin	Spine Fin	Spine Fin	Spine Fin
Rows/F.P.I	2 / 24	2 / 24	2 / 24	2 / 24	2 / 24	2 / 24
Face Area (sq. ft.)	15.49	23.57	23.57	15.49	23.57	23.57
Tube Size (in.)	3/8	3/8	3/8	3/8	3/8	3/8
Refrigerant Control	Expansion Valve	Expansion Valve	Expansion Valve	Expansion Valve	Expansion Valve	Expansion Valve
Indoor Coil — Type	Plate Fin	Plate Fin	Plate Fin	Plate Fin	Plate Fin	Plate Fin
Rows/F.P.I	4 / 15	4 / 15	4 / 15	4 / 15	4 / 15	4 / 15
Face Area (sq. ft.)	3.54	5	5	3.54	5	5
Tube Size (in.)	3/8	3/8	3/8	3/8	3/8	3/8
Refrigeration Control	Expansion Valve	Expansion Valve	Expansion Valve	Expansion Valve	Expansion Valve	Expansion Valve
Drain Conn. Size (in.)	3/4 Female NPT	3/4 Female NPT	3/4 Female NPT	3/4 Female NPT	3/4 Female NPT	3/4 Female NPT
Outdoor Fan — Type	Propeller	Propeller	Propeller	Propeller	Propeller	Propeller
Dia. (in.)	23.4	28.0	28.3	23.36	28	28.3
Drive/No. Speeds	Direct/ 1	Direct/ 1	Direct/ 1	Direct/ 1	Direct/ 1	Direct/ 1
CFM @ 0.0 in. w.g. ^(e)	3020	4200	5500	3020	4200	5500
Motor— HP/R.P.M	1/6 / 830	1/6 / 830	1/3 / 825	1/3 / 825	1/3 / 825	1/3 / 825
Volts/Ph/Hz	208-230/1/60	208-230/1/60	208-230/1/60	460/3/60	460/3/60	460/3/60
F.L. Amps/L.R Amps	0.85 / 1.95	0.85 / 1.95	1.7 / 3.8	0.46 / 1.95	0.46 / 1.95	0.97 / 3.8
Indoor Fan — Type	Centrifugal	Centrifugal	Centrifugal	Centrifugal	Centrifugal	Centrifugal
Dia. x Width (in.)	10 x 10	10 x 10	11 x 10	10 x 10	10 x 10	11 x 10
Drive/No. Speeds	Direct / Variable	Direct / Variable	Direct / Variable	Direct / Variable	Direct / Variable	Direct / Variable
CFM @ 0.0 in. w.g. ^(f)	See fan performance table	See fan performance table	See fan performance table	See fan performance table	See fan performance table	See fan performance table
Motor—HP/R.P.M.	1/2/Variable	3/4 /Variable	1/Variable	1/2/Variable	3/4 /Variable	1/Variable
Volts/Ph/Hz	208-230/1/60	208-230/1/60	208-230/1/60	208-230/1/60	208-230/1/60	208-230/1/60
F.L. Amps/L.R Amps	4.3 / 4.3	6.8 / 6.8	6.9 / 6.9	4.3 / 4.3	6.8 / 6.8	6.9 / 6.9
Filter/ Furnished	No	No	No	No	No	No
Type Recommended	Throwaway	Throwaway	Throwaway	Throwaway	Throwaway	Throwaway
Recmd. Face Area (sq. ft.) ^(g)	4.0	5.3	5.3	4.0	5.3	5.3
Refrigerant	R-454B	R-454B	R-454B	R-454B	R-454B	R-454B
Charge (lbs.)	7.1	7.2	9.1	7.1	7.2	9.1
Subcooling	12° F	11° F	10° F	12° F	11° F	10° F
Dimensions	H x W x L					
Crated (in.)	48 x 45 x 52	52 x 47 x 62	52 x 47 x 62	48 x 45 x 52	52 x 47 x 62	52 x 47 x 62

Table 2. Models – 5WCZ5036*3, 5WCZ5048*3, 5WCZ5060*3, 5WCZ5036*4, 5WCZ5048*4, and 5WCZ5060*4 (continued)

Model	5WCZ5036*3	5WCZ5048*3	5WCZ5060*3	5WCZ5036*4	5WCZ5048*4	5WCZ5060*4
Weight						
Shipping (lbs.) / Net (lbs.)	469 / 373	609 / 481	623 / 495	481 / 385	630 / 502	644 / 516

(a) Rated in accordance with AHRI 210/240-2023.

(b) Rated in accordance with D.O.E. test procedure.

(c) Sound Power values are not adjusted for AHRI 270–95 tonal corrections.

(d) Calculated in accordance with currently prevailing Nat'l Electrical Code.

(e) Standard Air — Dry Coil — Outdoor.

(f) Standard Air — Dry Coil — Indoor.

(g) Filters must be installed in return air stream. Square footages listed are based on 300 f.p.m. face velocity. If permanent filters are used size per manufacturer's recommendation with a clean resistance of 0.05-in. W.C.

Charging in Cooling above 55°F OD Ambient

If servicing the equipment requires system evacuation, then re-charge the system to the weight specified on the nameplate. Verify the system subcooling using the Subcooling Charging Table and, if necessary, adjust the charge using the procedure below.

- For best results — the indoor temperature should be kept between 70°F to 80°F. Add system heat if needed.
- Whenever charge is removed or added, the system must be operated for a minimum of 20 minutes to stabilize before accurate measurements can be made.
- Measure Liquid Line Temperature and Refrigerant Pressure at service valved in the compressor compartment.
- Locate your liquid line temperature in the left column of the table, and the intersecting liquid line pressure under

the subcool value column, Add refrigerant to raise the pressure to match the table, or remove refrigerant to lower the pressure. Again, wait 20 minutes for the system conditions to stabilize before adjusting charge again.

Note: System charge shall never be more than 110% or less than 90% of nameplate charge. If specified subcooling cannot be achieved within those charge bounds, contact your Field Service Representative.

- When system is correctly charged, you can refer to System Pressure Curves to verify typical performance.

Charging Below 55°F

Evacuate system and weigh in nameplate charge or use factory charge. Correct subcooling may be verified when the temperature is above 55°F.

Table 3. R-454B refrigerant charging chart

Liquid Temp (°F)	Design Subcooling (°F)								
	6	7	8	9	10	11	12	13	14
	Liquid Gage Pressure (PSI)								
55	164	167	170	172	175	178	181	184	187
60	178	181	184	187	190	194	197	200	203
65	193	197	200	203	206	210	213	217	220
70	210	213	217	220	223	227	230	234	238
75	227	230	234	238	241	245	249	252	256
80	245	249	252	256	260	264	268	272	276
85	264	268	272	276	280	284	288	292	297
90	284	288	292	297	301	305	309	314	318
95	305	309	314	318	323	327	332	336	341
100	327	332	336	341	346	351	355	360	356
105	351	355	360	365	370	375	380	385	390
110	375	380	385	390	396	401	406	412	417
115	401	406	412	417	422	428	433	439	445
120	428	433	439	445	450	456	462	468	474
125	456	462	468	474	480	486	492	498	504

Charging Below 55°F OD Ambient in Heating Only

- The Subcool Charging Method in cooling is NOT recommended below 55°F outdoor ambient.
- The only recommended method of charging at outdoor ambients below 55°F, is to weigh in the charge in the heating mode.
- Use Nameplate charge.

4. Check liquid line temperature and pressure (at the OD valves) to obtain a minimum of the subcooling shown in the subcooling table.
5. Add charge if the minimum subcooling as shown in the table is not obtained with the nameplate charge.
6. It is important to return in the spring or summer to accurately charge the system in the cooling mode at outdoor ambients above 55°F.

WARNING


Refrigerant under High Pressure!

Failure to follow instructions below could result in an explosion which could result in death or serious injury or equipment damage.

System contains oil and refrigerant under high pressure. Recover refrigerant to relieve pressure before opening the system. See unit nameplate for refrigerant type. Do not use non-approved refrigerants, refrigerant substitutes, or refrigerant additives.

Dimensional Data

Figure 1. Space on sides requirements

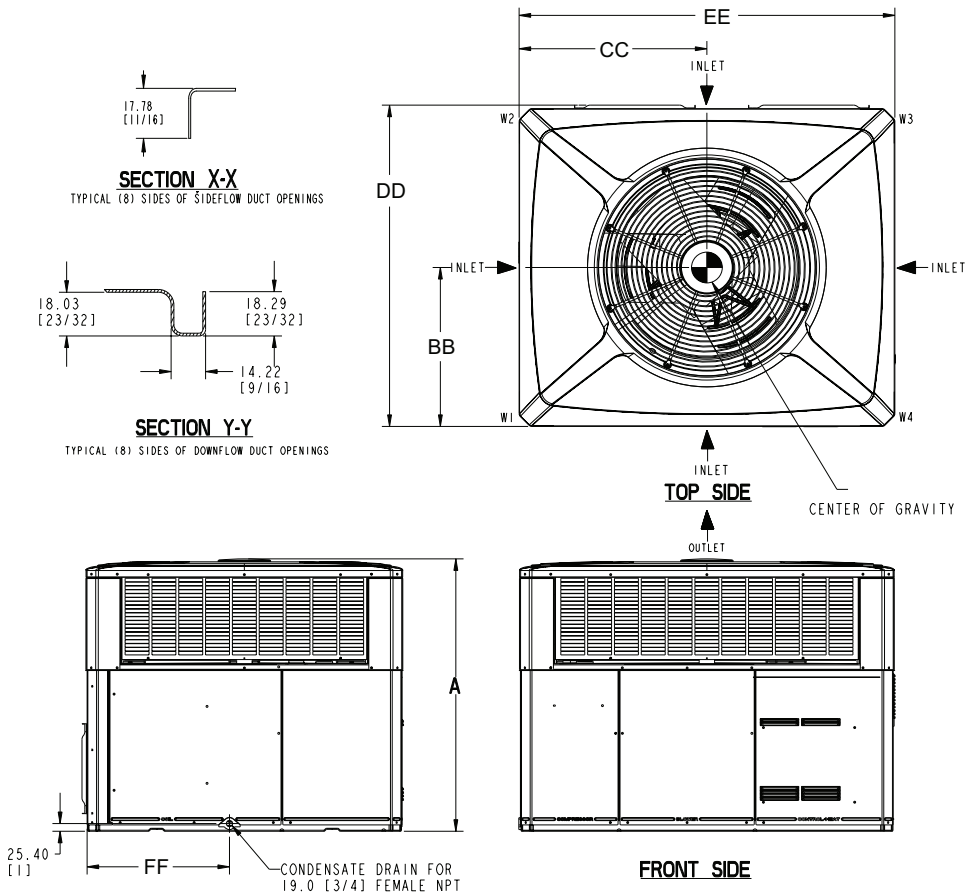

	2 - 3 TON Units		3.5 - 5 TON Units	
	RECOMMENDED SERVICE CLEARANCE mm [Inches]			
	W/ ECONOMIZER		W/ ECONOMIZER	
BACK SIDE	305 [12]	762 [30]	305 [12]	762 [30]
LEFT SIDE	762 [30]	914 [36]	914 [36]	1067 [42]
RIGHT SIDE	610 [24]	-	610 [24]	-
FRONT SIDE	1067 [42]	-	762 [30]	-
	CLEARANCE TO COMBUSTIBLE MATERIAL mm [Inches]			
BOTTOM	0		0	
BACK SIDE	25 [1]		25 [1]	
LEFT SIDE	152 [6]		152 [6]	
RIGHT SIDE	152 [6]		152 [6]	
FRONT SIDE	305 [12]		305 [12]	
TOP	914 [36]		914 [36]	
	DIMENSIONS mm [Inches]			
A	HEIGHT OF UNIT - See Notes			
BB	CENTER OF GRAVITY - See Notes			
CC	CENTER OF GRAVITY - See Notes			
DD -Depth	1093.72 [43-1/16]*		1173.99 [46-1/4]*	
EE -Width	1284.99 [50-5/8]*		1535.94 [60-1/2]*	
FF	497.8 [19-5/8]		576.00 [22-11/16]	

* Subtract 50.8 [2] for 3 phase models due to metal louvers.

* Subtract 50.8 [2] for 3 phase models due to metal louvers.

Notes:

- The Bottom Side view represents looking up from under the unit.
- For dimension A unit height, see [Table 4, p. 16](#).
- For center of gravity dimensions BB and CC, see [Table 5, p. 17](#).

Figure 2. Bottom and back duct openings

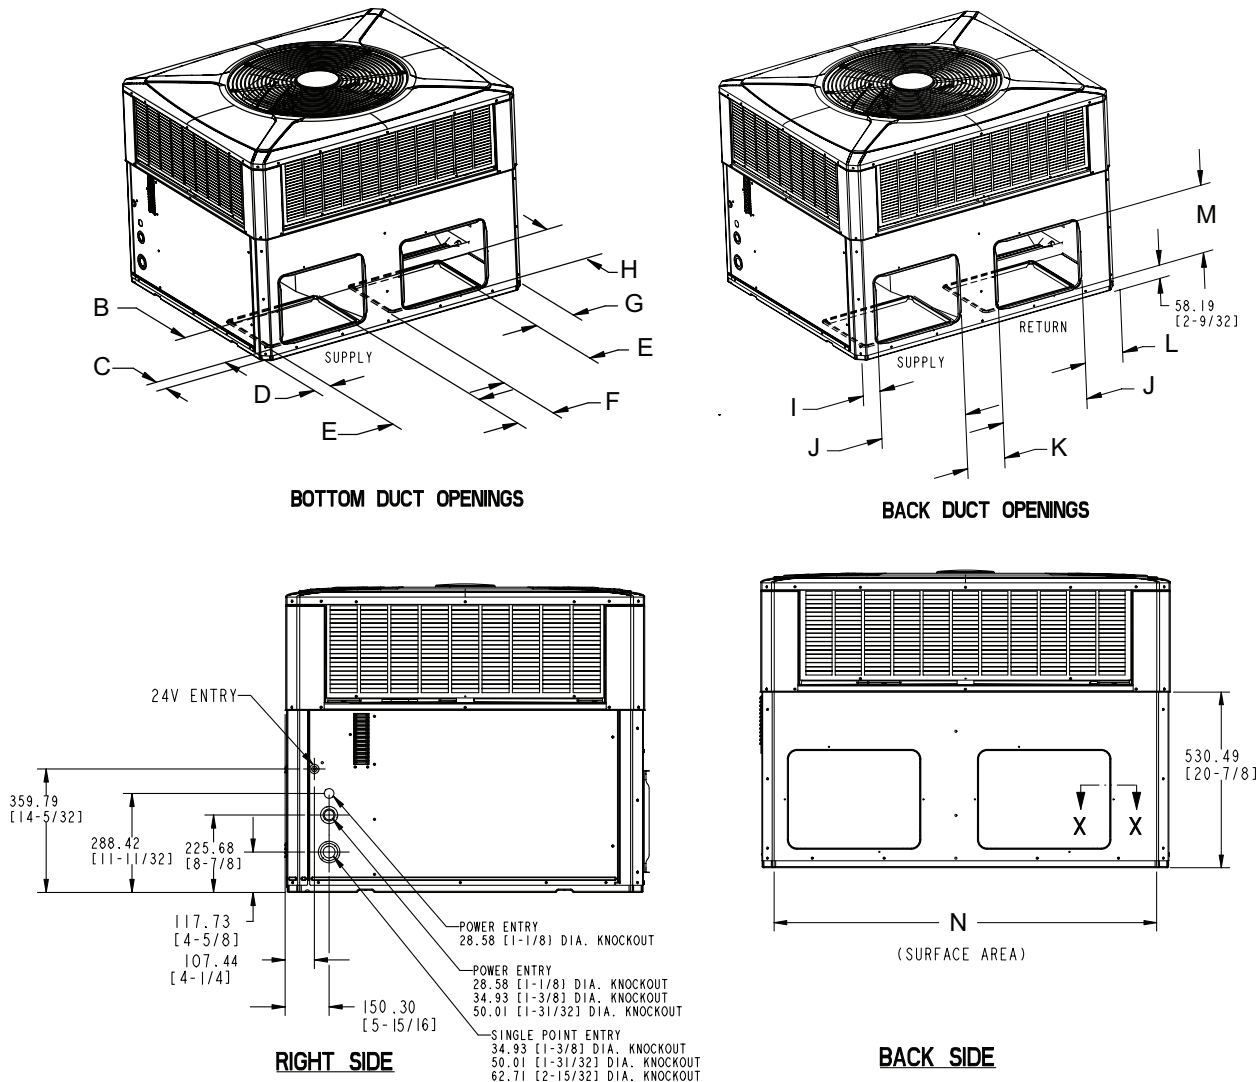


Table 4. Dimensions (mm [inch])

Model	Height-A	B	C	D	E	F	G	H	I	J	K	L	M	N
5WCZ4024	949.33 [37-3/8]	304.80 [12.0]	92.33 [3.63]	66.51 [2.62]	406.40 [16.0]	167.89 [6.61]	173.46 [6.83]	304.80 [12]	48.35 (1.90)	398.22 [15.68]	176.07 [6.93]	177.68 [6.95]	296.62 [11.67]	1155.45 [45.49]
5WCZ4030														
5WCZ4036														
5WCZ4042	1050.93 (41.37)	457.20 [1.08]	75.41 [2.96]	75.41 [2.96]	381.00 [15.0]	244.09 [9.61]	318.75 [12.56]	381.00 [15.0]	86.25 [3.39]	449.02 [17.67]	176.07 [6.93]	329.58 [12.97]	372.82 [14.67]	1351.95 [53.22]
5WCZ4048					457.20 [18.0]									
5WCZ4060														

Table 5. Weights and centre of gravity

Model	Corner Weights KG[LBS]				Shipping Weight KG [LBS]	Unit Weight KG[LBS]	Center of Gravity mm[inch]	
	W1	W2	W3	W4			BB	CC
5WCZ5024	62.2 [137]	38.1 [84]	27.2 [60]	42.6 [94]	201.8 [445]	170.1 [375]	401.3 [15.8]	508 [20]
5WCZ5030	63.6 [140]	38.1 [84]	27.2 [60]	42.6 [94]	203.2 [448]	171.5 [378]	401.3 [15.8]	508 [20]
5WCZ5036*1	62.7 [138]	38.1 [84]	27.2 [60]	42.6 [94]	214.1 [472]	170.6 [376]	401.3 [15.8]	508 [20]
5WCZ5042	83.9 [185]	40.8 [90]	30.8 [68]	52.2 [115]	265.8 [586]	207.7 [458]	414.0 [16.3]	635 [25]
5WCZ5048*1	96.2 [212]	40.8 [90]	30.8 [68]	52.2 [115]	278.1 [613]	220.0 [485]	414.0 [16.3]	635 [25]
5WCZ5060*1	82.1 [181]	47.6 [105]	35.8 [79]	60.8 [134]	284.4 [627]	226.3 [499]	414.0 [16.3]	635 [25]
5WCZ5036*3	61.2 [135]	38.1 [84]	27.2 [60]	42.6 [94]	212.6 [469]	169.1 [373]	401.3 [15.8]	508 [20]
5WCZ5048*3	94.4 [208]	40.8 [90]	30.8 [68]	52.2 [115]	276.3 [609]	218.2 [481]	414.0 [16.3]	635 [25]
5WCZ5060*3	80.4 [177]	47.6 [105]	35.8 [79]	60.8 [134]	282.7 [623]	224.6 [495]	414.0 [16.3]	635 [25]
5WCZ5036*4	66.6 [147]	38.1 [84]	27.2 [60]	42.6 [94]	218.1 [481]	174.5 [385]	401.3 [15.8]	508 [20]
5WCZ5048*4	104.0 [229]	40.8 [90]	30.8 [68]	52.2 [115]	285.8 [630]	227.8 [502]	414.0 [16.3]	635 [25]
5WCZ5060*4	89.9 [198]	47.6 [105]	35.8 [79]	60.8 [134]	292.2 [644]	234.1 [516]	414.0 [16.3]	635 [25]

Review Location and Recommendation Information

Note: *There is no declared maximum altitude for operating the appliance.*

Horizontal Airflow Units

1. Location of the unit must allow service clearance around it to ensure adequate serviceability, maximum capacity, and peak operating efficiency.
2. These units are designed for outdoor installation. They may be installed directly on a slab, wood flooring, or on Class A, B, or C roof covering material. The discharge air from the condenser fans must be unrestricted for a minimum of 3 feet above the unit.
3. Exhaust vents or other sources of contaminated air should not be near the unit's air inlet if outside air is to be introduced as make-up air or a ventilation feature is to be used. Contamination from exhaust vents or chimneys may also foul the condenser causing degraded performance.
4. Check the handling facilities to ensure the safety of personnel and the unit(s).
5. The unit must be mounted level for proper drainage of water through the drain holes in the base pan.
6. The unit should not be exposed to direct roof water runoff.
7. Flexible duct connectors must be of a flame retardant material. All ductwork outside of the structure must be insulated and weatherproofed in accordance with local codes.
8. Holes through exterior walls or roof must be sealed in accordance with local codes.
9. All fabricated outdoor ducts should be as short as possible.

Clearances

1. The recommended clearances for single-unit installations are illustrated in ["Dimensional Data," p. 15](#).
2. Any reduction of the unit clearances indicated in these figures may result in condenser coil starvation or the recirculation of warm condenser air. Actual clearances, which appear to be inadequate should be reviewed with a local engineer.
3. See the unit's nameplate for the absolute minimum clearance between the unit and any combustible surfaces.

Down Airflow Units

1. Location of the unit must allow service clearance around it to ensure adequate serviceability, maximum capacity, and peak operating efficiency.

2. Refer to the Installation section for instruction on converting the supply and return airflow covers to down airflow.
3. The field assembled Roof Mounting Curb (BAYCURB050 or BAYCURB051) or a field fabricated curb should be in place before the unit is hoisted to the roof top.
The Roof Mounting Curb (frame) must be installed on a flat, level section of the roof (maximum of 1/4-inch per foot pitch) and provide a level mounting surface for the unit. Also, be sure to provide sufficient height above the roof to prevent water from entering the unit.
4. Be sure the mounting curb spans structural members (trusses) of the roof, thereby providing sufficient support for the weight of the unit, the curb, the duct(s), and any factory or field installed accessories.
5. The unit must be mounted level for proper drainage of water through the drain holes in the base pan.
6. Be sure the hole in the structure for the ducts is large enough to accommodate the fabricated ducts and the insulation surrounding them. Flexible duct connectors must be of a flame retardant material. All ductwork outside of the structure must be insulated and weatherproofed in accordance with local codes.
7. Holes through exterior walls or roof must be sealed in accordance with local codes.
8. These units are design certified for outdoor installation. They may be installed directly on a slab, wood flooring, or on Class A, B, or C roof covering material. The discharge air from the condenser fans must be unrestricted for a minimum of 3 feet above the unit.
9. Exhaust vents or other sources of contaminated air should not be near the unit's air inlet if outside air is to be introduced as make-up air or a ventilation feature is to be used. Contamination from exhaust vents or chimneys may also foul the condenser causing degraded performance.
10. Check the handling facilities to ensure the safety of personnel and the unit(s).

Clearances

1. The recommended clearances for single-unit installations are illustrated in ["Dimensional Data," p. 15](#).
2. Any reduction of the unit clearances indicated in these figures may result in condenser coil starvation or the recirculation of warm condenser air. Actual clearances, which appear to be inadequate should be reviewed with a local engineer.
3. See the unit's nameplate for the absolute minimum clearance between the unit and any combustible surfaces.

Refrigerant Leak Detection System

For all tables contained in this section of the manual, the refrigerant charge is the total system charge which is marked on the unit nameplate.

⚠ WARNING

Risk of Fire — Flammable Refrigerant!

Failure to follow instructions below could result in death or serious injury, and equipment damage.

- To be repaired only by trained service personnel.
- Do not puncture refrigerant tubing.
- Dispose of properly in accordance with federal or local regulations.

⚠ WARNING

Leak Detection System Installed!

Failure to follow instructions below could result in death or serious injury or equipment damage.

The unit is equipped with electrically powered safety measures and must be powered at all times after installation, except during servicing, to detect any leak.

To ensure safety of the building occupants, the packaged unit is equipped with a refrigerant leak detection system.

The system is comprised of a refrigerant sensor and a mitigation control board. The system automatically detects leaks in the indoor coil and initiates actions to mitigate the risk of ignition of the leaked refrigerant, including:

- Turning on the blower of the indoor unit to dilute leaked refrigerant;
- Fully opening any zoning dampers, when applicable;
- Turning off the compressor of the outdoor unit;
- De-energizing potential sources of ignition connected to the system;
- Energizing an audible alarm, if so equipped. Examples of potential ignition sources that are de-energized include electrostatic air cleaners.

Minimum Conditioned Space

The installer must verify that the total space conditioned by the system is large enough to safely dilute any leaked refrigerant in the event of a refrigerant leak of the indoor coil.

The minimum space conditioned by the appliance shall be according to [Table 6, p. 19](#). The conditioned space includes any parts of the space connected via an air duct system. The altitude of installation is the altitude above sea level of the site where the equipment is installed.

Table 6. Minimum space conditioned by the appliance

	Altitude (ft)								
	Sea Level — 2,000	2,001 — 4,000	4,001 — 6,000	6,001 — 8,000	8,001 — 10,000	10,001 — 12,000	12,001 — 14,000	14,001 — 15,000	Above 15,000
Charge (lb)	Minimum Conditioned Space (ft ²)								
4	63	66	70	74	79	85	91	94	98
5	79	83	88	93	99	106	113	118	122
6	95	100	105	112	119	127	136	141	147
7	110	116	123	130	138	148	159	165	171
8	126	133	140	149	158	169	181	188	196
9	142	149	158	167	178	190	204	212	220
10	158	166	175	186	198	211	227	235	245
11	173	183	193	205	218	232	249	259	269
12	189	199	211	223	237	254	272	282	294
13	205	216	228	242	257	275	295	306	318
14	221	232	246	260	277	296	318	330	343
15	236	249	263	279	297	317	340	353	367

Unit Installation

Note: The factory ships this unit for horizontal installation.

Ground Level Installation

1. Place the unit on a pad the size of the unit or larger. The unit must be mounted level for proper drainage of water through the holes in the base pan. To attach the unit securely to the slab, use extreme mounting kit, BAYEXMK003.

Note: Usage of the extreme mounting kit accessories is a recommendation, not a requirement.

The pad must not come in contact with the structure. Be sure the outdoor portion of the supply and return air ducts are as short as possible.

Note: As indicated in [Figure 5, p. 22](#), vibration support is a recommendation, not a requirement.

2. Location of the unit must allow service clearance around it. Clearance of the unit must be given careful consideration. See ["Dimensional Data," p. 15](#).

Note: Any reduction of the unit clearances indicated in these illustrations may result in condenser coil starvation or the recirculation of warm condenser air. Actual clearances, which appear to be inadequate should be reviewed with a local engineer.

Important: A minimum 0-inch clearance to combustible material shall be maintained on air outlet duct.

Important: 1-inch clearance to combustible material for first three feet of air outlet duct length is required for 5WCZ5060A4 460V unit when an electrical heater is installed, see unit nameplate for details. For the other units, a minimum 0-inch clearance to combustible material shall be maintained on air outlet duct.

3. Attach the supply and return air ducts to the unit as explained in the ductwork Installation section.

4. Flexible duct connectors must be of a flame retardant material. Insulate any ductwork outside of the structure with at least two (2) inches of insulation and weatherproof. There must be a weatherproof seal where the duct enters the structure.
5. Do not expose the unit to direct roof water runoff.
6. Seal all holes through exterior walls in accordance with local codes.
7. Continue with the following installation sections to complete the installation: Ductwork, Filter and Electrical Wiring.

Rooftop Installation - Curb Mounting

Convert Horizontal Airflow to Down Airflow

The factory ships the unit for horizontal airflow. Perform this procedure to convert it to down airflow:

1. Remove the three (3) sheet metal screws securing the supply air cover and the four (4) sheet metal screws securing the return air cover from the base of the unit. Remove the covers from the base.
2. Place the covers over the horizontal supply and return openings (painted side out). Align the screw holes, and secure using the same screws removed in step 1.

Install Full Perimeter Roof Mounting Curbs

1. Verify that the roof mounting curb is correct for the unit. There are two curbs depending on the unit cabinet sizes:
 - 5WCZ5024–036 use model BAYCURB050,
 - 5WCZ5042–060 use model BAYCURB051
2. Assemble and install the curb following the instructions in the Installer's Guide included with the appropriate curb.

Note: Use the extreme mounting kit, BAYEXMK002, to secure the unit to the slab.

Figure 3. Typical ground level application


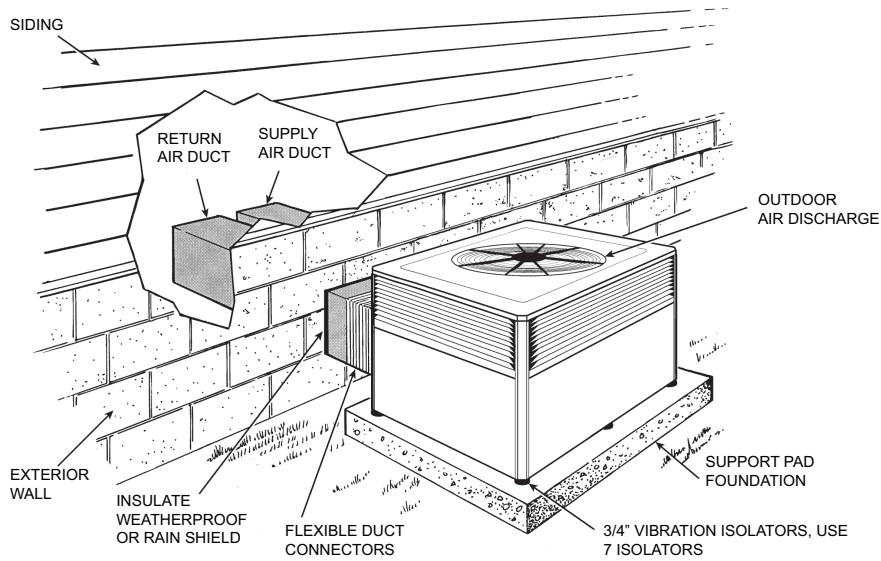


Figure 4. Converting horizontal to down airflow

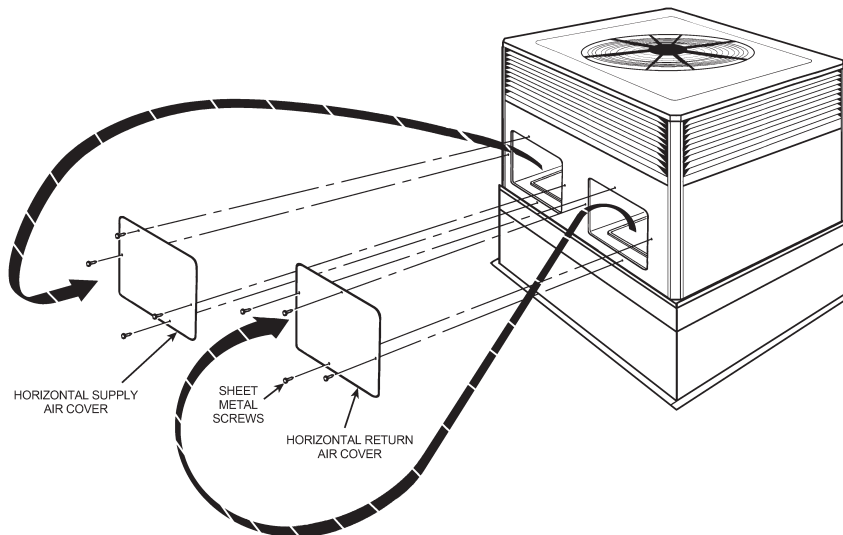

Lifting and Rigging

⚠ WARNING

Improper Unit Lift!

Failure to properly lift unit in a LEVEL position could result in unit dropping and possibly crushing operator/technician which could result in death or serious injury, and equipment or property-only damage.

Test lift unit approximately 24 inches (61 cm) to verify proper center of gravity lift point. To avoid dropping of unit, reposition lifting point if unit is not level.

Important: Do not lift the unit without test lifting for balance and rigging. Do not lift the unit in windy conditions or above personnel. Do not lift the unit by attaching clevis, hooks, pins, or bolts to the unit casing, casing hardware, corner lugs, angles, tabs, or flanges. Failure to observe these warnings may result in equipment damage.

1. Before preparing the unit for lifting, check the unit dimension drawings for center of gravity for lifting safety ("Dimensional Data," p. 15). Because of placement of internal components, the unit's weight may be unevenly distributed. Approximate unit weights are also provided in the unit drawings.

Note: Unit rigging and hoisting requires accessory kit BAYLIFT002. It includes a kit of four (4) lifting lugs.

2. Insert the four lifting lugs in the openings provided in the drip lip on each end of the unit. A tap or jerk to the lug will overcome the interference that arises due to the dimple on the lug.
3. When hoisting the unit, be sure that a proper method of rigging is used. Use slings and spreader bars for protection during lifting. Always test-lift the unit to determine the exact unit balance and stability before hoisting it to the installation location.
4. When the curb and air ducts have been properly installed, the unit is ready to be hoisted to the roof and set in position.


Important:

- To prevent damage to the sides and top of the unit when hoisting use “spreader bars” as shown in [Figure 6, p. 24](#).
- The unit must be lowered into position. The P.V.C. rubber tape on the curb flange permits the unit to be repositioned if required without destroying the P.V.C. rubber seals affixed to the mounting curb.

Placing the Unit on the Mounting Curb

1. The unit is designed with a perimeter drip lip that is lower than the unit base pan, see [Figure 6, p. 24](#).
2. Position the unit drip lip down over and in contact with the outside corner of the curb. Continue to lower the

Figure 5. Vibration isolators / snow feet locations

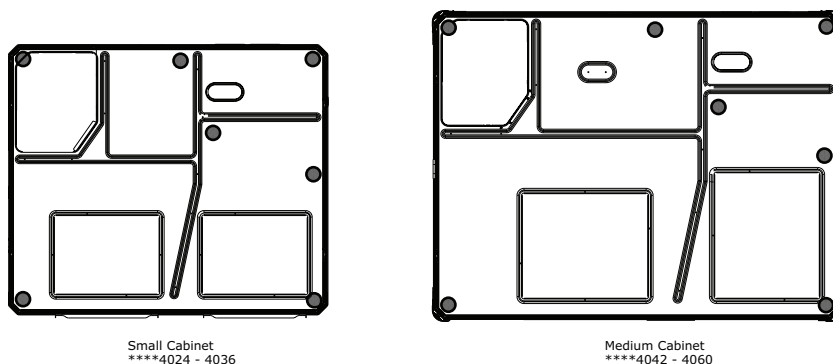

Rooftop Installation - Frame Mounting

For rooftop applications using field fabricated frame and ducts use the following procedure:

1. Locate and secure the frame to the roof by bolting or welding. Frame must provide adequate center support via a cross member centrally located channel rail. See [Figure 9, p. 25](#). Vibration isolators should be installed as indicated in [Figure 5, p. 22](#), adjust as necessary for your frame. The isolators must be placed on base pan, not drip lip. Add flashing as required. Flashing must

unit on top of the curb, with the unit drip lip astraddle, and in contact with, both the end and side rail of the curb. The unit should now rest on top of the curb. Consider using the extreme mounting kit, BAYEXMK001, to add additional hold down strength to the mounting.

Notes:

- For rooftop applications, the use of extreme mounting kits and vibration isolators is optional and not mandatory.
- The ductwork is installed as part of the curb installation. Do not attach ductwork to the unit and lower the unit with ductwork onto the curb.

Vibration isolators / Snow feet locations

Notes:

- The installation instructions indicate typical installation only, but actual installation may differ.
- These views represent the base as viewed looking up from underneath the unit.

Important: Unit vibration isolator support is recommended in the general areas shown. Locate 3/4-inch thick vibration isolators on the bottom of the basepan as illustrated by black dots for ground level pad applications. Modify vibration isolator location as necessary for frame and rail applications.

conform to local building codes.

2. Prepare the hole in the roof in advance of installing the unit.
3. Secure the horizontal or down airflow ducts to the roof. Refer to the previous Convert from Horizontal Airflow to Down Airflow section if conversion is needed.
4. All fabricated outdoor ducts should be as short as possible.
5. Place the unit on the frame.
6. The unit must be mounted level for proper drainage of

water through the holes in the base pan.

7. Secure the unit to the frame.
8. Insulate any ductwork outside of the structure with at least two (2) inches of insulation and then weatherproof. There must be a weatherproof seal where the duct enters the structure.
9. The unit should not be exposed to direct roof water runoff.
10. Flexible duct connectors must be of a flame retardant material. All ductwork outside of the structure must be insulated and weatherproofed in accordance with local codes.
11. Access and service clearances for the unit must be given careful consideration when locating the duct entrance openings. "Dimensional Data," p. 15 provide unit dimensions.
12. Continue with the following installation sections to complete the installation: Ductwork, Filter, and Electrical Wiring.

Rooftop Installation — No Curb/Frame

For roof top applications using field fabricated ducts and sleeper rails rather than a curb or frame, use the following procedure:

1. Locate and secure the sleeper rails to the roof by bolting (three (3) rails required). One on each end to support the edges of the unit and one across the center of the unit. The center rail must run inside both drip lips. Vibration isolators should be installed, adjust as necessary for your sleeper rails. The isolators must be placed on base pan, not drip lip. Add flashing as required. Flashing must conform to local building codes.
2. Prepare the hole in the roof in advance of installing the unit.
3. Secure the horizontal or down airflow ducts to the roof. Refer to the previous Convert from Horizontal Airflow to Down Airflow section if conversion is needed.
4. All fabricated outdoor ducts should be as short as possible.
5. Place the unit on the rails.
6. The unit must be mounted level for proper drainage of water through the holes in the base pan.
7. Secure the unit to the rails.
8. Insulate any ductwork outside of the structure with at least two (2) inches of insulation and then weatherproof. There must be a weatherproof seal where the duct enters the structure.
9. No exposure to direct roof water runoff.
10. Flexible duct connectors must be of a flame retardant material. All ductwork outside of the structure must be insulated and weatherproofed in accordance with local codes.
11. Access and service clearances for the unit must be given careful consideration when locating the duct entrance openings. "Dimensional Data," p. 15 provide unit dimensions.
12. Continue with the following installation sections: Ductwork, Filter and Electrical Wiring.

Figure 6. Lifting and rigging

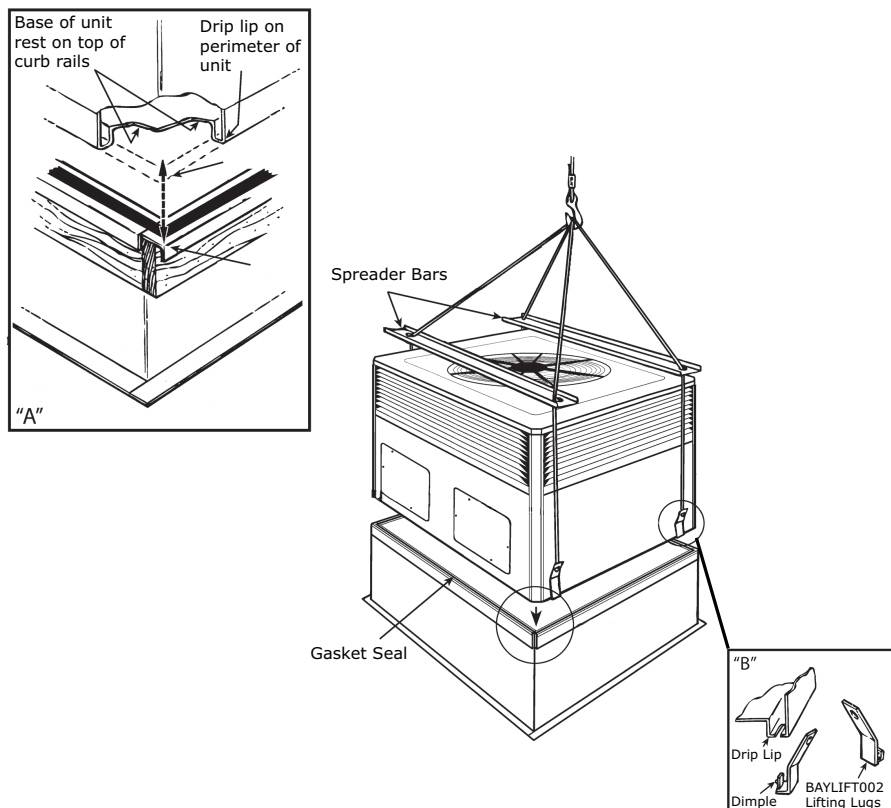


Figure 7. Curb dimensions

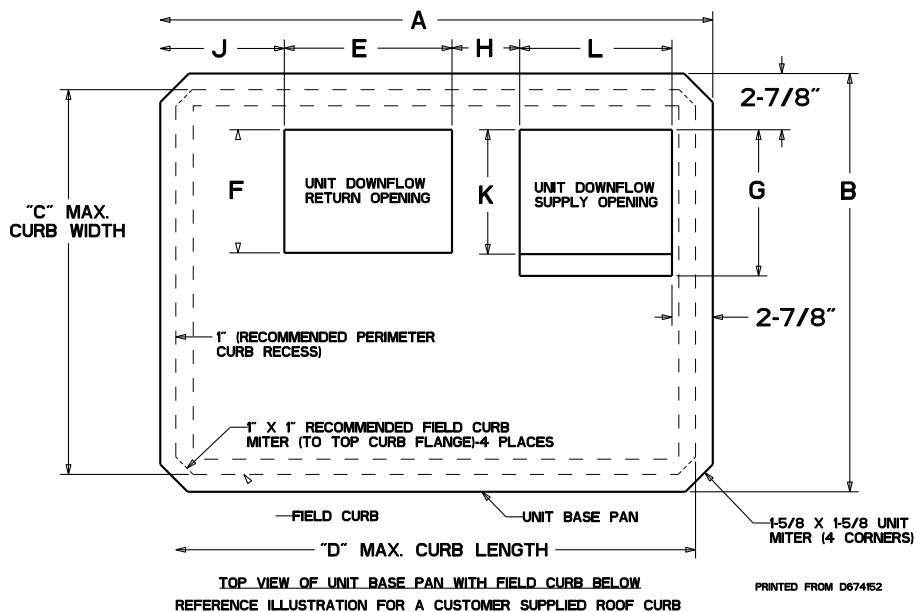


Table 7. Curb dimensions (inch)

Model	A	B	C	D	E	F	G	H	J	K	L
5 TC*, YC*, WC*, DC*018, 024, 030, 036	48-3/8	40-7/8	38-7/8	46-3/8	16	12	—	6-5/8	6-7/8	12	16
15 TC*, YC*, WC*, DC*042, 048, 060	58	43-7/8	41-7/8	56	18	15	18	9-5/8	12-1/2	—	15

This drawing was prepared by the manufacturer in order to provide detail regarding job layout only. This drawing is not intended to be used as a basis to construct, build or modify the item depicted in the drawing. The manufacturer is not

responsible for the unauthorized use of this drawing and expressly disclaims any liability for damages resulting from such unauthorized use.

Figure 8. Typical rooftop horizontal airflow application with frame


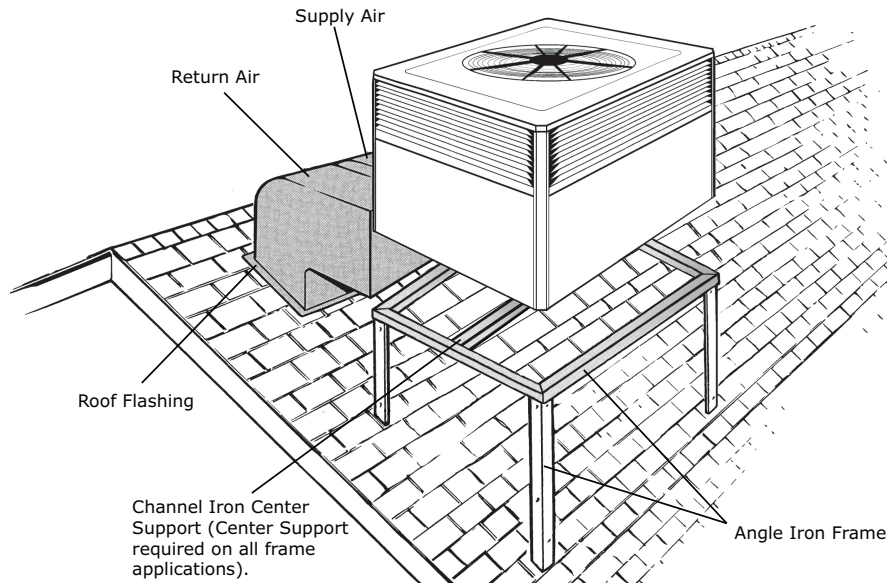


Figure 9. Typical rooftop down airflow application with frame

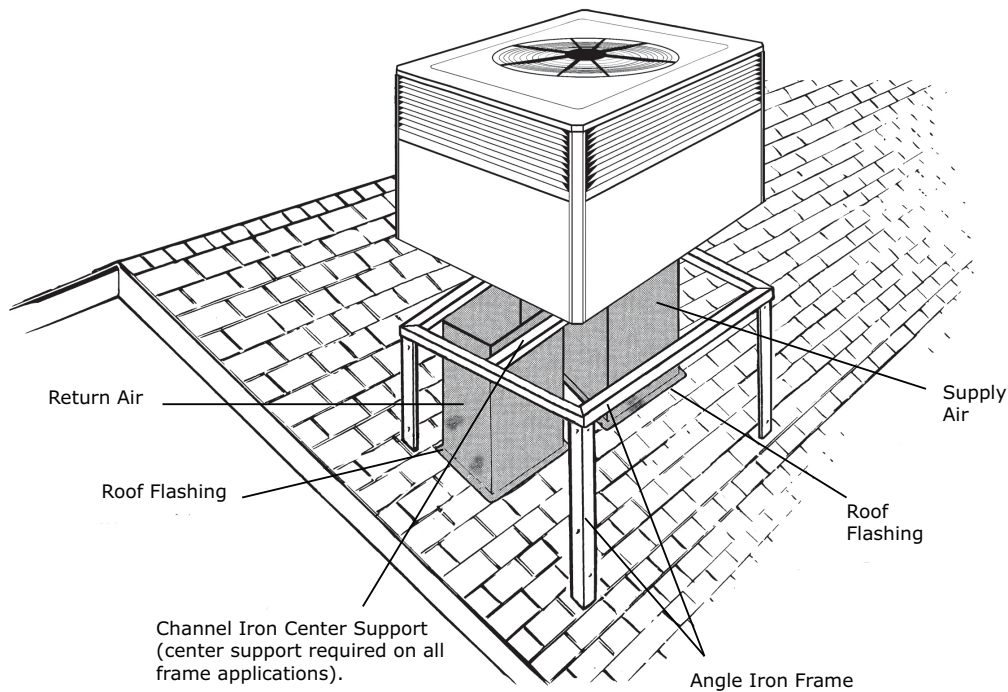

Ductwork Installation

Attaching Downflow Ductwork to Roof Curb

Supply and return air flanges are provided on the roof curb for easy duct installation. All ductwork must be run and attached to the curb before the unit is set into place. Refer to the Roof Mounting Curb Installer's Guide for details.

Attaching Downflow Ductwork to Roof Frame

Follow these guidelines for ductwork construction:


Connections to the unit should be made with three (3) inch canvas connectors to minimize noise and vibration transmission.

Elbows with turning vanes or splitters are recommended to minimize air noise and resistance.

The first elbow in the ductwork leaving the unit should be no closer than two (2) feet from the unit, to minimize noise and resistance.

To prevent leaking, do not attach the ductwork to the bottom of the unit base. Refer to the bottom example in the figure below.

Figure 10. Attaching down airflow ductwork

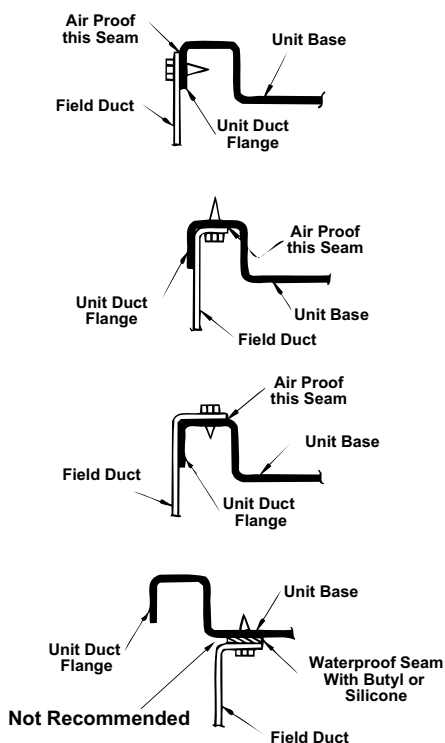

Attaching Horizontal Ductwork to Unit


All conditioned air ductwork should be insulated to minimize heating and cooling duct losses. Use a minimum of two (2) inches of insulation with a vapor barrier. The

outside ductwork must be weatherproofed between the unit and the building.

When attaching ductwork to a horizontal unit, provide a flexible watertight connection to prevent noise transmission from the unit to the ducts. The flexible connection must be indoors and made out of heavy canvas.

Note: Do not draw the canvas taut between the solid ducts.

Figure 11. Attaching horizontal airflow ductwork

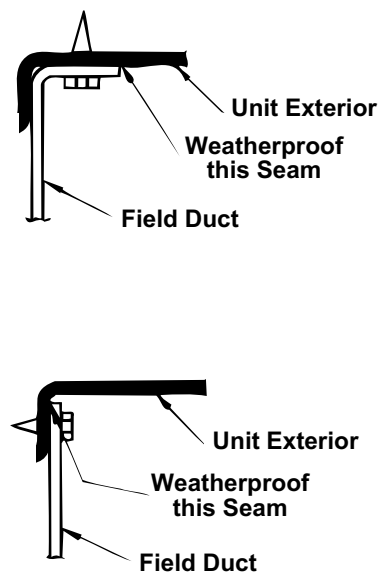

Condensate Drain Piping


A 3/4-inch female NPT condensate drain connection is provided on the evaporator access panel end of the unit. Provide a trap and fill it with water before starting the unit to avoid air from being drawn through. Follow local codes and standard piping practices when running the drain line. Pitch the line downward away from the unit. Avoid long horizontal runs. See [Figure 12, p. 27](#).

Note: Do not use reducing fittings in the drain lines.

The condensate drain must be:

- Made of 3/4-inch pipe size
- Pitched 1/4-inch per foot to provide free drainage to convenient drain system
- Trapped
- Must be connected to a closed drain system unless the trap is properly vented

Figure 12. Typical condensate drain piping

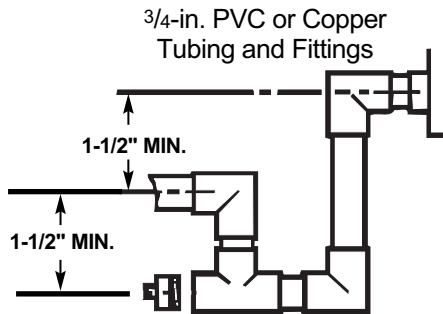

Air Filter Installation

The packaged unit requires an air filter. The unit does not come with a factory installed filter rack in it, however, two filter frame accessories are offered that will allow the installation of a filter within the unit, BAYFLTR101 and BAYFLTR201. Otherwise a field supplied filter rack must be installed by the installer in the return ductwork. Refer to table for field supplied filter racks.

Table 8. Filter sizes (field supplied filter rack)

Unit	Nominal CFM	Filter (a) Size (Sq Ft)	Filter Resistance ("W. C.)
5WCZ5024	800	2.67	0.08
5WCZ5030	1000	3.33	0.08
5WCZ5036	1200	4.00	0.08
5WCZ5042	1400	4.67	0.08
5WCZ5048	1600	5.33	0.08
5WCZ5060	2000	6.67	0.08

(a) Filters must be installed in the return air system. The above square footages are based on 300 F.P.M. face velocity. If permanent filters are used, size per mfg. Recommendation with clear resistance of 0.05-in. WC.

Important: Air filters and media wheels or plates shall meet the test requirements in UL 900.

Electrical Wiring

Note: This unit is factory wired for 230V. See wiring diagram for 208V conversion.

Electrical Connections

Electrical wiring and grounding must be installed in accordance with local codes or, in the absence of local codes, with the National Electrical Code ANSI/NFPA 70, Latest Revision.

Electrical Power

It is important that proper electrical power be available for the unit. Voltage variation should remain within the limits stamped on the unit nameplate.

Disconnect Switch

Provide an approved weatherproof disconnect within close proximity and within sight of the unit. If disconnect must be

mounted to the cabinet, the location shown in [Figure 15, p. 28](#) should be the only one considered.

Over Current Protection

The branch circuit feeding the unit must be protected as shown on the unit's rating plate.

Power Wiring


The power supply lines must be run in weather-tight conduit to the disconnect and into the side of the unit control box. Provide strain relief for all conduit with suitable connectors.

Provide flexible conduit supports whenever vibration transmission may cause a noise problem within the building structure.

1. Remove the Control/Heat access panel. Pass the power wires through the Power Entry hole in the end of the unit. See [Figure 13, p. 27](#).
2. Connect the high voltage wires to the appropriate contactor terminals. Single phase units use a two (2) pole contactor and three phase units use three (3) pole contactor. Connect the ground to the ground lug on the chassis. See [Figure 15, p. 28](#).

Ensure all connections are tight.

Figure 13. Power wiring

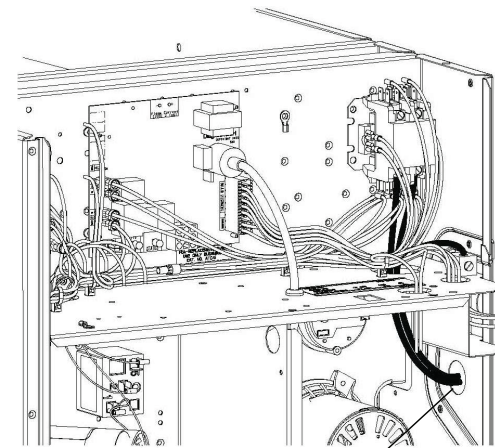

Run power supply lines through weather-tight conduit and secure to unit with strain relief.

Figure 14. Power connections


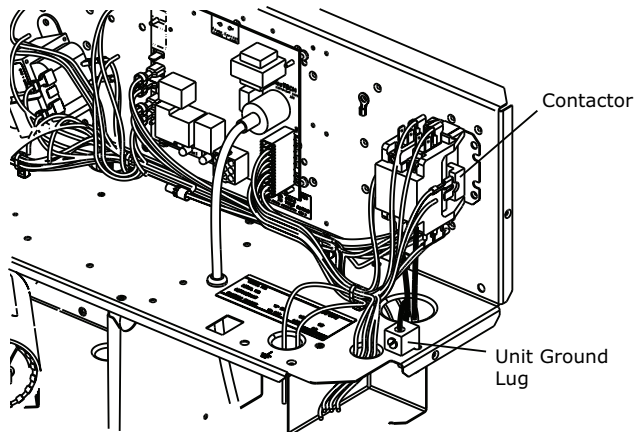


Figure 15. Mounted disconnect location

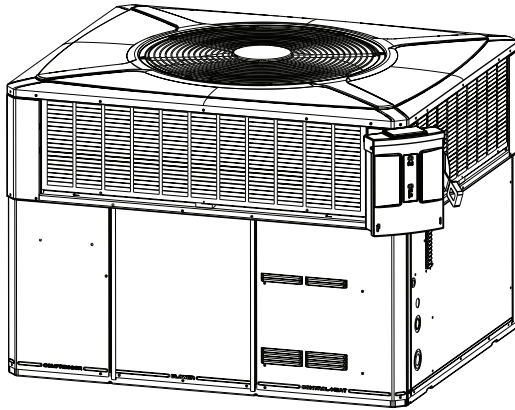

Control Wiring (Class II)

Low voltage control wiring should not be run in conduit with power wiring unless Class 1 wire of proper voltage rating is used. Route the thermostat cable or equivalent single leads of No. 18 AWG colored wire from the thermostat subbase terminals through the rubber grommet on the unit. See "Dimensional Data," p. 15 for the control entry (24V Entry) location. Make connections as shown on the wiring diagrams.

Do not short thermostat wires since this will damage the control transformer.




Refer to the table below for recommended wire sizes and lengths for installing the unit thermostat. The total resistance of these low voltage wires must not exceed one (1) ohm. Any resistance in excess of 1 ohm may cause the control to malfunction because of the excessive voltage drop.

Table 9. Thermostat wire size and maximum length

Wire Size	Maximum Length (Ft)
18	75
16	125
14	200

Important: Upon completion of wiring, check all electrical connections, including factory wiring within the unit, and make sure all connections are tight. Replace and secure all electrical box covers and access panels before leaving the unit or turning on the power to the unit.

Figure 16. Field wiring diagram

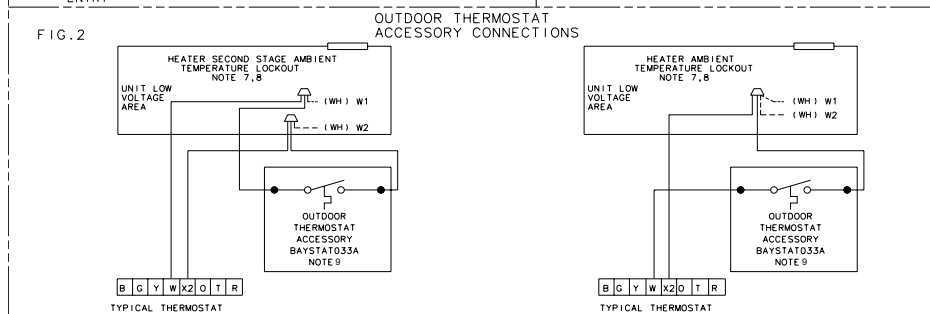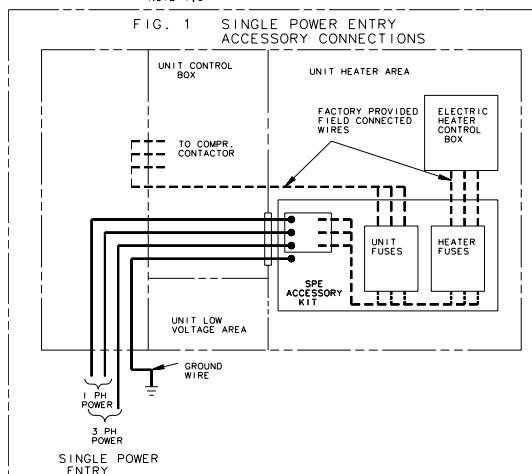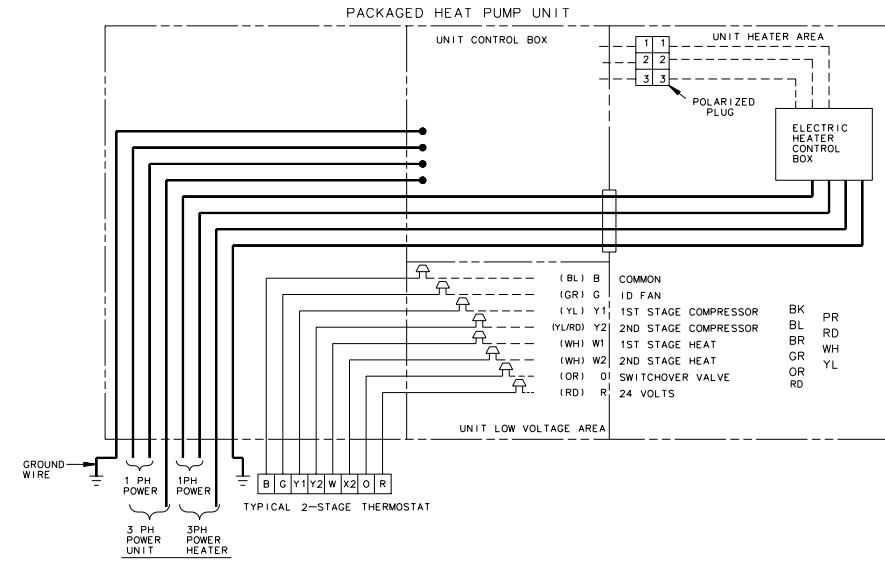

Notes:

1. *Fused disconnect size, power wiring and grounding of equipment must comply with codes.*
2. *Be sure power supply agrees with equipment and heater nameplate.*
3. *Low voltage wiring to be 18 AWG minimum conductor.*
4. *See heater nameplate for current rating of heater used.*
5. *See unit and heater diagram for electrical connection details.*
6. *If electric heater accessory is not installed omit the electric heater, associated power wires and the X2 thermostat wires.*
7. *Fig. 2 demonstrates connection of the outdoor thermostat accessory only. For further unit connection details refer to the other figures.*
8. *The W1 (WH) wire is first stage electric heat. If the electric heater accessory has two heating stages the W2 (WH) wire is second stage electric heat.*
9. *The BAYSTAT033A outdoor thermostat accessory kit contains a thermostat and a relay. The relay is not required to be used in this application.*

Unit Start-Up

Pre-Start Quick Checklist

- ☐ Is the unit properly located and level with the proper clearances? See, “[Dimensional Data](#),” p. 15.
- ☐ Is the ductwork correctly sized, run, taped, insulated, and weatherproofed with proper unit arrangement as shown in the ductwork installation section?
- ☐ Is the condensate line properly sized, run, trapped, and pitched and shown in the Condensate Drain Piping section?
- ☐ Is the filter of the correct size and quantity? Is it clean and in place? See Air Filter Installation section.
- ☐ Is the wiring properly sized and run according to the unit wiring diagram?
- ☐ Are all the wiring connections, including those in the unit tight?
- ☐ Has the unit been properly grounded and fused with the recommended fuse size?
- ☐ Is the thermostat well located, level, and correctly wired? See Electrical Wiring section
- ☐ Have the air conditioning systems been checked at the service ports for charge and leak tested if necessary?
- ☐ Do the condenser fan and indoor blower turn free without rubbing and are they tight on the shafts?
- ☐ Has all work been done in accordance with applicable local and national codes?
- ☐ Are all covers and access panels in place to prevent air loss and safety hazards?

Starting the Unit in Cooling Mode

Note: See the section on Sequence of Operation for a description of the cooling operating sequence.

To start the unit in the cooling mode, set the comfort control to **COOL** and to a setting below room temperature. The condenser fan motor, compressor and evaporator fan motor will operate automatically. Continuous fan mode during Cooling operation may not be appropriate in humid climates. If the indoor air exceeds 60% relative humidity or simply feels uncomfortably humid, it is recommended that the fan only be used in the **AUTO** mode.

Operating Pressure Checks

After the unit has operated in the cooling mode for a short period of time, install pressure gauges on the gauge ports of the discharge and suction line valves (behind the Compressor access panel). Check the suction and discharge pressures and compare them to the normal operating pressures provided in the “[Pressure Curves](#),” p. 38.

Note: Do not use the pressure curves to determine the unit refrigerant charge. The correct charge is shown on the unit nameplate. To charge the system accurately, weigh in the charge according to the unit nameplate and check subcooling against the Subcooling Charging Table in “[Charging in Cooling above 55°F OD Ambient](#),” p. 13.

Voltage Check

With the compressor operating, check the line voltage at the unit (contactor is located behind the Control access panel). The voltage should be within the range shown on the unit nameplate. If low voltage is encountered, check the size and length of the supply line from the main disconnect to the unit. The line may be undersized for the length of the run.

Cooling Shut Down

Set the comfort control to **OFF** or to a setting above room temperature.

Important: De-energize the main power disconnect **ONLY** when servicing the unit. Power may be required to keep the heat pump compressor warm and to boil off refrigerant in the compressor.

Starting the Unit in Heating Mode

Note: See the section on Sequence of Operation for a description of the heat pump heating operating sequence.

Check that all grills and registers are open and all unit access panels are closed before start-up.

Set the comfort control above room temperature until achieving a first stage call for heat and set the fan to **AUTO** or **ON**.

Heating Shut Down

Set the comfort control to **OFF** or at a setting below room temperature.

Sequence of Operation

General

Operation of the unit heating and cooling cycles is automatic when the system is set to **HEAT** or **COOL** (the optional automatic changeover thermostat, when set to **AUTO**, automatically changes to heat or cool with an appropriate room temperature change). The fan can be set to **ON**, causing continuous evaporator (indoor) fan operation or set to **AUTO** causing fan operation to coincide with heating or cooling run cycles. Continuous fan mode during cooling operation may not be appropriate in humid climates. If the indoor air exceeds 60% relative humidity or simply feels uncomfortably humid, it is recommended that the fan only be used in the **AUTO** mode. With the thermostat set to **ON** current is supplied to the control

transformer (on 460V models the outdoor fan relay (ODF) is energized through normally closed contacts on the defrost control (DFC).

Cooling Mode

Thermostat call for cooling (2-stage thermostat)

Call for 1st stage cooling only:

With the room thermostat set to **COOL** and the fan set to **AUTO**, power is supplied from the room thermostat "O" terminal to the unit switchover valve coil (SOV) and the "O" terminal on the ECMC board. This energizes the switchover valve (SOV) placing it in the position for cooling (it is in the position for heating when deenergized). On a call for cooling, power is supplied to the unit from the room thermostat (Y1) and (G) terminal. (Y1) provides power to the compressor contactor (CC), the defrost control (DFC) and the electronically commutated motor control (ECMC). (G) provides power to the (ECMC) for low speed (IDM) indoor fan motor operation.

The energized compressor contactor (CC) completes the circuit to the compressor for 1st stage (Low) operation and the outdoor single speed fan motor (ODM). The (G) signal energizes the (ECMC) for the indoor fan motor (ECM) to operate on low speed. The thermostat will continue to cycle the compressor and fans to maintain the desired temperature.

Call for 2nd stage after 1st stage

On a call for 2nd stage cooling, power is supplied from the room thermostat (Y2) terminal to the A/C rectifier (ACR) and the (ECMC). This energizes the (ACR) switching the compressor to 2nd stage (High) operation. The (ECMC) is energized for indoor fan motor (ECM) high speed fan operation. The room thermostat will continue to cycle the system between 1st and 2nd stage to maintain the desired temperature.

Heating Mode

Thermostat call for heat (2-stage thermostat)

Call for 1st stage heating only:

With the room thermostat set to **HEAT** and the fan set to **AUTO**, no power is supplied from the room thermostat "O" terminal to the unit switchover valve coil (SOV) and the "O" terminal on the ECMC board. This leaves the switchover valve (SOV) in the normal position for heating and is the signal for the (ECMC) to run at indoor fan speeds designed for heating. On a call for heating, power is supplied to the unit from the room thermostat (Y1) and (G) terminal. (Y1) provides power to the compressor contactor (CC), the defrost control (DFC) and the electronically commutated motor control (ECMC). (G) provides power to the (ECMC) for low speed (ECM) indoor fan motor operation.

The energized compressor contactor (CC) completes the circuit to the compressor for 1st stage (Low) operation and the outdoor single speed fan motor (ODM). The indoor fan motor (ECM) will operate on low speed. The room thermostat will continue to cycle the compressor and fans to maintain the desired temperature.

Call for 2nd stage after 1st stage

On a call for 2nd stage heating, power is supplied from the room thermostat (Y2) terminal to the compressor rectifier (ACR) and the (ECMC). This energizes the (ACR) switching the compressor to 2nd stage (High) operation. The (ECMC) is energized for indoor fan motor (ECM) high speed fan operation. The room thermostat will continue to cycle the system between 1st and 2nd stage to maintain the desired temperature.

Supplementary Heat

The supplementary electric heat is brought on when the indoor temperature drops 1-1/2 degrees below the thermostat setting. **TSH-2** contacts close providing power to the "W" terminal on the indoor thermostat and to the supplementary heater control circuit. An outdoor thermostat may have been added to disallow the second stage (if provided) of electric heat above a selected outdoor temperature. If the outdoor temperature falls below the setting on the outdoor thermostat, this additional heater stage will come on. When the outdoor air temperature rises, and the outdoor T-stat setpoint is reached, the system will revert back to first stage electric heating.

When the indoor ambient is satisfied, **TSH-2** contacts will open and the unit will revert back to the compressor only heating mode and then off. For emergency heat (use of supplementary electric heat only), an emergency (**EMERG**) heat switch is provided within the comfort control. When placed in the emergency heat position, it will disable the compressor, bypass the outdoor thermostats, if provided, and engage the supplementary electric heaters and indoor fan.

Demand Defrost Operation

During the heating cycle, the outdoor coil may require a defrost cycle which is determined by the demand defrost control (DFC). This control continuously measures the outdoor coil temperature (CBS) and the outdoor ambient temperature (ODS-B) and calculates the difference or delta-T measurement. When the calculated delta-T is met, the demand defrost control (DFC) opens the circuit to the outdoor fan motor (ODM) and energizes the switchover valve (SOV), placing the unit in the cooling mode to defrost the outdoor coil (on SCROLL bearing units only, the control will stop the compressor for a minimum of thirty (30) seconds). The outdoor coil temperature sensor (CBS) terminates the defrost cycle, or it times off after twelve (12) minutes in defrost, the (DFC) energizes the outdoor fan motor (ODM) and twelve seconds later de-energizes the (SOV), which returns the unit to the heating mode. Supplementary electric heat, if provided, is brought on to control indoor temperature during the defrost cycle. During this defrost cycle the indoor fan will run at the speed designated for 2nd stage cooling.

Defrost Control

The demand defrost control measures heat pump outdoor ambient temperature with a sensor located outside the outdoor coil. A second sensor located on the outdoor coil is used to measure the coil temperature. The difference

between the ambient and the colder coil temperature is the difference or delta-T measurement. This delta-T measurement is representative of the operating state and relative capacity of the heat pump system. Measuring the change in delta-T determines the need for defrost. The coil sensor also senses outdoor coil temperature for termination of the defrost cycle.

ECM Fan Motor Adjustments

If the airflow needs to be increased or decreased, see the Airflow Table “Indoor Fan Performance,” p. 44. Information on changing the speed of the blower motor is in the Blower Performance Table.

Blower speed changes are made on the ICM Fan Control mounted in the control box. The ICM Fan Control controls the variable speed motor.

There is a bank of 8 dip switches located at the upper left side of the board. The dip switches work in pairs to match the cooling/heat airflow (CFM/TON), Fan off-delay options, and electric heat airflow adjustment. The switches appear as shown in Figure 17, p. 33.

Figure 17. ECM fan control


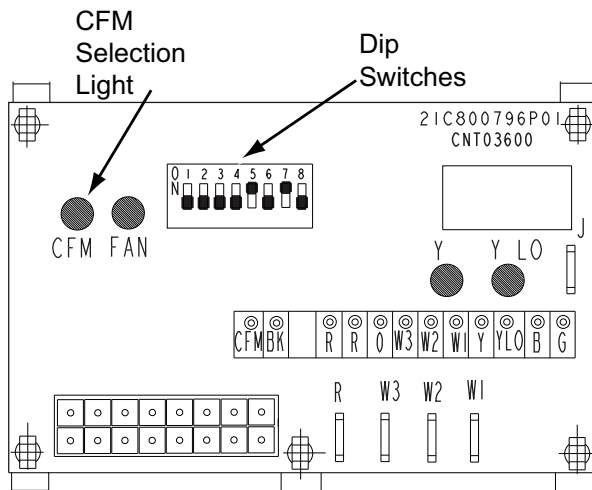


Table 10. Cooling off - delay options

Switch Settings		Selection	Nominal Airflow
5 - Off	6 - Off	None	Same
5 - On	6 - Off	45 Seconds	100%*
5 - Off	6 - On	1.5 Minutes	50%
5 - On	6 - On	**	50 -100%

* - This setting is equivalent to the BAY24X045 relay benefit.

** - This ENHANCED MODE selection provides a ramping up and ramping down of the blower speed to provide improved comfort, quietness, and potential energy savings. The graph below show the ramping process.

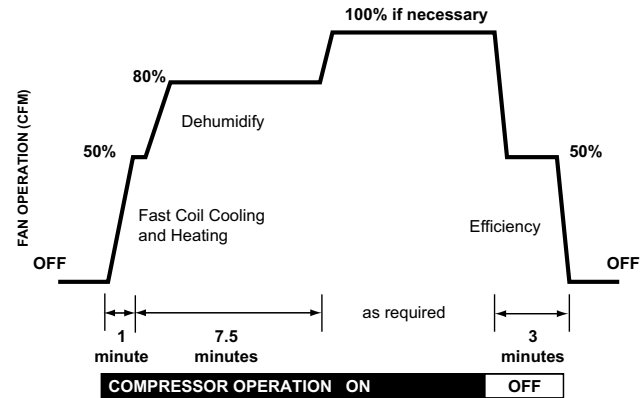

Final Installation Checklist

Important: Perform a final unit inspection to be sure that factory tubing has not shifted during shipment. Adjust tubing if necessary so tubes do not rub against each other when the unit runs. Also be sure that wiring connections are tight and properly secured.


- ☐ Does the unit run and operate as described in the Sequence of Operation section in response to the room thermostat?
- ☐ Are the condenser fan and indoor blower operating correctly with proper rotation and without undue noise?
- ☐ Is the compressor operating correctly and has the system been checked with a charging chart?
- ☐ Has the voltage and running current been checked to determine if it is within limits?
- ☐ Has the thermostat been checked for calibration and the air discharge grills adjusted to balance the system?
- ☐ Has the ductwork been checked for air leaks and condensation?
- ☐ Has the furnace manifold pressure been checked and adjusted if necessary?
- ☐ Has the heating air temperature rise been checked?
- ☐ Has the unit been checked for tubing and sheet metal rattles? Are there any other unusual noises to be checked?
- ☐ Has all mitigation actions been verified?
- ☐ Are all covers and panels in place and properly fastened?
- ☐ Has the owner been instructed on the proper operation and maintenance of the unit? Be sure to leave this manual with the owner.

Verification of Mitigation Actions

After installation, the installer must verify that the refrigerant leak detection system actuates all mitigating actions.

The test can be initiated by shorting the two test pins on the header of the mitigation control board inside of the unit. The mitigating actions will continue for approximately 5 minutes. See Figure 18, p. 34.

Figure 18. Mitigation control board

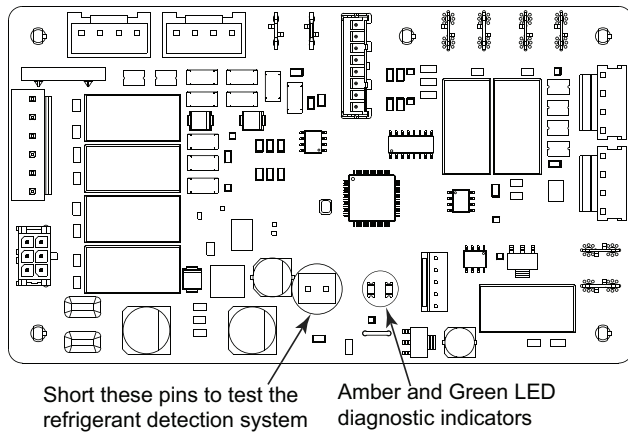

If any of the mitigating actions are not actuated by the system during the test, please check the following:

- All field wiring connections should be checked against the diagrams in the “[Electrical Wiring](#),” p. 27 section of this manual.
- The diagnostic indicators on the mitigation control board should be checked against the diagnostic codes given in below.
- Scan the QR code below for more information on field troubleshooting of the refrigerant leak detection system.

Figure 19. Refrigerant leak detection system troubleshooting QR code



Table 11. MCB diagnostic code table for Software V07.1 and earlier

Condition	Green LED	Amber LED
Idle or Off	Off	Off
Start-up	On	On
No Active Alarm	Slow Flash	On
Active Alarm (Refrigerant Leak, Sensor Communicating Error, or Sensor Error)	3 Flash	On
Past Refrigerant Detected Alarm	4 Flash	On

Table 11. MCB diagnostic code table for Software V07.1 and earlier (continued)

Condition	Green LED	Amber LED
Past Sensor Communication Error	5 Flash	On
Past Sensor Error	6 Flash	On

Table 12. MCB diagnostic code table for Software V9.1 and later

Condition	Green LED	Amber LED
No Power/Off	Off	Off
Start-up	On	On
Normal Operation	Slow Flash	On
Active Alarm - Sensor Communication Error	2 Flash	On
Active Alarm - Refrigerant Leak or Sensor Failure	3 Flash	On
Past Refrigerant Detected Alarm	4 Flash	On
Past Sensor Communication or Sensor Error	5, 6, or 7 Flash	On

Note: Software version is printed on label on control board.

Maintenance

Owner Maintenance

Some of the periodic maintenance functions of the unit can be performed by the owner; this includes replacing the disposable or cleaning the permanent air filters, cleaning the unit cabinet, cleaning the condenser coil, and conducting a general unit inspection on a regular basis.

Filters

When the system is in constant operation, inspect the filters at least once each month.

If the unit has disposable-type filters, replace them with new filters of the same type and size. Do not attempt to clean disposable filters.

Permanent-type filters can be cleaned by washing them with a mild detergent and water. Make sure that the filters are thoroughly dry before reinstalling them in the unit (or duct system).

Note: It may be necessary to replace permanent filters annually if washing fails to clean the filter or if the filter shows signs of deterioration. Be sure to use the same type and size as was originally installed.

Condenser Coil

Be sure to keep all vegetation and debris away from the condenser coil area.

Service Maintenance

Cooling Season

To keep the unit operating safely and efficiently, the manufacturer recommends that a qualified service technician check the entire system at least once each year or sooner if needed. The service technician should examine these areas of the unit:

- filters (for cleaning or replacement)
- motors and drive system components
- economizer gaskets (for possible replacement)
- safety controls (for mechanical cleaning)
- electrical components and wiring (for possible replacement and connection tightness)
- condensate drain (for proper sealing and cleaning)
- unit duct connections (to see that they are physically sound and sealed to the unit casing)
- unit mounting support (for structural integrity)
- the unit (for obvious unit deterioration)

Heating Season

Complete the following unit inspections and service routines at the beginning of each heating season.

- Visually inspect the unit to ensure that the airflow required for combustion and condenser coil is not obstructed from the unit.
- Inspect the control panel wiring to verify that all electrical connections are tight and that the wire insulation is intact.

Indoor Airflow Motor Speed Tap Setting

The units are factory set to Medium Low Speed.

If an electric Heater is installed refer to the electric heater nameplate for minimum airflow settings.

Fault Detection

A fault condition is indicated by the flashing light on the defrost control board located inside the heat pump control box.

In normal operation, the defrost control light will flash once each second. If the light is flashing more than once per second or not at all, refer to the Demand Defrost Control Checkout table.

PIN Identification

1. TEST_COMMON (Shorting any of the other pins to this pin causes the function of the other pin to be executed. Leaving this pin open results in the normal mode of operation.)
2. TST = Test (Shorting TEST_COMMON to this pin speeds up all defrost board timings.)
3. FRC_DFT = Forced Defrost (Short TEST_COMMON to this pin for two (2) seconds to initiate a forced defrost. Remove the short after defrost initiates.)


Defrost Control Checkout

Normal operation requires:

- LED on board flashing 1 time/second.
- 24V AC between R and B
- 24V AC between Y and B with unit operating
- Defrost initiation when FRC_DFT pin is shorted to TEST_COMMON pin.

If a defrost control problem is suspected, proceed to the Demand Defrost Control Checkout table.

Figure 20. Defrost board

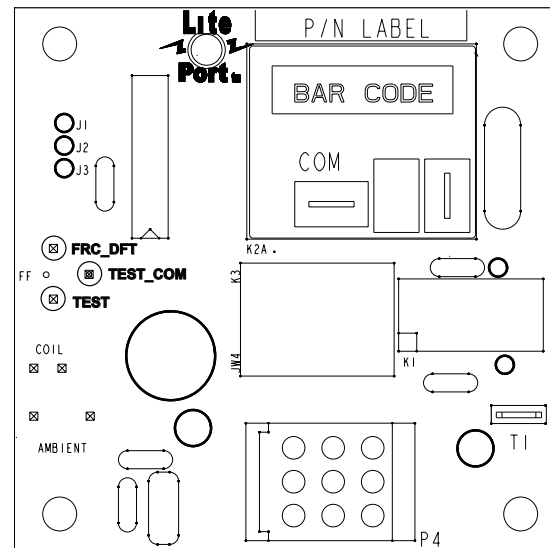

Test Sensors

Using the chart below, locate (as close as possible) the actual sensor temperature. The measured resistance should be relatively close to the resistance value shown in the chart.

Example:

Sensor temp. = 19°F.

Measured Resistance = 46K ohms

This sensor is good since the measured value is relatively close to the chart value.

Table 13. LED diagnostic indicators

1 — Flash/Second	= Normal operation.
2 — Flashes/Second	= Fault A (Low ΔT): Inoperative compressor, loss of charge, open ambient sensor, shorted coil sensor.
3 — Flashes/Second	= Fault B (20 defrosts terminated on time) Fault C (High ΔT): SOV stuck in heating, shorted ambient sensor, open coil sensor, closed TXV, OD motor failure, OD fan on in defrost, undercharged unit.
4 — Flashes/Second	= Fault A & C or A & B

For additional information consult Pub. No. 34–1001 Heat Pump Defrost Controls.

Table 14. Defrost control thermistor table

Temp (°F)	Resistance
86	7.85K
81	8.85K
75	10.24K
70	11.59K
65	13.14K
59	15.32K
55	16.93K
50	19.41K
45	22.20K
41	24.76K

Table 14. Defrost control thermistor table (continued)

Temp (°F)	Resistance
36	28.45K
32	31.84K
25	37.50K
19	46.44K
14	53.94K
10	57.64K
5	67.06K
0	78.05K

Table 15. Demand defrost control checkout table

Symptoms	Checks	Yes/No	Actions
1. LED off.	1. 24V R-B & Y-B at board, with unit running?	N	Repair low voltage wiring.
		Y	Complete Check #2.
	2. Short FRC_DFT pin to TEST_COMMON pin. Is defrost cycle initiated?	N	Replace defrost control.
		Y	LED is bad but control will still function.
2. LED flashing very rapidly (greater than 4 times/ sec) or appears to be on continuously.	TEST_COMMON pin shorted to TST pin?	Y	Remove short.
		N	Replace defrost control.
3. Control does not initiate a normal defrost.	1. OD Temp. below 49°F.? OD Coil temp. below 35°F.? "Delta" T increasing	N	Check refrigerant circuits for balanced distribution of refrigerant if OD coil is frosting and delta T is not increasing.
	2. LED flashing?	N	Refer to SYMPTOM #1.
		Y	Complete Check #2.
	3. Check for 24V Y-B at board with unit running.	N	Repair low voltage wiring.
		Y	Complete Check #3.
	4. Check sensors for correct mounting (connection) and resistance.	—	Remount or replace sensor if necessary.
4. Control does not initiate a forced defrost.	5. Short FRC_DFT pin to TEST_COMMON pin. Is defrost cycle initiated?	N	Replace defrost control.
		Y	Y-B signal or control may be intermittent.
5. Defrost initiates manually but terminates in less than 10 seconds.	24V R-B & Y-B at board with unit running?	N	Repair low voltage wiring.
		Y	Replace defrost control.
6. Defrost initiates manually but terminates on time.	1. Coil sensor circuit open or reading at a very high resistance?	Y	Replace coil sensor.
	2. Does OD fan cycle off in defrost?	N	Replace defrost control.
	3. Windy weather preventing normal termination?	—	—
7. Defrost initiates on approximately 15/25 minute intervals.	1. Be sure OD coil is clean.	N	Complete Check #2.
	2. Coil sensor open or reading a very high resistance?	Y	Replace coil sensor.
	3. Ambient sensor reading less than normal?	N	Complete Check #3.
		Y	Replace ambient sensor.
8. Defrost initiates on approximately 30/45 minute intervals.	4. OD fan off in defrost?	N	Replace defrost control.
	1. TEST_COMMON pin shorted to TST pin?	Y	Remove short.
	2. Do both sensors check OK?	N	Replace defective sensor (Clear coil and re gency heat light).
		Y	Complete SYMPTOM #3.
	3. Verify correct system charge.	—	Adjust as needed.
	4. Verify a "forced defrost" terminates less than 15 minutes.	N	Replace defrost control.
	5. OD fan motor off in defrost.	—	See SYMPTOM #9.
	6. Verify proper SOV operation.	—	Replace if necessary.

Table 15. Demand defrost control checkout table (continued)

Symptoms	Checks	Yes/No	Actions
9. OD fan runs during defrost.			Replace defrost control.
10. No SOV delay on defrost termination.	Has J1 been cut?	Y	The soft-switch time is defeated when J1 is cut.
		N	Replace defrost control.
11. ODS-A burned out.	B to T greater than 10 volts?	Y	Check low voltage wiring for miswire.
		N	Check for short in low voltage wiring.
12. On scroll bearing units, compressor does not operate.	1. 24V R-B at board & 24V Y-B at board?	N	Repair low voltage wiring.
	2. Check protective devices in YO circuit. 24V YO-B present after 30 seconds.	N	Y-B signal or control may be intermittent
13. On scroll bearing units, no 30 second off delay at defrost initiation.	Check voltage between control terminals 2 and 7, force a defrost cycle. Is 24V present for 30 seconds and 0V thereafter?	N	Replace defrost control.

Pressure Curves

Cooling performance can be checked when the outdoor temperature is above 65°F.

To check cooling performance, select the proper indoor CFM, all pressures to stabilize. Measure indoor wet bulb temperature, outdoor temperature, liquid and suction pressures.

On the plots:

1. Locate outdoor temperature
2. Locate indoor wet bulb
3. Find intersection of OD temperature and ID W.B
4. Read discharge or suction pressure in left column

Example:

1. Outdoor temperature 82°F
2. In door wet bulb 67°F
3. At intersection
4. Discharge pressure as follows:

Model	CFM	PSIG
5WCZ5024	650	281
5WCZ5030	700	293

Model	CFM	PSIG
5WCZ5036	800	287
5WCZ5042	1100	291
5WCZ5048	1300	296
5WCZ5060	1300	280

5. Suction pressure as follows:


Model	CFM	PSIG
5WCZ5024	650	144
5WCZ5030	700	141
5WCZ5036	800	138
5WCZ5042	1100	143
5WCZ5048	1300	137
5WCZ5060	1300	135

Actual:

Discharge pressure should be +/- 10 psi of chart.


Suction pressure should be +/- 3 psi of chart.

Figure 21. Pressure curves - model 5WCZ5024

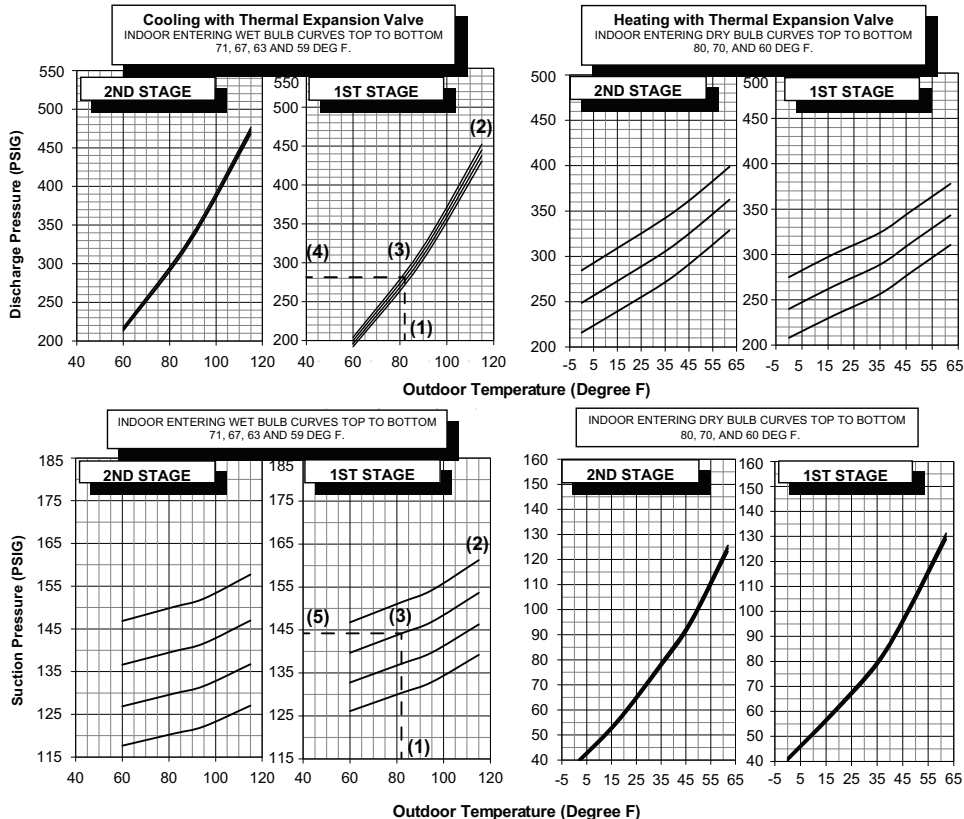

DWG.NO. 5WCZ5024


Figure 22. Pressure curves - model 5WCZ5030

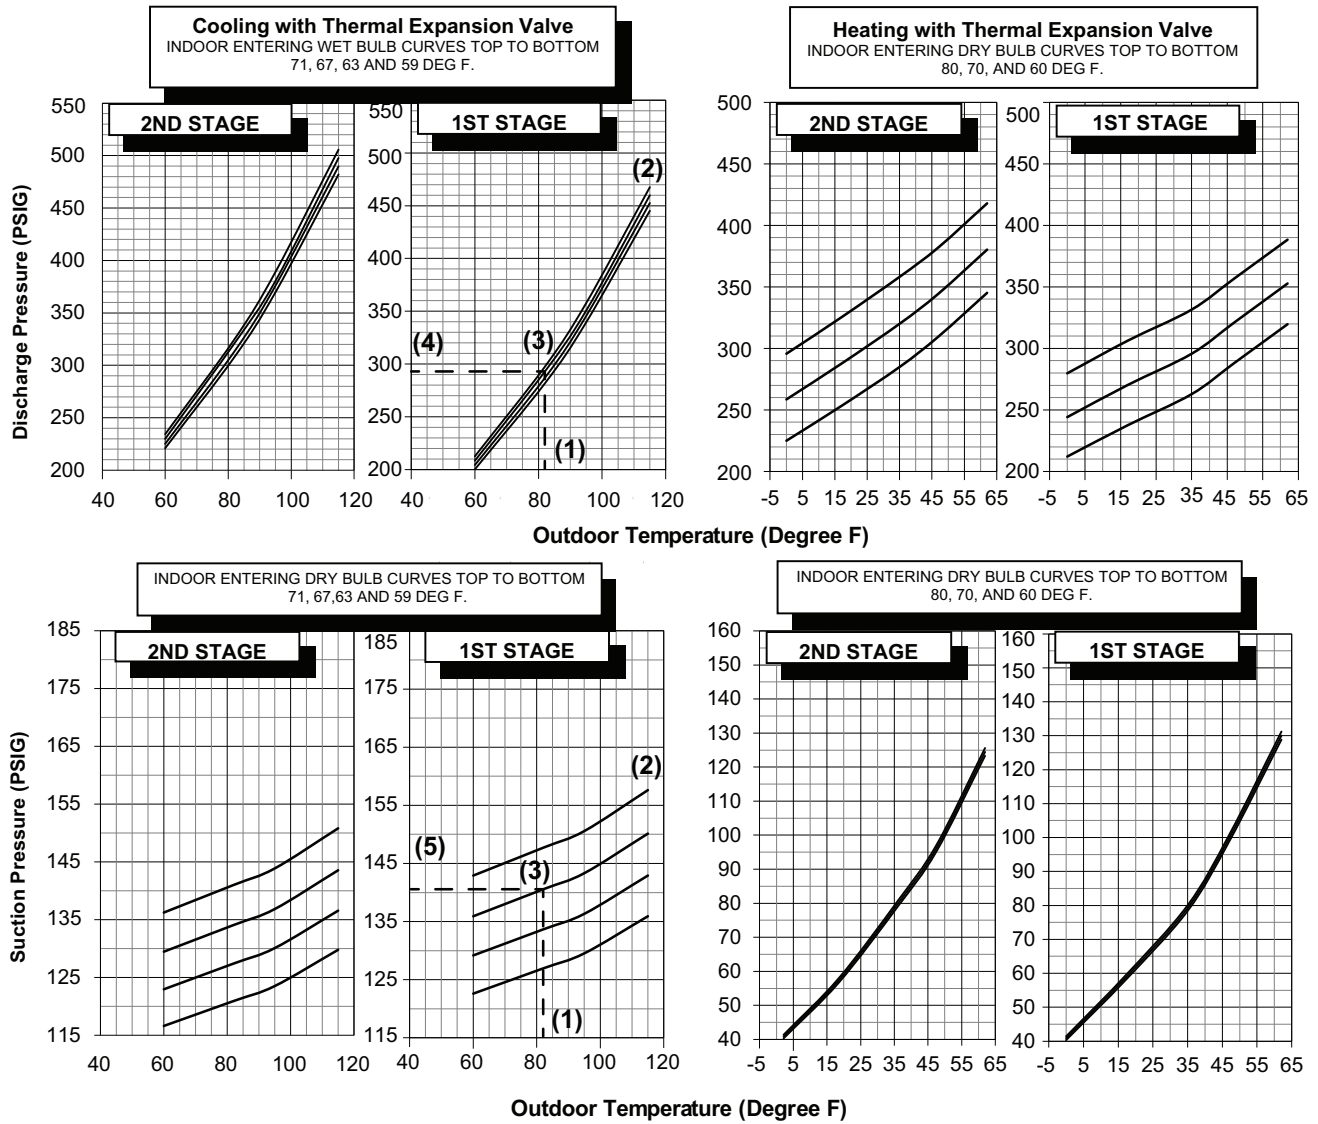

DWG.NO. 5WCZ5030


Pressure Curves

Figure 23. Pressure curves - model 5WCZ5036

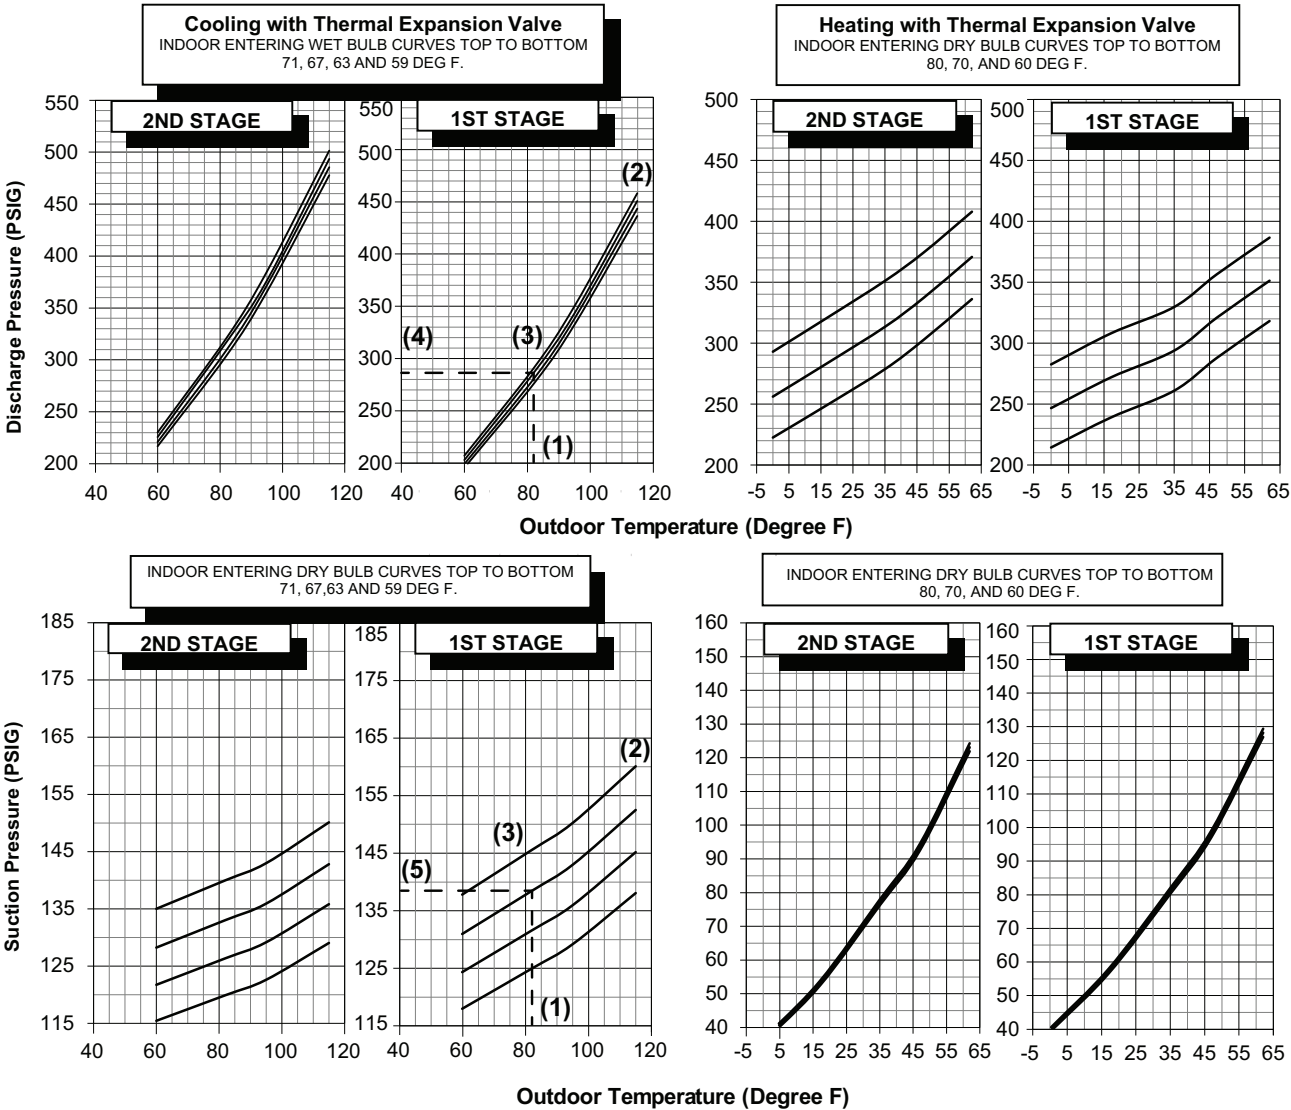


DWG.NO. 5WCZ5036

Figure 24. Pressure curves - model 5WCZ5042

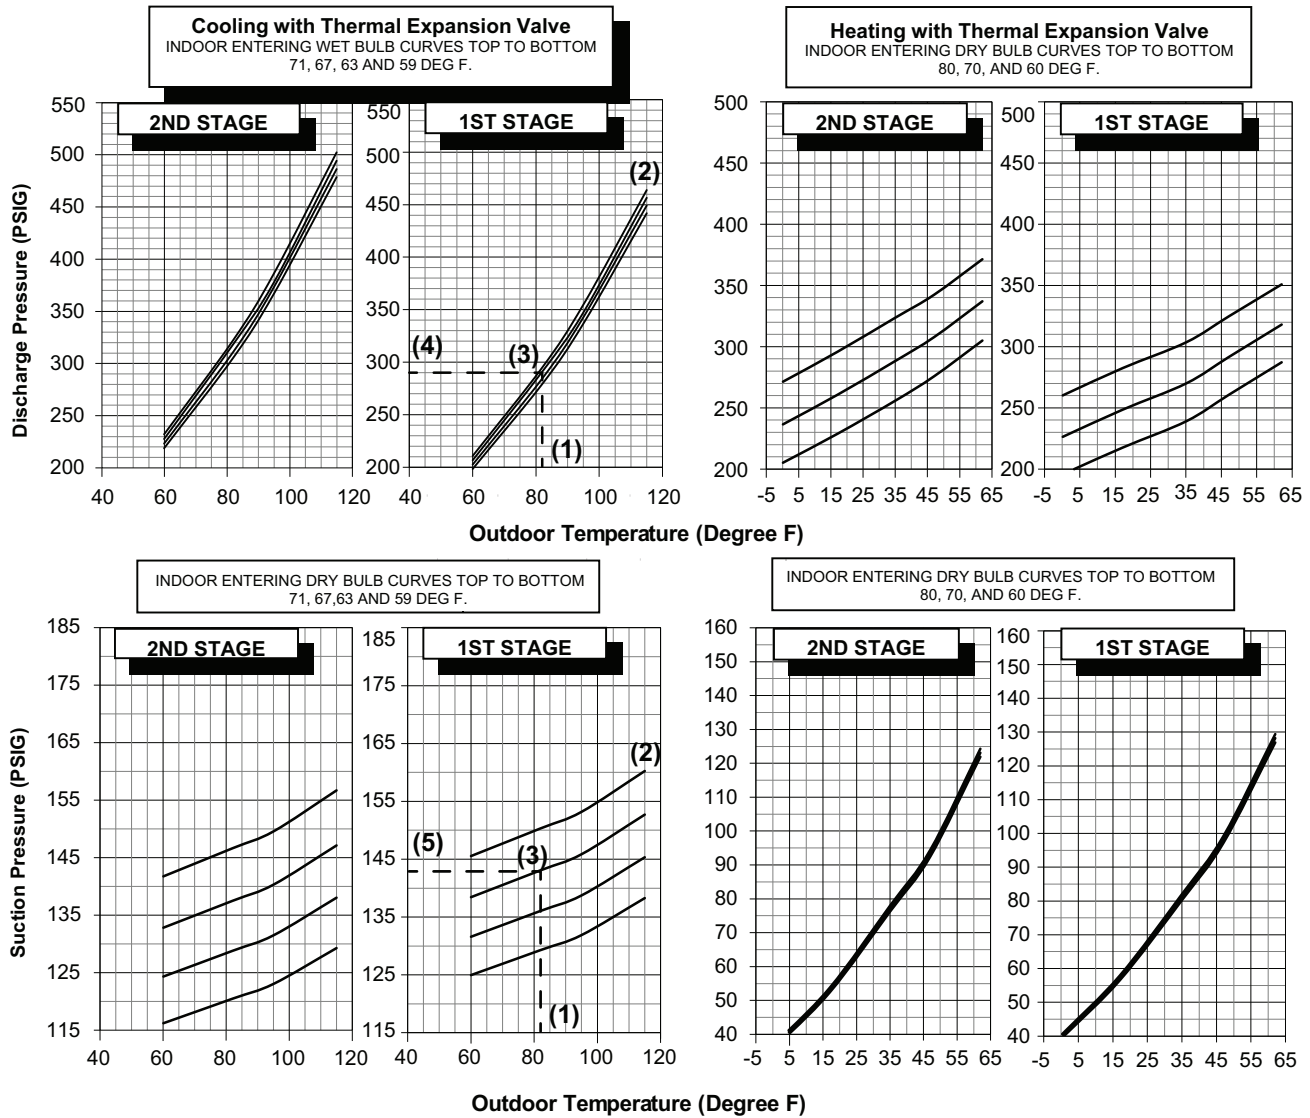


DWG.NO. 5WCZ5042

Figure 25. Pressure curves - model 5WCZ5048

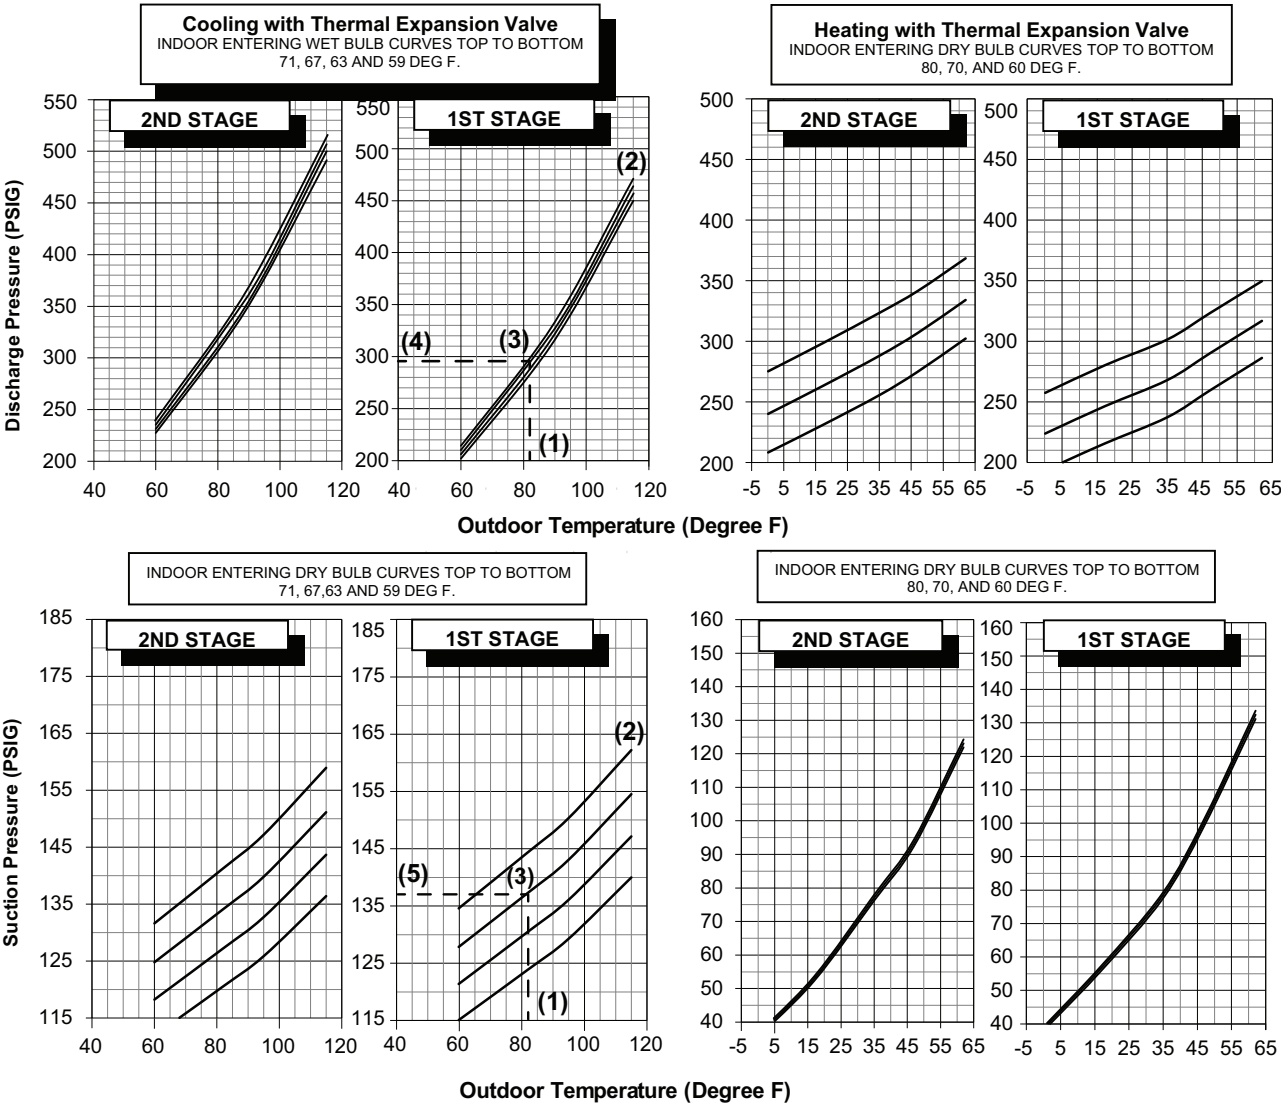

DWG.NO. 5WCZ5048

Figure 26. Pressure curves - model 5WCZ5060

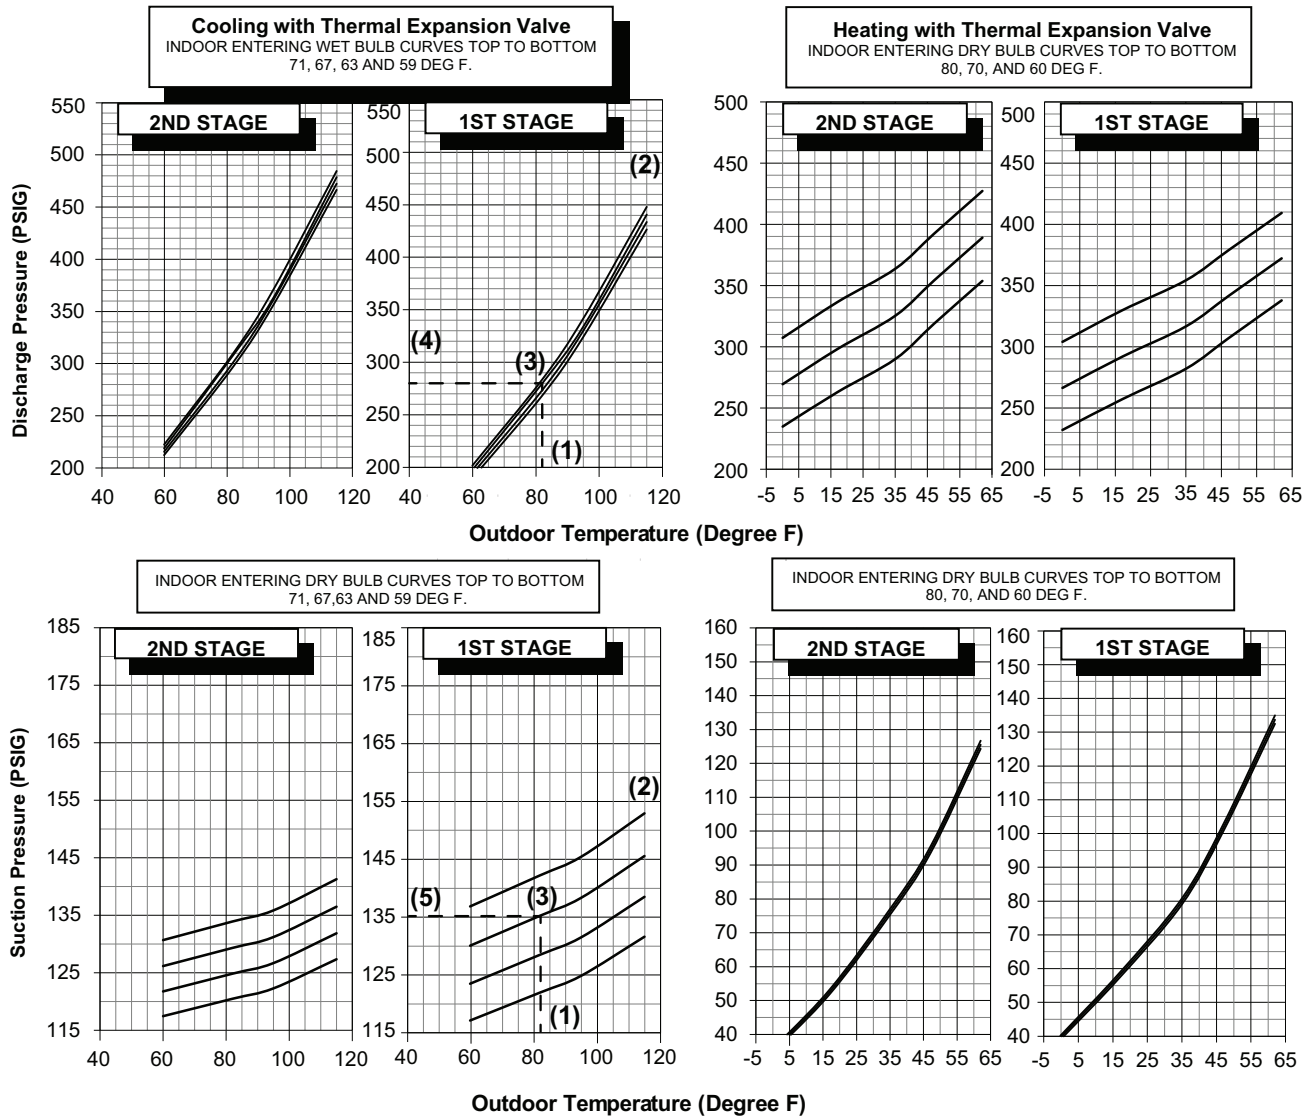

DWG.NO. 5WCZ5060

Indoor Fan Performance

Table 16. Airflow - model 5WCZ5024A

5WCZ5024A		External Static Pressure (in.WG) Cooling CFM Horizontal [Downflow]										
Motor Speed		0.0	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1.0
350 CFM / Ton Setting	Low	—	590 [601]	583 [588]	575 [571]	571 [562]	566 [563]	546 [549]	525 [525]	507 [517]	488 [504]	—
	High	—	721 [734]	724 [731]	727 [722]	717 [706]	706 [702]	701 [706]	695 [695]	678 [692]	660 [681]	—
400 CFM / Ton Setting ^(a)	Low	—	627 [638]	624 [622]	621 [619]	615 [617]	608 [613]	593 [600]	578 [588]	559 [575]	540 [554]	—
	High	—	801 [815]	806 [803]	811 [808]	806 [808]	800 [807]	789 [798]	777 [791]	745 [766]	712 [731]	—
450 CFM / Ton Setting	Low	—	672 [676]	673 [676]	673 [678]	664 [668]	654 [656]	648 [646]	641 [642]	620 [641]	599 [632]	—
	High	—	880 [885]	888 [892]	895 [902]	894 [900]	893 [896]	883 [881]	872 [874]	817 [844]	761 [803]	—

^(a) Factory Default Setting.

Table 17. Airflow - model 5WCZ5030A

5WCZ5030A		External Static Pressure (in.WG) Cooling CFM Horizontal [Downflow]										
Motor Speed		0.0	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1.0
350 CFM / Ton Setting	Low	—	703 [705]	713 [712]	715 [712]	705 [703]	689 [691]	673 [682]	658 [670]	646 [653]	627 [633]	606 [610]
	High	—	888 [892]	900 [901]	911 [912]	914 [913]	912 [909]	898 [897]	881 [887]	865 [874]	847 [857]	785 [783]
400 CFM / Ton Setting ^(a)	Low	—	762 [757]	771 [767]	776 [775]	775 [766]	756 [752]	739 [740]	723 [729]	711 [718]	701 [700]	682 [677]
	High	—	998 [990]	1013 [1008]	1020 [1013]	1025 [1016]	1023 [1015]	1021 [1011]	1015 [1000]	990 [986]	963 [966]	849 [833]
450 CFM / Ton Setting	Low	—	842 [835]	852 [848]	862 [856]	863 [857]	854 [847]	836 [834]	820 [822]	803 [810]	788 [795]	760 [743]
	High	—	1146 [1120]	1153 [1127]	1157 [1133]	1158 [1137]	1159 [1139]	1159 [1138]	1156 [1135]	1144 [1125]	1034 [1040]	922 [927]

^(a) Factory Default Setting.

Table 18. Airflow - model 5WCZ5036A

5WCZ5036A		External Static Pressure (in.WG) Cooling CFM Horizontal [Downflow]										
Motor Speed		0.0	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1.0
350 CFM / Ton Setting	Low	—	812 [808]	821 [816]	829 [818]	826 [811]	818 [795]	804 [777]	791 [762]	778 [751]	770 [742]	751 [723]
	High	—	1056 [1055]	1069 [1068]	1074 [1073]	1076 [1073]	1077 [1074]	1076 [1063]	1070 [1063]	1060 [1052]	1029 [1020]	893 [905]
400 CFM / Ton Setting ^(a)	Low	—	894 [892]	903 [898]	913 [904]	915 [904]	913 [891]	905 [873]	887 [860]	874 [845]	859 [833]	793 [803]
	High	—	1196 [1199]	1199 [1205]	1203 [1208]	1205 [1210]	1208 [1211]	1209 [1209]	1208 [1207]	1202 [1198]	1114 [1099]	994 [984]

Table 18. Airflow - model 5WCZ5036A (continued)

5WCZ5036A		External Static Pressure (in.WG) Cooling CFM Horizontal [Downflow]										
Motor Speed		0.0	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1.0
450 CFM / Ton Setting	Low	—	990 [988]	1002 [994]	1009 [1004]	1013 [1005]	1012 [1003]	1009 [997]	1000 [983]	989 [969]	974 [943]	866 [863]
	High	—	1369 [1381]	1370 [1381]	1372 [1383]	1374 [1381]	1375 [1382]	1375 [1369]	1370 [1373]	1300 [1298]	1199 [1194]	1091 [1085]

(a) Factory Default Setting.

Table 19. Airflow - model 5WCZ5042A

5WCZ5042A		External Static Pressure (in.WG) Cooling CFM Horizontal [Downflow]										
Motor Speed		0.0	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1.0
350 CFM / Ton Setting	Low	—	990 [980]	982 [971]	970 [957]	957 [945]	944 [937]	935 [920]	916 [902]	892 [881]	868 [860]	845 [837]
	High	—	1246 [1251]	1245 [1245]	1240 [1240]	1237 [1238]	1233 [1227]	1222 [1217]	1215 [1207]	1206 [1194]	1196 [1182]	1185 [1168]
400 CFM / Ton Setting ^(a)	Low	—	1103 [1096]	1096 [1089]	1088 [1080]	1077 [1068]	1072 [1061]	1060 [1048]	1048 [1035]	1033 [1019]	1012 [1002]	991 [983]
	High	—	1407 [1103]	1408 [1096]	1403 [1088]	1403 [1077]	1398 [1072]	1390 [1060]	1379 [1048]	1368 [1033]	1359 [1012]	1349 [991]
450 CFM / Ton Setting	Low	—	1234 [1241]	1232 [1236]	1227 [1229]	1221 [1228]	1218 [1216]	1207 [1208]	1200 [1197]	1190 [1187]	1181 [1176]	1171 [1163]
	High	—	1571 [1587]	1575 [1589]	1584 [1586]	1580 [1579]	1575 [1573]	1568 [1561]	1563 [1551]	1556 [1539]	1547 [1529]	1540 [1516]

(a) Factory Default Setting.

Table 20. Airflow - model 5WCZ5048A

5WCZ5048A		External Static Pressure (in.WG) Cooling CFM Horizontal [Downflow]										
Motor Speed		0.0	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1.0
350 CFM / Ton Setting	Low	—	954 [948]	973 [977]	977 [977]	973 [970]	966 [969]	957 [975]	950 [979]	944 [962]	—	—
	High	—	1363 [1354]	1390 [1396]	1396 [1396]	1390 [1386]	1379 [1384]	1368 [1393]	1358 [1399]	1349 [1375]	—	—
400 CFM / Ton Setting ^(a)	Low	—	1121 [1102]	1106 [1106]	1104 [1109]	1106 [1113]	1108 [1116]	1108 [1119]	1104 [1120]	1097 [1118]	—	—
	High	—	1601 [1574]	1580 [1580]	1577 [1585]	1580 [1589]	1583 [1594]	1583 [1599]	1577 [1601]	1567 [1597]	—	—
450 CFM / Ton Setting	Low	—	1223 [1295]	1254 [1277]	1268 [1272]	1271 [1273]	1268 [1274]	1264 [1273]	1261 [1272]	1258 [1273]	—	—
	High	—	1747 [1851]	1792 [1824]	1811 [1817]	1816 [1818]	1812 [1820]	1806 [1819]	1801 [1817]	1797 [1819]	—	—

(a) Factory Default Setting.

Indoor Fan Performance

Table 21. Airflow - model 5WCZ5060A

5WCZ5060A		External Static Pressure (in.WG) Cooling CFM Horizontal [Downflow]										
Motor Speed		0.0	0.1	0.2	0.3	0.4	0.5	0.6	0.7	0.8	0.9	1.0
350 CFM / Ton Setting	Low	—	1163 [1259]	1238 [1219]	1259 [1208]	1256 [1207]	1246 [1206]	1240 [1199]	1237 [1188]	1230 [1185]	—	—
	High	—	1662 [1799]	1768 [1742]	1799 [1726]	1794 [1725]	1780 [1723]	1771 [1712]	1767 [1698]	1757 [1692]	—	—
400 CFM / Ton Setting ^(a)	Low	—	1443 [1410]	1427 [1393]	1422 [1386]	1422 [1384]	1423 [1383]	1422 [1380]	1418 [1368]	1410 [1344]	—	—
	High	—	2062 [2015]	2038 [1990]	2031 [1980]	2032 [1977]	2034 [1976]	2032 [1971]	2025 [1955]	2015 [1920]	—	—


^(a) Factory Default Setting.

Table 22. Heating air volume (CFM) - models 5WCZ5024, 5WCZ5030, 5WCZ5036, 5WCZ5042, 5WCZ5048, and 5WCZ5060

Airflow with Auxiliary Heat (CFM)								
Switch Settings		Selection	Nominal Airflow					
			5WCZ5024	5WCZ5030	5WCZ5036	5WCZ5042	5WCZ5048	5WCZ5060
7 - Off	8 - Off	Low	700 CFM	875CFM	1050 CFM	1225 CFM	1400 CFM	1750 CFM
7 - On	8 - Off	High	800 CFM	1000CFM	1200 CFM	1400 CFM	1600 CFM	2000 CFM
7 - Off	8 - On	High	800 CFM	1000CFM	1200 CFM	1400 CFM	1600 CFM	2000 CFM
7 - On	8 - On	High	800 CFM	1000CFM	1200 CFM	1400 CFM	1600 CFM	2000 CFM

Wiring Diagrams

Figure 27. Models - 5WCZ5024A1, 5WCZ5030A1, 5WCZ5036A1, 5WCZ5042A1, and 5WCZ5048A1

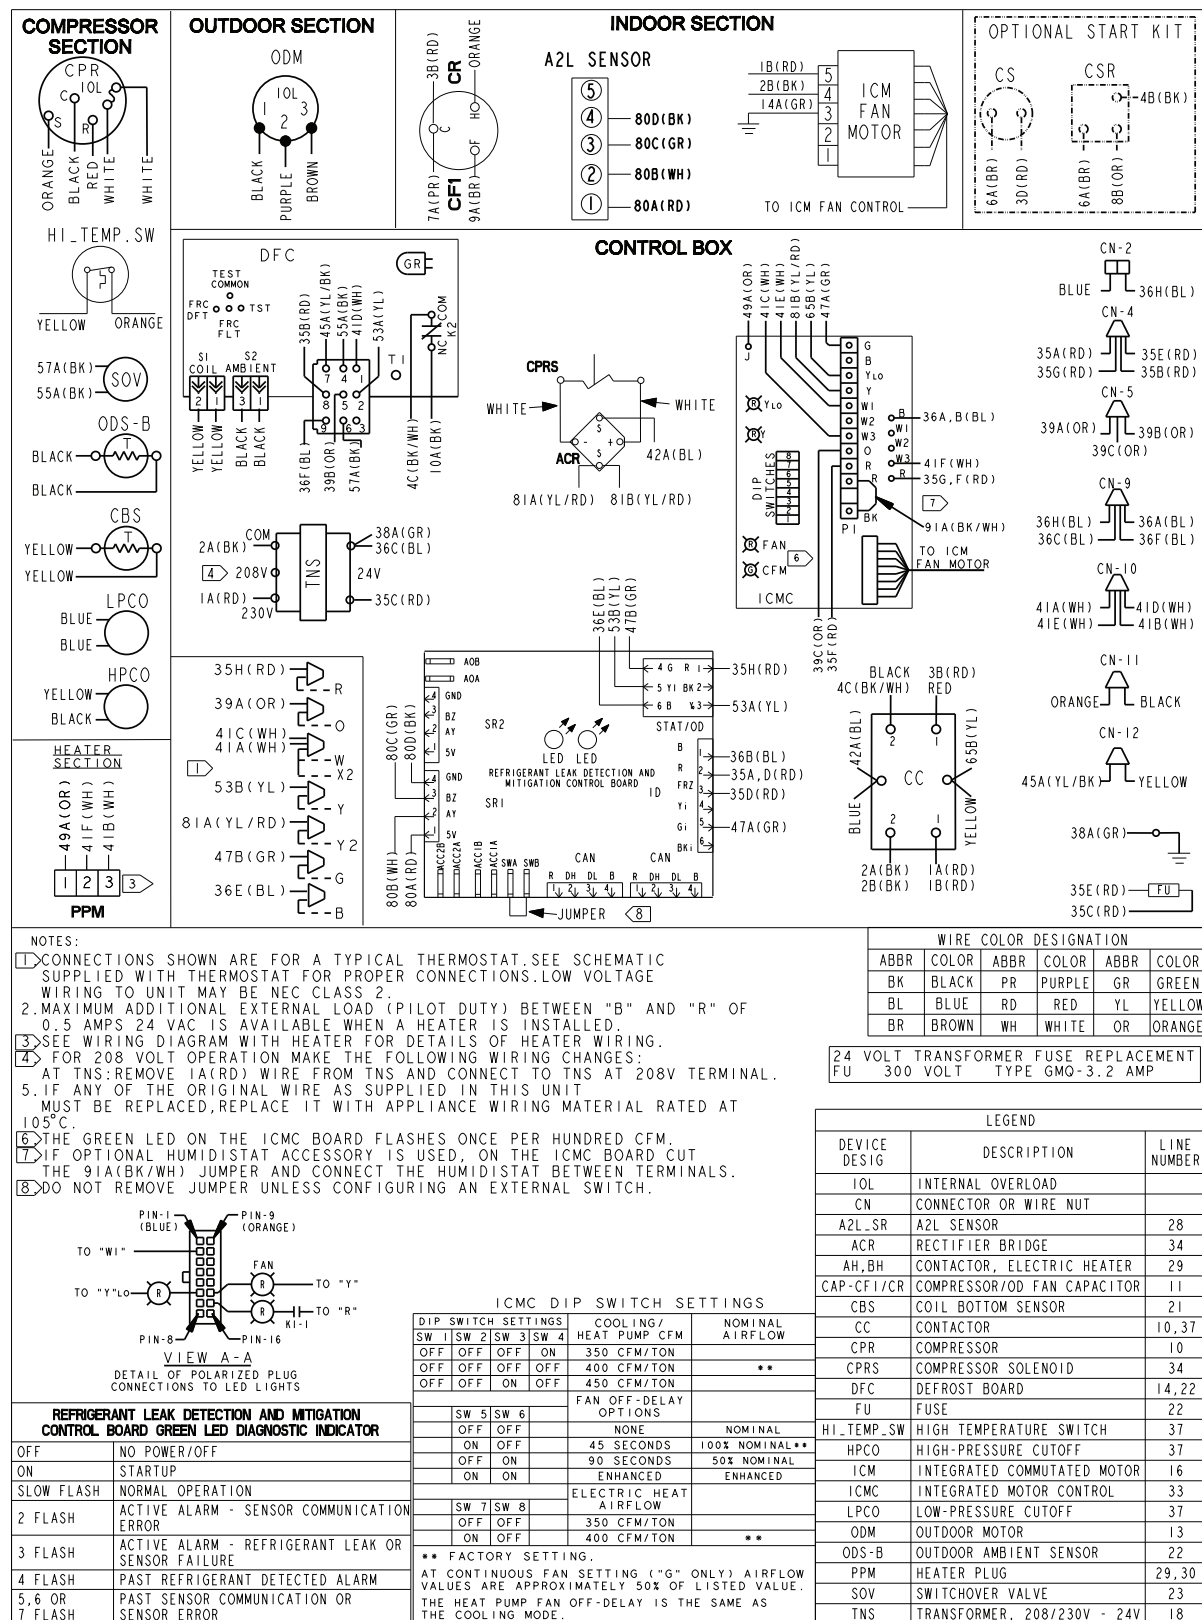

Wiring Diagrams

Figure 28. Models - 5WCZ5024A1, 5WCZ5030A1, 5WCZ5036A1, 5WCZ5042A1, and 5WCZ5048A1

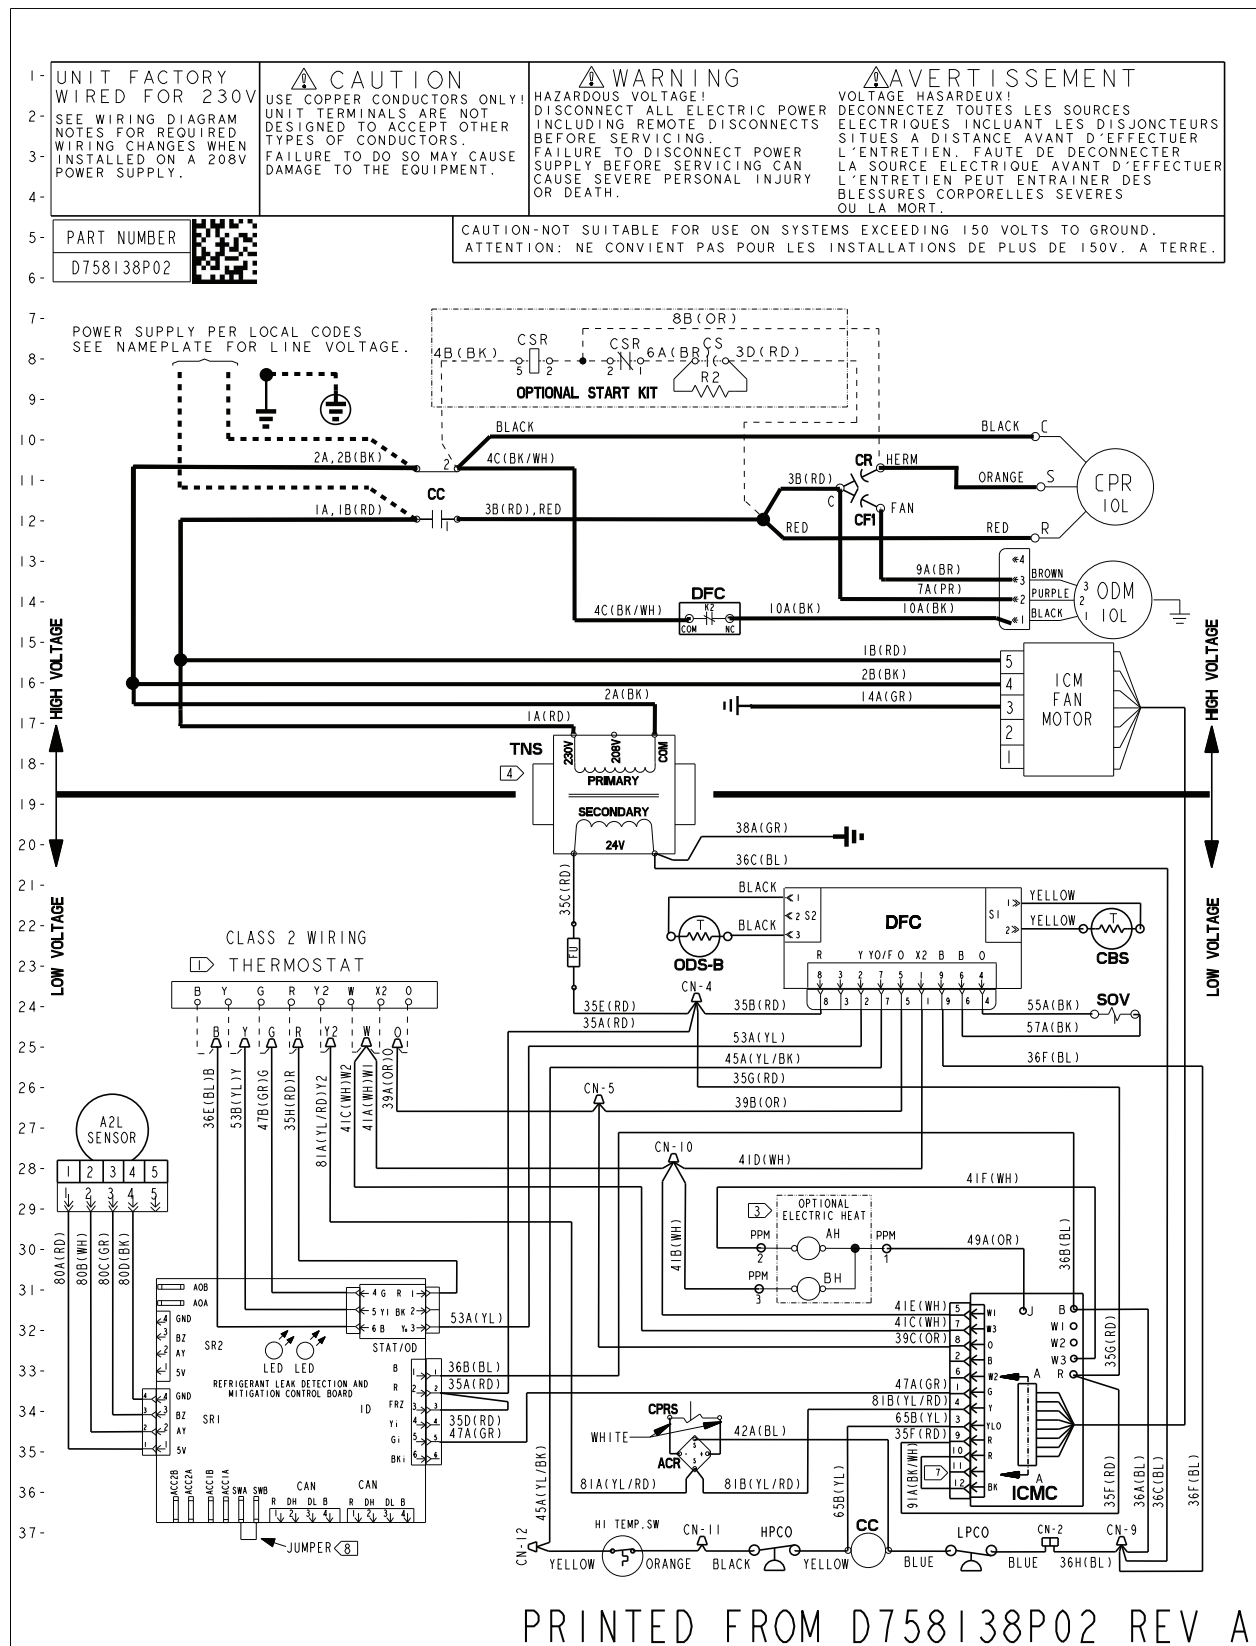


Figure 29. Model - 5WCZ5060A1

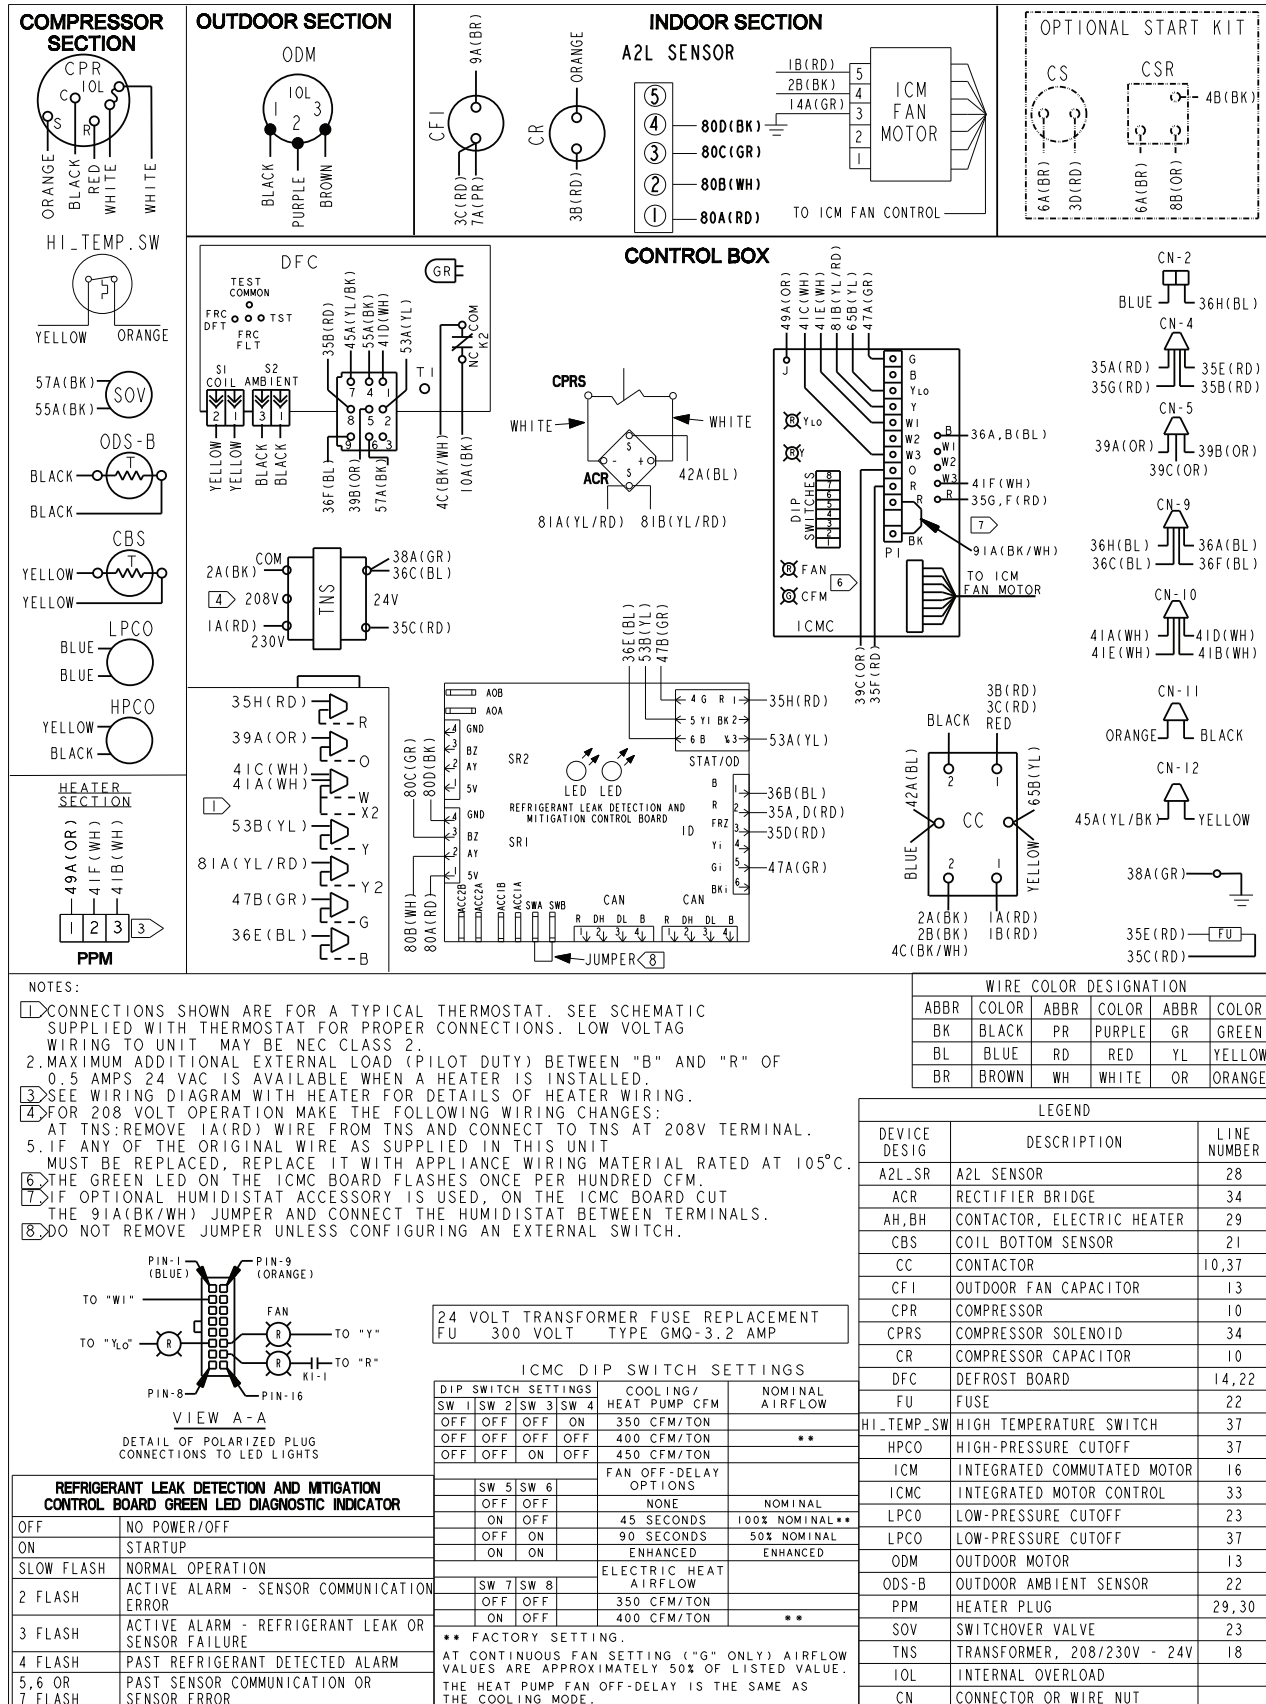


Figure 30. Model - 5WCZ5060A1


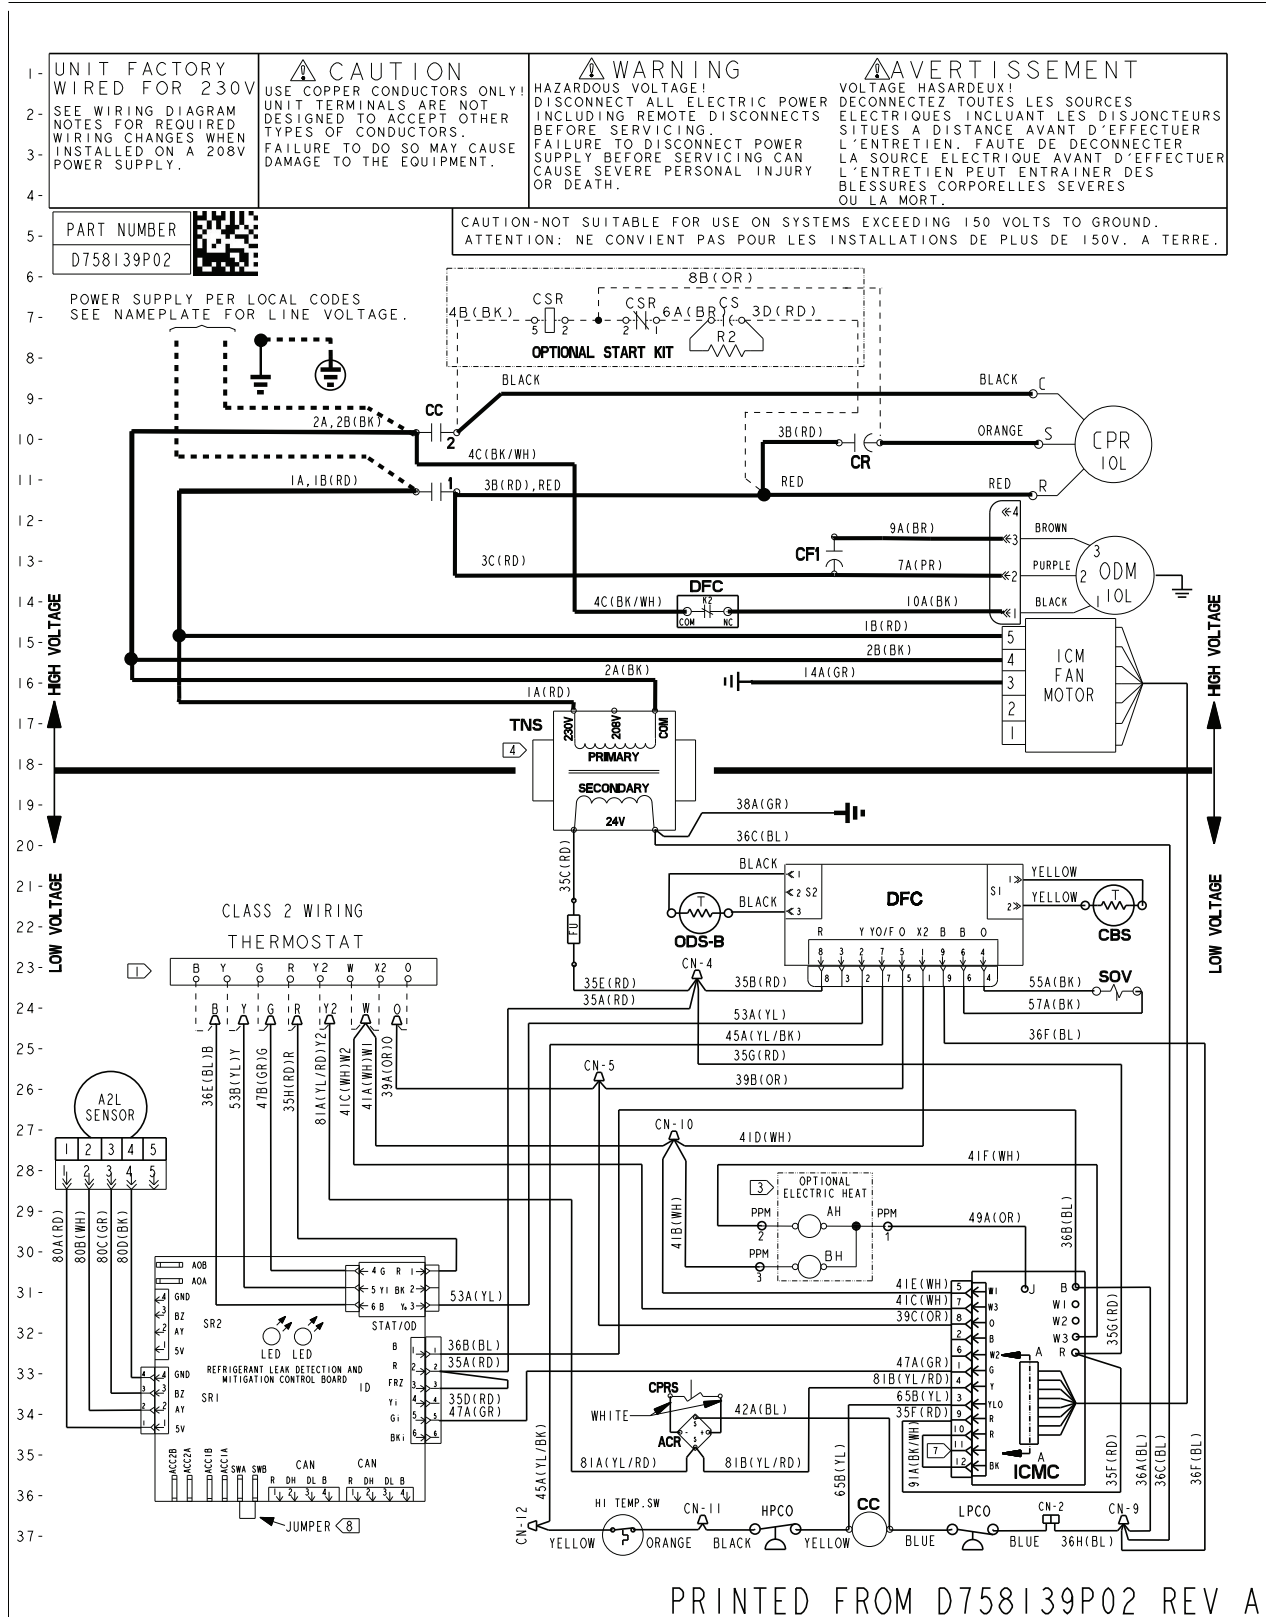


Figure 31. Models - 5WCZ5036A3, 5WCZ5048A3, and 5WCZ5060A3

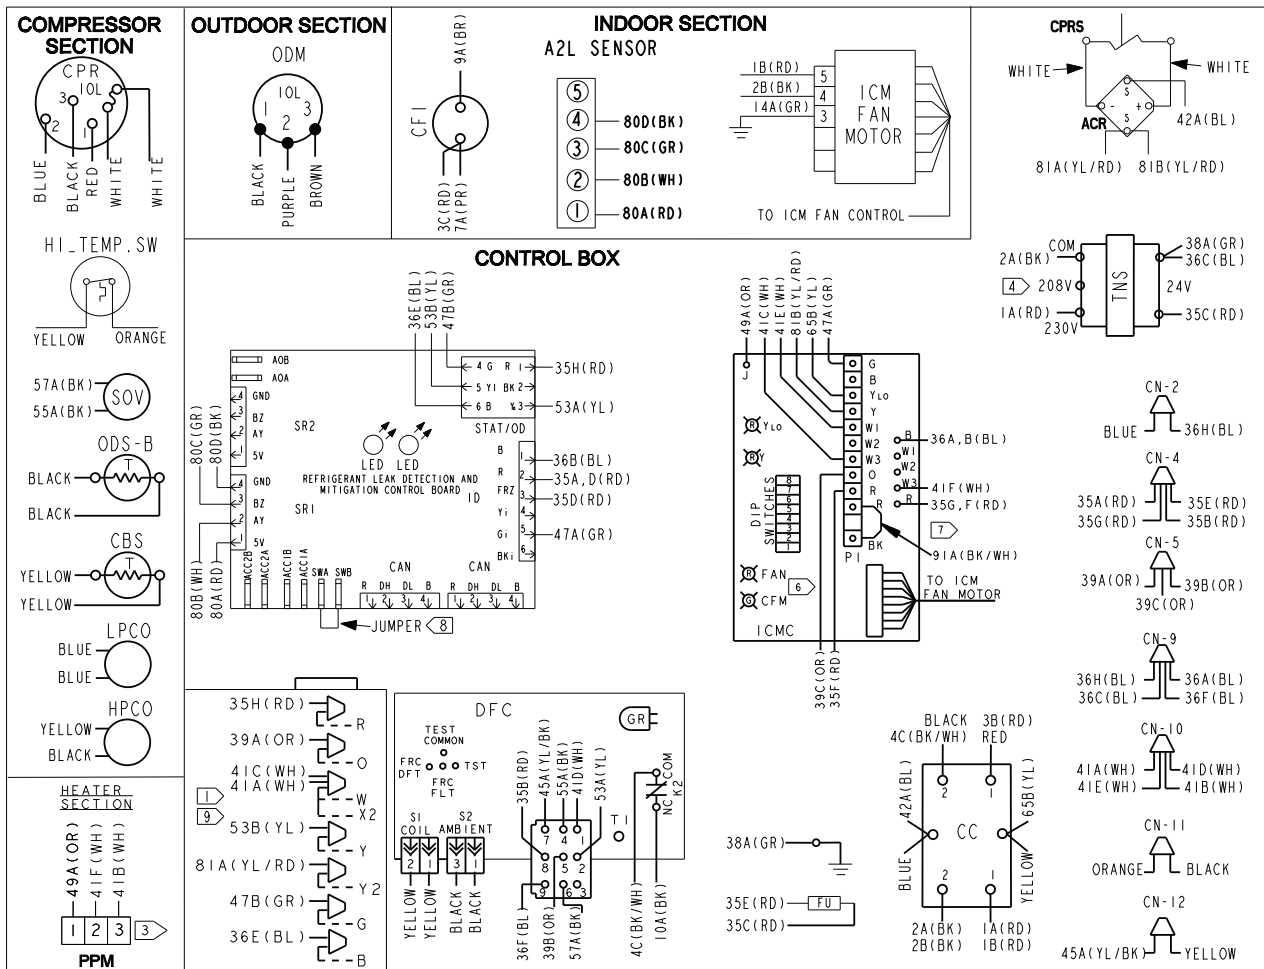


NOTES:

1. CONNECTIONS SHOW ARE FOR A TYPICAL THERMOSTAT. SEE SCHEMATIC SUPPLIED WITH THERMOSTAT FOR PROPER CONNECTIONS. LOW VOLTAGE WIRING TO UNIT MAY BE NEC CLASS 2.
2. MAXIMUM ADDITIONAL EXTERNAL LOAD (PILOT DUTY) BETWEEN "B" AND "R" OF 0.5 AMPS 24 VAC IS AVAILABLE WHEN A HEATER IS INSTALLED.
3. SEE WIRING DIAGRAM WITH HEATER FOR DETAILS OF HEATER WIRING.
4. FOR 208 VOLT OPERATION MAKE THE FOLLOWING WIRING CHANGES:
 - AT TNS: REMOVE 1A(RD) WIRE FROM TNS AND CONNECT TO TNS AT 208V TERMINAL.
 - 5. IF ANY OF THE ORIGINAL WIRE AS SUPPLIED IN THIS UNIT MUST BE REPLACED, REPLACE IT WITH APPLIANCE WIRING MATERIAL RATED AT 105°C.
 - 6. THE GREEN LED ON THE ICMC BOARD FLASHES ONCE PER HUNDRED CFM.
 - 7. IF OPTIONAL HUMIDISTAT ACCESSORY IS USED, ON THE ICMC BOARD CUT THE 91A(BK/WH) JUMPER AND CONNECT THE HUMIDISTAT BETWEEN TERMINALS.
 - 8. DO NOT REMOVE JUMPER UNLESS CONFIGURING AN EXTERNAL SWITCH.
 - 9. WHEN MECHANICAL THERMOSTATS ARE USED, DO NOT CONNECT THE "W" LEAD AT THERMOSTAT.

WIRE COLOR DESIGNATION					
ABBR	COLOR	ABBR	COLOR	ABBR	COLOR
BK	BLACK	PR	PURPLE	GR	GREEN
BL	BLUE	RD	RED	YL	YELLOW
BR	BROWN	WH	WHITE	OR	ORANGE

LEGEND		
DEVICE DESIG	DESCRIPTION	LINE NUMBER
AZL_SR	AZL SENSOR	28
ACR	RECTIFIER BRIDGE	34
AH,BH	CONTACTOR, ELECTRIC HEATER	29
CBS	COIL BOTTOM SENSOR	21
CC	CONTACTOR	9, 37
CFI	OUTDOOR FAN CAPACITOR	13
CPR	COMPRESSOR	10
CPRS	COMPRESSOR SOLENOID	34
DFC	DEFROST BOARD	14,22
FU	FUSE	22
HI_TEMP_SW	HIGH TEMPERATURE SWITCH	37
HPCO	HIGH-PRESSURE CUTOFF	37
ICM	INTEGRATED COMMUTATED MOTOR	16
ICMC	INTEGRATED MOTOR CONTROL	33
LPCO	LOW-PRESSURE CUTOFF	23
LPCO	LOW-PRESSURE CUTOFF	37
ODM	OUTDOOR MOTOR	13
ODS-B	OUTDOOR AMBIENT SENSOR	22
PPM	HEATER PLUG	29,30
SOV	SWITCHOVER VALVE	23
TNS	TRANSFORMER, 208/230V - 24V	18
IOL	INTERNAL OVERLOAD	
CN	CONNECTOR OR WIRE NUT	

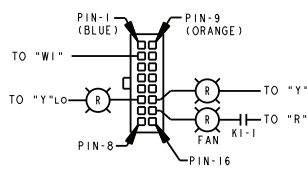

VIEW A-A
DETAIL OF POLARIZED PLUG
CONNECTIONS TO LED LIGHTS

REFRIGERANT LEAK DETECTION AND MITIGATION CONTROL BOARD GREEN LED DIAGNOSTIC INDICATOR	
OFF	NO POWER/OFF
ON	STARTUP
SLOW FLASH	NORMAL OPERATION
2 FLASH	ACTIVE ALARM - SENSOR COMMUNICATION ERROR
3 FLASH	ACTIVE ALARM - REFRIGERANT LEAK OR SENSOR FAILURE
4 FLASH	PAST REFRIGERANT DETECTED ALARM
5, 6 OR 7 FLASH	PAST SENSOR COMMUNICATION OR SENSOR ERROR

ICMC DIP SWITCH SETTINGS				NOMINAL AIRFLOW	
DIP SWITCH SETTINGS				COOLING/ HEAT PUMP CFM	
SW 1	SW 2	SW 3	SW 4	350 CFM/TON	
OFF	OFF	OFF	OFF	400 CFM/TON	**
OFF	OFF	ON	OFF	450 CFM/TON	
				FAN OFF-DELAY OPTIONS	
	SW 5	SW 6		NONE	NOMINAL
	OFF	OFF		45 SECONDS	100% NOMINAL
	ON	OFF		90 SECONDS	50% NOMINAL
	ON	ON		ENHANCED	ENHANCED
				ELECTRIC HEAT AIRFLOW	
	SW 7	SW 8		350 CFM/TON	
	OFF	OFF		400 CFM/TON	**
	ON	OFF			

** FACTORY SETTING.
 AT CONTINUOUS FAN SETTING ("G" ONLY) AIRFLOW VALUES ARE APPROXIMATELY 50% OF LISTED VALUE.
 THE HEAT PUMP FAN OFF-DELAY IS THE SAME AS THE COOLING MODE.

Wiring Diagrams

Figure 32. Models - 5WCZ5036A3, 5WCZ5048A3, and 5WCZ5060A3


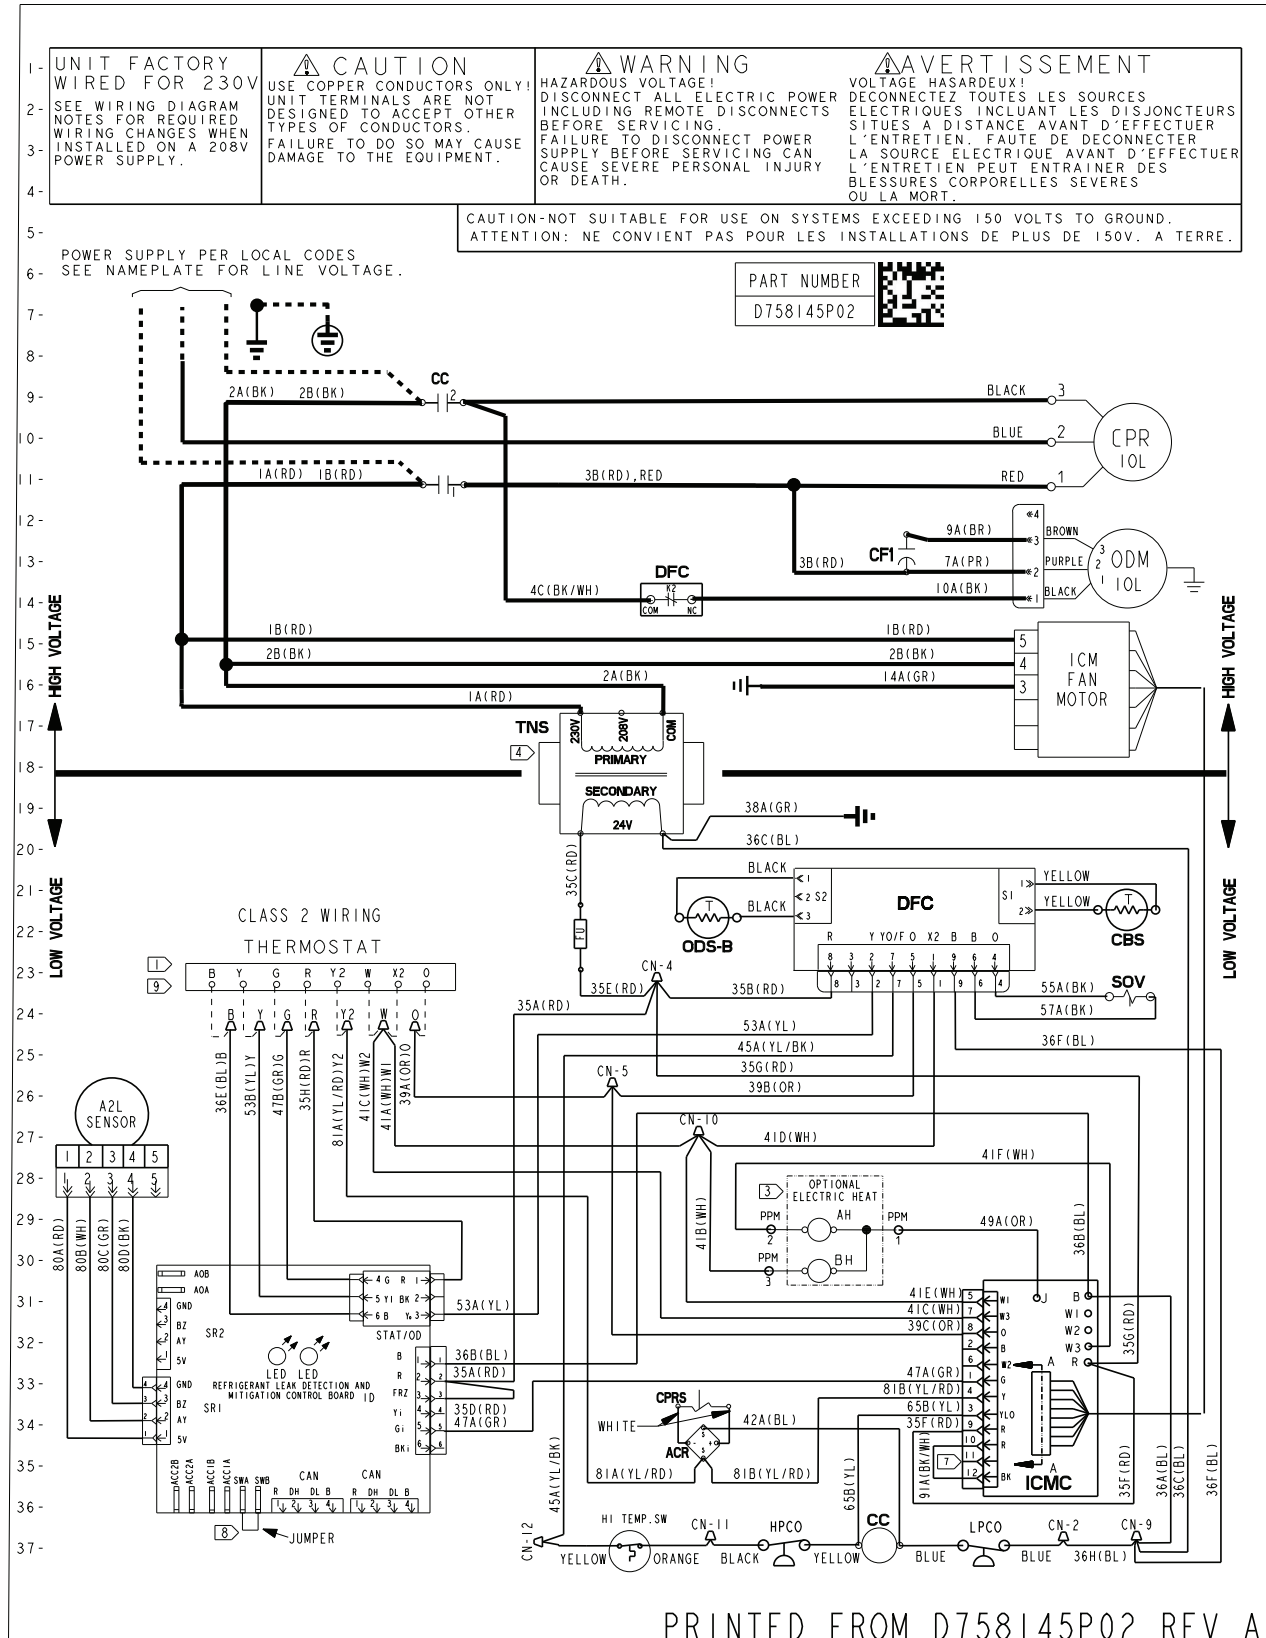


Figure 33. Models - 5WCZ5036A4, 5WCZ5048A4, and 5WCZ5060A4

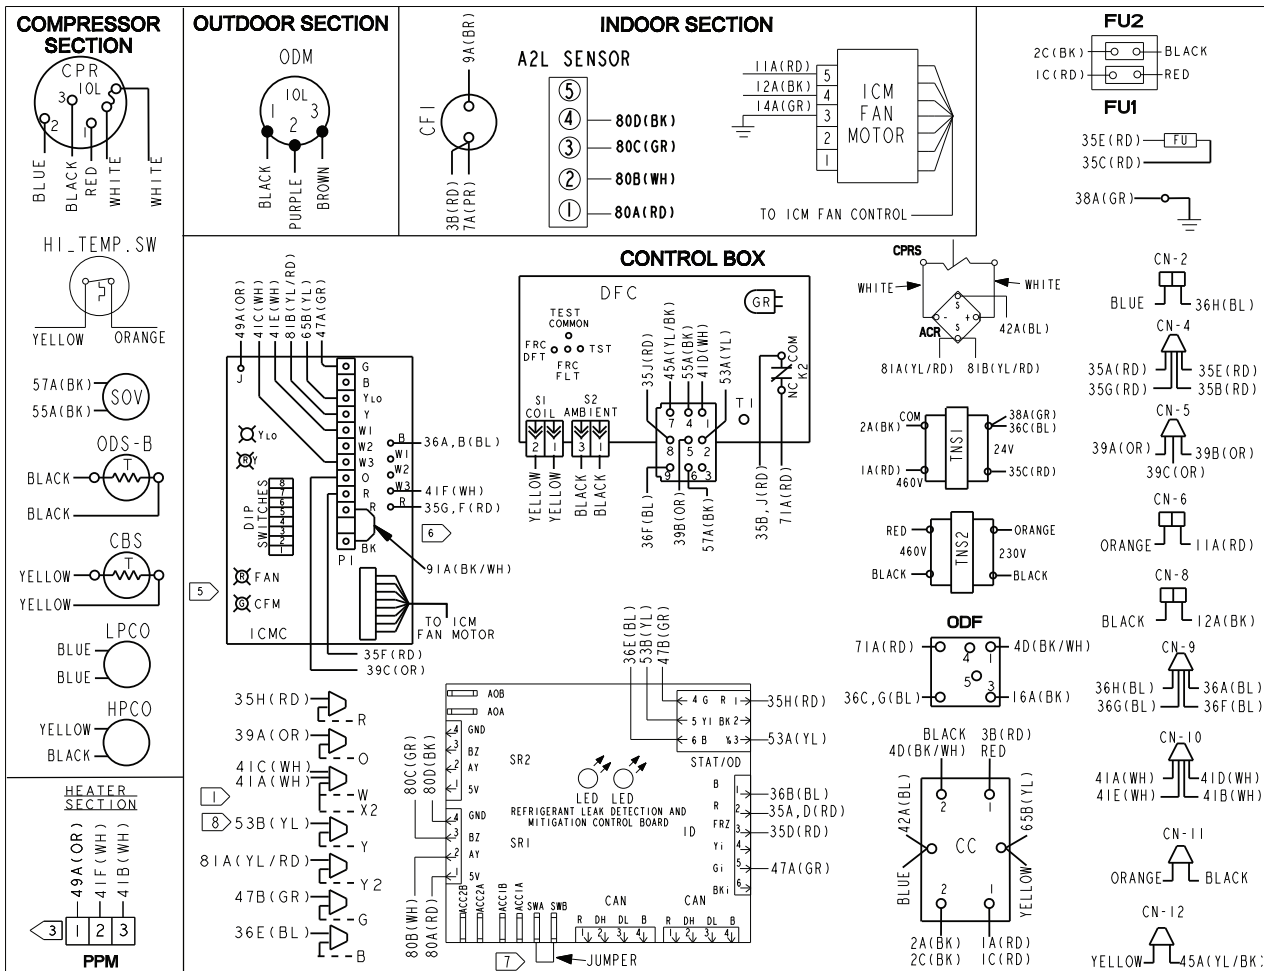

- NOTES:
- 1 CONNECTIONS SHOWN ARE FOR A TYPICAL THERMOSTAT. SEE SCHEMATIC SUPPLIED WITH THERMOSTAT FOR PROPER CONNECTIONS. LOW VOLTAGE WIRING TO UNIT MAY BE NEC CLASS 2.
 - 2 MAXIMUM ADDITIONAL EXTERNAL LOAD (PILOT DUTY) BETWEEN "B" AND "R" OF 0.5 AMPS 24 VAC IS AVAILABLE WHEN A HEATER IS INSTALLED.
 - 3 SEE WIRING DIAGRAM WITH HEATER FOR DETAILS OF HEATER WIRING.
 - 4 IF ANY OF THE ORIGINAL WIRE AS SUPPLIED IN THIS UNIT MUST BE REPLACED, REPLACE IT WITH APPLIANCE WIRING MATERIAL RATED AT 105°C.
 - 5 GREEN LEAD ON THE ICMC BOARD ASHORE ONCE PER HOUR. CFM.
 - 6 IF OPTIONAL HUMIDISTAT ACCESSORY IS USED, ON THE ICMC BOARD CUT THE 91A(BK/WH) JUMPER AND CONNECT THE HUMIDISTAT BETWEEN TERMINALS.
 - 7 DO NOT REMOVE JUMPER UNLESS CONFIGURING AN EXTERNAL SWITCH.
 - 8 WHEN MECHANICAL THERMOSTATS ARE USED, DO NOT CONNECT THE "W" LEAD AT THERMOSTAT.

NOTE: THREE PHASE MOTOR(S) FACTORY SUPPLIED
IN THIS EQUIPMENT, PROTECTED UNDER PRIMARY
SINGLE-PHASE CONDITIONS.

LEGEND		
DEVICE DESIG	DESCRIPTION	LINE NUMBER
A2L.SR	A2L SENSOR	28
ACR	RECTIFIER BRIDGE	34
AH,BH	CONTACTOR, ELECTRIC HEATER	29
CBS	COIL BOTTOM SENSOR	22
CC	CONTACTOR	9, 37
CFI	OUTDOOR FAN CAPACITOR	13
CPR	COMPRESSOR	9
CPRS	COMPRESSOR SOLENOID	34
DFC	DEFROST BOARD	22
FU	FUSE	20
FUSE1	FUSE, AUTO TRANSFORMER	14
FUSE2	FUSE, AUTO TRANSFORMER	14
HI_TEMP_SW	HIGH TEMPERATURE SWITCH	37
HPCO	HIGH-PRESSURE CUTOFF	37
ICM	INTEGRATED COMMUTATED MOTOR	16
ICMC	INTEGRATED MOTOR CONTROL	33
LPCO	LOW-PRESSURE CUTOFF	23
LPCO	LOW-PRESSURE CUTOFF	37
ODF	RELAY	14,20
ODM	OUTDOOR MOTOR	13
ODS-B	OUTDOOR AMBIENT SENSOR	23
PPM	HEATER PLUG	29,30
SOV	SWITCHOVER VALVE	24
TNS	TRANSFORMER, 208/230V - 24V	18
TNS2	460V/230V AUTO TRANSFORMER	13
IOI	INTERNAL OVERLOAD	
CN	CONNECTOR, OR WIRE NUT	

VIEW A-A

DETAIL OF POLARIZED PLUG
CONNECTIONS TO LED LIGHTS


WIRE COLOR DESIGNATION						
ABBR	COLOR	ABBR	COLOR	ABBR	COLOR	
BK	BLACK	PR	PURPLE	GR	GREEN	
BL	BLUE	RD	RED	YL	YELLOW	
BR	BROWN	WH	WHITE	OR	ORANGE	

ICMC DIP SWITCH SETTINGS						
DIP SWITCH SETTINGS				COOLING / HEAT PUMP CFM	NOMINAL AIRFLOW	
SW 1	SW 2	SW 3	SW 4	350 CFM/TON		
OFF	OFF	OFF	OFF	400 CFM/TON	**	
OFF	OFF	ON	OFF	450 CFM/TON		
				FAN OFF-DELAY OPTIONS		
SW 5	SW 6			NONE	NOMINAL	
OFF	OFF			45 SECONDS	100% NOMINAL *	
ON	OFF			90 SECONDS	50% NOMINAL	
OFF	ON			ENHANCED	ENHANCED	
ON	ON					
				ELECTRIC HEAT AIRFLOW		
SW 7	SW 8			350 CFM/TON		
OFF	OFF			400 CFM/TON	**	
ON	OFF					
ON	ON					

** FACTORY SETTING.
 AT CONTINUOUS FAN SETTING ("G" ONLY) AIRFLOW
 VALUES ARE APPROXIMATELY 50% OF LISTED VALUE.
 THE HEAT PUMP FAN OFF-DELAY IS THE SAME AS
 THE COOLING MODE.

Wiring Diagrams

Figure 34. Models - 5WCZ5036A4, 5WCZ5048A4, and 5WCZ5060A4

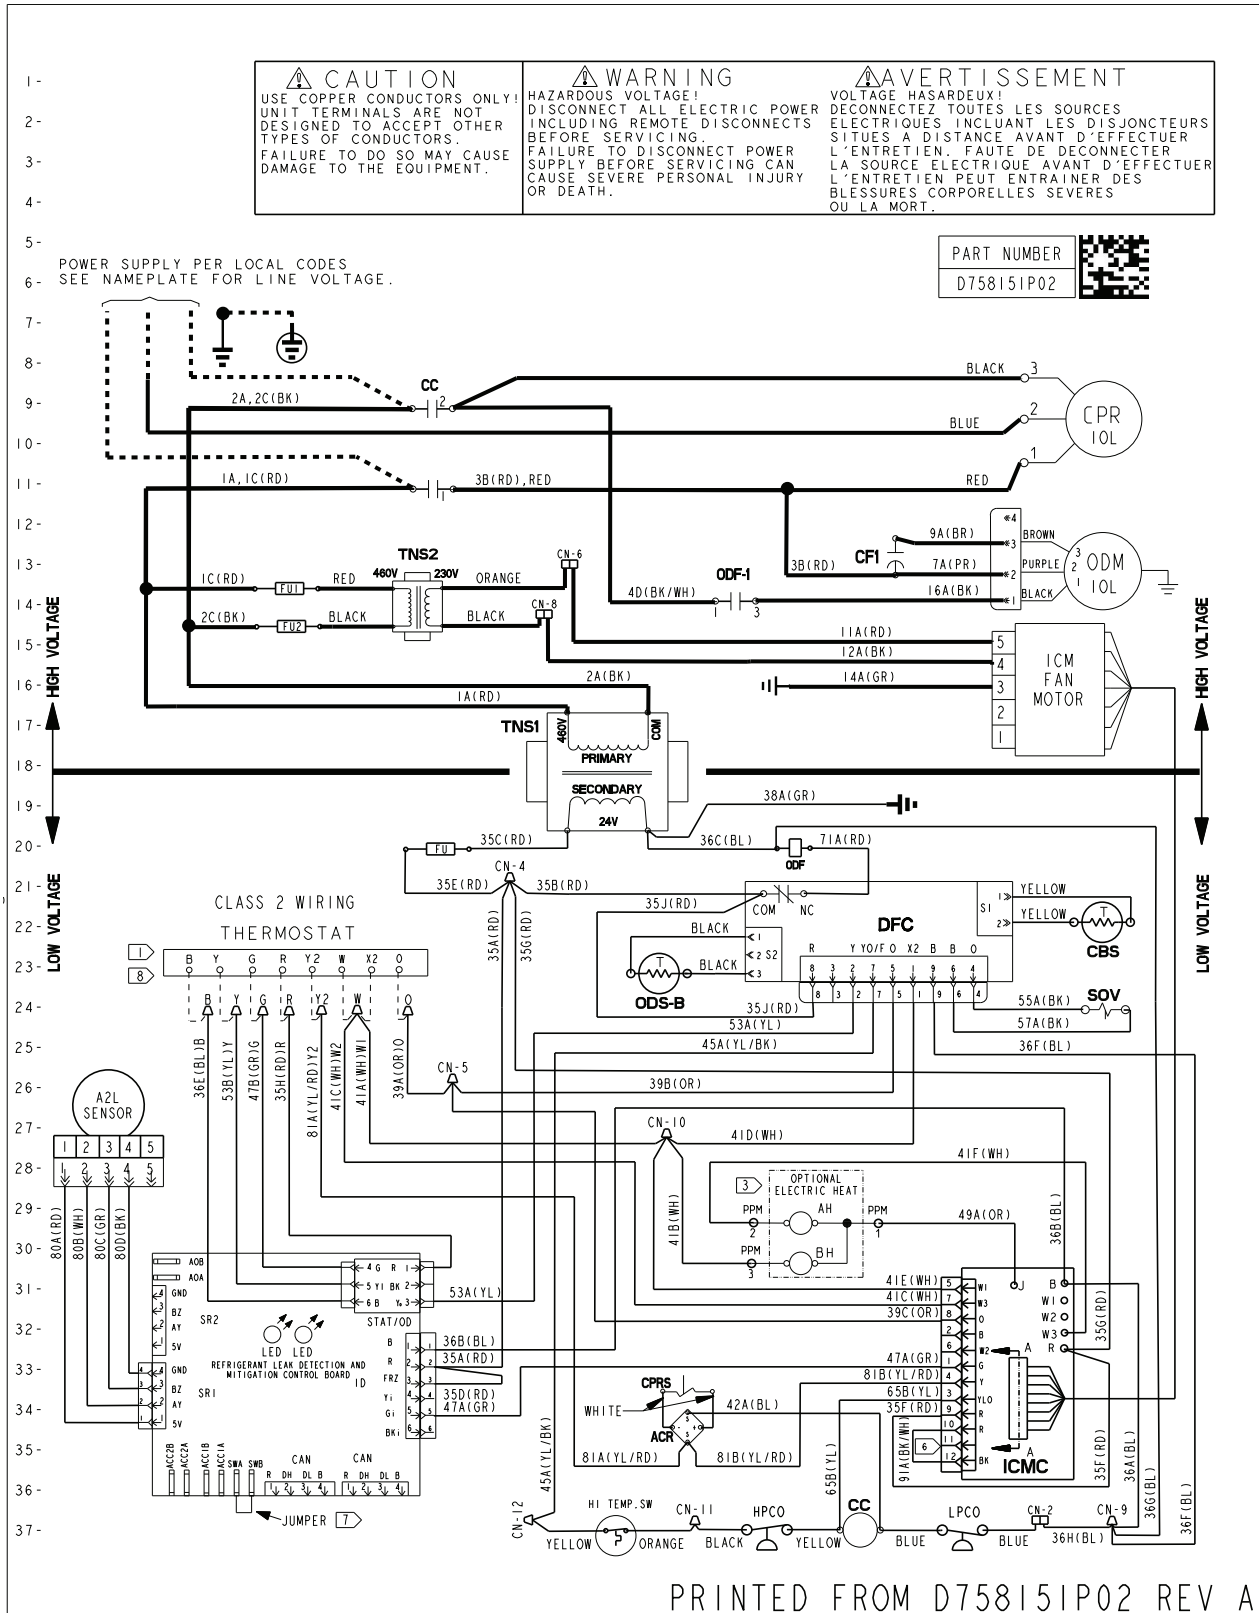

Refrigerant Circuit

Figure 35. Heating refrigeration cycle (for reference only)


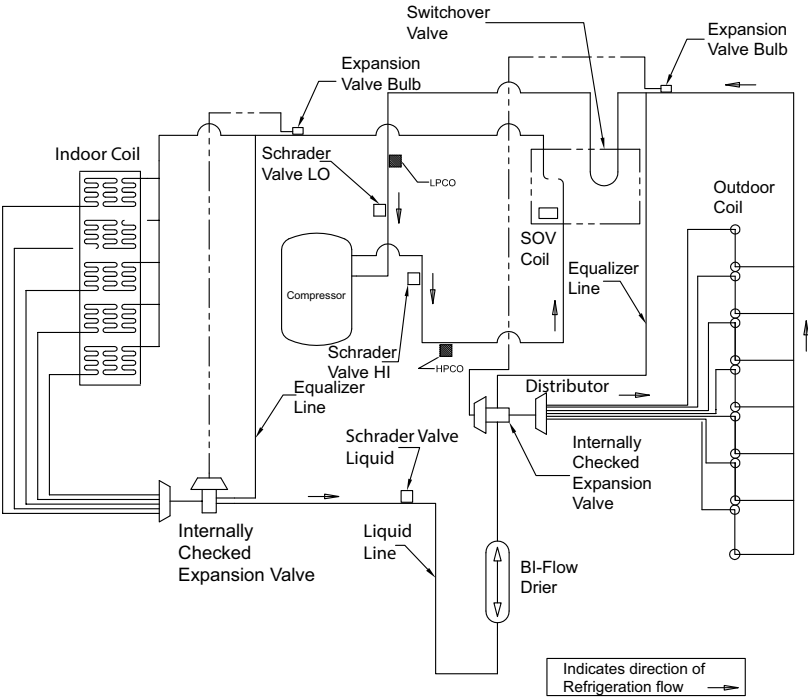


Figure 36. Cooling refrigeration cycle (for reference only)

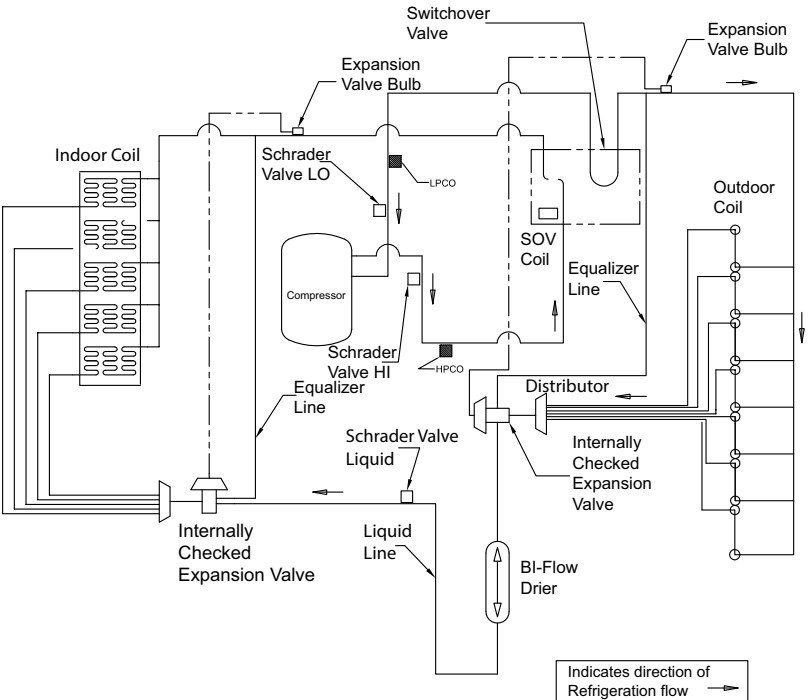

Troubleshooting

Table 23. Troubleshooting

System Faults	Power Supply	High Voltage Wiring	Compr. IOL	Run Capacitor	Start capacitor	Start Relay	Contactors Contacts	Low Voltage Wiring	Control Transformer	Contactors Coil	Low Voltage Fuse	Stuck Compressor	Inefficient Compressor	Refrigerant Undercharge	Refrigerant Overcharge	Excessive Evap. Load	Noncondensables	Restricted O.D. Airflow	O.D. Air Recirculation	TXV Stuck Open	Low Superheat	High Superheat	Restricted I.D. Airflow	Ref. Circuit Restrictions	Mitigation System
Refrigerant Circuit																									
Liquid Pressure too High	—	—	—	—	—	—	—	—	—	—	—	—	—	—	P	—	S	P	S	—	—	—	—	S	—
Liquid Pressure too Low	—	—	—	—	—	—	—	—	—	—	—	—	S	P	—	—	—	—	—	S	—	S	—	S	—
Suction Pressure too High	—	—	—	—	—	—	—	—	—	—	—	—	S	—	P	P	—	—	—	S	S	—	—	—	—
Suction Pressure too Low	—	—	—	—	—	—	—	—	—	—	—	—	—	S	—	—	—	—	—	—	—	S	P	S	—
Liquid Refrigerant Floodback (TXV System)	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	S	S	—	P	—	—
I.D. Coil Frosting	—	—	—	—	—	—	—	—	—	—	—	—	—	P	—	—	—	—	—	—	S	—	P	S	—
Compressor Runs Inadequate or No Cooling	—	—	—	—	—	—	—	—	—	—	—	—	S	P	—	P	S	S	S	—	—	S	P	S	—
Electrical																									
Compressor & O.D. Fan Do Not Start	P	P	—	—	—	—	S	S	P	P	P	—	—	—	—	—	—	—	—	—	—	—	—	—	P ^(a)
Compressor will not Start but O.D. Fan Runs	—	P	S	P	P	P	—	—	—	—	—	S	—	—	—	—	—	—	—	—	—	—	—	—	—
O.D. Fan will Not Start	—	P	—	P	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
Compressor Hums but will Not Start	—	P	—	P	P	P	S	—	—	—	—	S	—	—	—	—	—	—	—	—	—	—	—	—	—
Compressor Cycles on IOL	—	P	S	P	P	P	S	—	—	—	—	P	S	P	S	S	S	S	S	—	—	S	—	S	—
I.D. Blower willnot Start	P	S	—	—	—	—	—	S	P	—	P	—	—	—	—	—	—	—	—	—	—	—	—	—	—

Note: P-primary causes / S-secondary causes

^(a) See, [Verification of Mitigation Actions](#), p. 33

Important Product Information

Packaged Unit Serial Number _____

Packaged Unit Model Number _____

Date of Installation _____

Dealer _____

Service Information

Call your installing dealer if the unit is inoperative. Before you call, always check the following to be sure service is required:

1. Be sure the main switch that supplies power to the unit is in the ON position.
2. Replace any burned-out fuses or reset circuit breakers.
3. Be sure the thermostat is properly set.

Service Phone _____

About Trane and American Standard Heating and Air Conditioning

Trane and American Standard create comfortable, energy efficient indoor environments for residential applications. For more information, please visit www.trane.com or www.americanstandardair.com.

The manufacturer has a policy of continuous data improvement and it reserves the right to change design and specifications without notice. We are committed to using environmentally conscious print practices.