

# Installation and Operation Manual

## Condensing Units

### Models

A4AC4018D

A4AC4023D

A4AC4024D

A4AC4029D


A4AC4030D

A4AC4036D

A4AC4042D

A4AC4048D

A4AC4060D

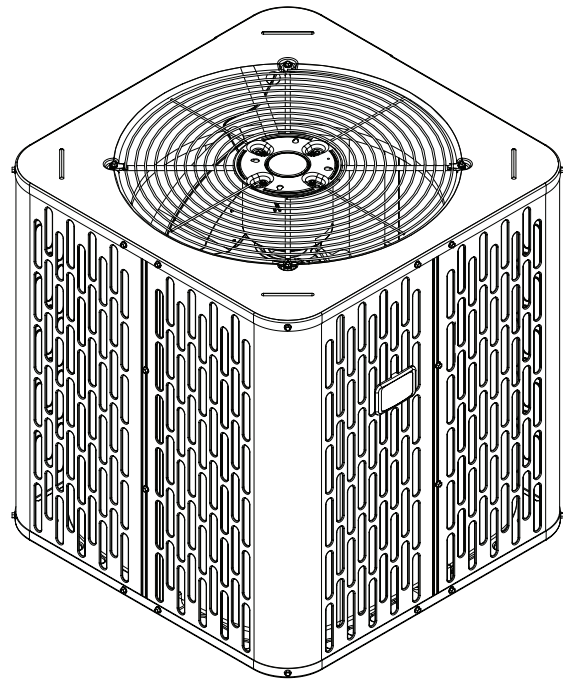

**Note:** "Graphics in this document are for representation only.  
Actual model may differ in appearance."

### SAFETY WARNING

Only qualified personnel should install and service the equipment. The installation, starting up, and servicing of heating, ventilating, and air-conditioning equipment can be hazardous and requires specific knowledge and training. Improperly installed, adjusted or altered equipment by an unqualified person could result in death or serious injury. When working on the equipment, observe all precautions in the literature and on the tags, stickers, and labels that are attached to the equipment.

ALL phases of this installation must comply with **NATIONAL, STATE AND LOCAL CODES.**

**IMPORTANT** – This Document is customer property and is to remain with this unit. Please return to service information pack upon completion of work.

These instructions do not cover all variations in systems or provide for every possible contingency to be met in connection with the installation. Should further information be desired

or should particular problems arise which are not covered sufficiently for the purchaser's purposes, the matter should be referred to your installing dealer or local distributor.

**Note:** The manufacturer recommends installing only approved matched indoor and outdoor systems. All of the manufacturer's split systems are AHRI rated with Piston/TXV/EEV indoor systems. Some of the benefits of installing approved matched indoor and outdoor split systems are maximum efficiency, optimum performance and the best overall system reliability.

## Section 1. Safety

### **WARNING**

This information is intended for use by individuals possessing adequate backgrounds of electrical and mechanical experience. Any attempt to repair a central air conditioning product may result in personal injury and/or property damage. The manufacture or seller cannot be responsible for the interpretation of this information, nor can it assume any liability in connection with its use.

### **WARNING**

These units use R-410A refrigerant which operates at 50 to 70% higher pressures than R-22. Use only R-410A approved service equipment. Refrigerant cylinders are painted a "Rose" color to indicate the type of refrigerant and may contain a "dip" tube to allow for charging of liquid refrigerant into the system. All R-410A systems use a POE oil that readily absorbs moisture from the atmosphere. To limit this "hygroscopic" action, the system should remain sealed whenever possible. If a system has been open to the atmosphere for more than 4 hours, the compressor oil must be replaced. Never break a vacuum with air and always change the driers when opening the system for component replacement. For specific handling concerns with R-410A and POE oil reference Retrofit Bulletins SS-APG006-EN and APP-APG011-EN or APP-APG012-EN.

### **WARNING**

**UNIT CONTAINS R-410A REFRIGERANT!**  
R-410A operating pressures exceed the limit of R-22. Proper service equipment is required. Failure to use proper service tools may result in equipment damage or personal injury.

#### **SERVICE**

**USE ONLY R-410A REFRIGERANT AND APPROVED POE COMPRESSOR OIL.**

### **WARNING**

Extreme caution should be exercised when opening the Liquid Line Service Valve. Turn counterclockwise until the valve stem just touches the rolled edge. No torque is required. Failure to follow this warning will result in abrupt release of system charge and may result in personal injury and /or property damage.

### **WARNING**

**LIVE ELECTRICAL COMPONENTS!**  
During installation, testing, servicing, and troubleshooting of this product, it may be necessary to work with live electrical components. Failure to follow all electrical safety precautions when exposed to live electrical components could result in death or serious injury.

### **CAUTION**

If using existing refrigerant lines make certain that all joints are brazed, not soldered.

### **CAUTION**

Scroll compressor dome temperatures may be hot. Do not touch the top of compressor; it may cause minor to severe burning.

### **WARNING**

**WARNING!**  
**This product can expose you to chemicals including lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)**

# Table of Contents

|  |    |
|--|----|
| Section 1. Safety.....   | 2  |
| Section 2. Unit Location Considerations .....  | 4  |
| Section 3. Unit Preparation.....   | 5  |
| Section 4. Setting the Unit.....   | 5  |
| Section 5. Refrigerant Line Considerations.....  | 5  |
| Section 6. Refrigerant Line Routing .....  | 6  |
| Section 7. Refrigerant Line Brazing.....   | 8  |
| Section 8. Refrigerant Line Leak Check.....  | 8  |
| Section 9. Evacuation .....  | 9  |
| Section 10. Service Valves .....   | 9  |
| Section 11. Electrical - Low Voltage .....   | 10 |
| Section 12. Electrical - High Voltage .....  | 11 |
| Section 13. Start Up.....  | 11 |
| Section 14. System Charge Adjustment (Systems can be rated with TXV, EEV or Piston)..... | 12 |
| Section 15. Checkout Procedures .....  | 16 |
| Section 16. Refrigerant Circuits (Reference only).....                                   | 16 |
| Section 17. Wiring Diagrams.....   | 17 |
| Section 18. Pressure Curves.....   | 20 |


## Section 2. Unit Location Considerations

### 2.1 Unit Dimensions and Weight

Table 2.1

| Unit Dimensions and Weight |                    |              |
|----------------------------|--------------------|--------------|
| Models                     | H x D x W (in)     | Weight* (lb) |
| A4AC4018D                  | 28.6 x 25.6 x 25.6 | 134          |
| A4AC4023D                  | 28.6 x 25.6 x 25.6 | 134          |
| A4AC4024D                  | 28.6 x 29.8 x 29.8 | 162          |
| A4AC4029D                  | 32.6 x 29.8 x 29.8 | 161          |
| A4AC4030D                  | 36.6 x 29.8 x 29.8 | 184          |
| A4AC4036D                  | 32.6 x 29.8 x 29.8 | 161          |
| A4AC4042D                  | 36.6 x 34.3 x 34.3 | 212          |
| A4AC4048D                  | 44.6 x 34.3 x 34.3 | 256          |
| A4AC4060D                  | 44.6 x 34.3 x 34.3 | 252          |

\* Weight values are estimated.

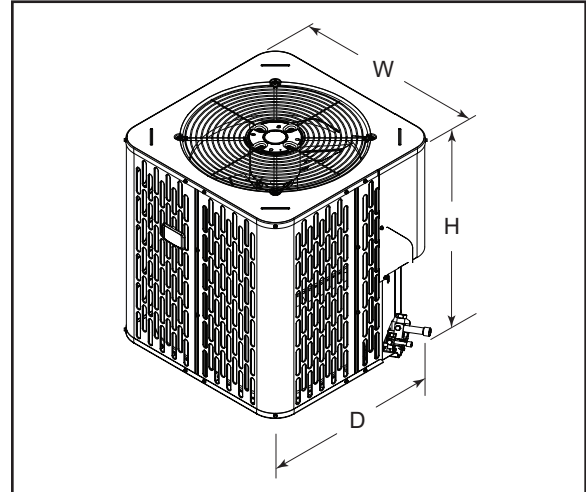




When mounting the outdoor unit on a roof, be sure the roof will support the unit's weight.

Properly selected isolation is recommended to alleviate sound or vibration transmission to the building structure.

### 2.2 Refrigerant Piping Limits

1. The maximum length of refrigerant lines from outdoor to indoor unit should NOT exceed sixty (60) feet.
2. The maximum vertical change should not exceed sixty (60) feet.
3. Service valve connection diameters are shown in Table 5.1.

**Note:** For line lengths greater than sixty (60) feet, Refer to Refrigerant Piping Application Guide, SS-APG006F-EN, or Refrigerant Piping Software Program.

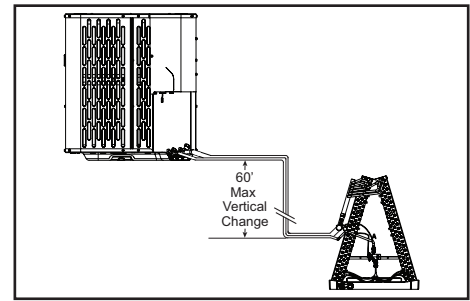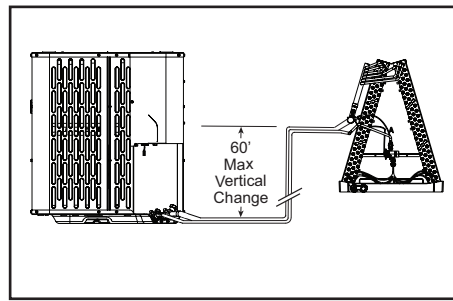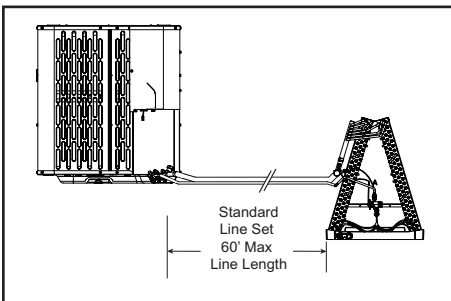

### 2.3 Suggested Locations for Best Reliability


Ensure the top discharge area is unrestricted for at least five (5) feet above the unit.

Three (3) feet clearance must be provided in front of the control box (access panels) and any other side requiring service.

Do not locate close to bedrooms as operational sounds may be objectionable.

Position the outdoor unit a minimum of 12" from any wall or surrounding shrubbery to ensure adequate airflow.

Outdoor unit location must be far enough away from any structure to prevent excess roof runoff water from pouring directly on the unit.

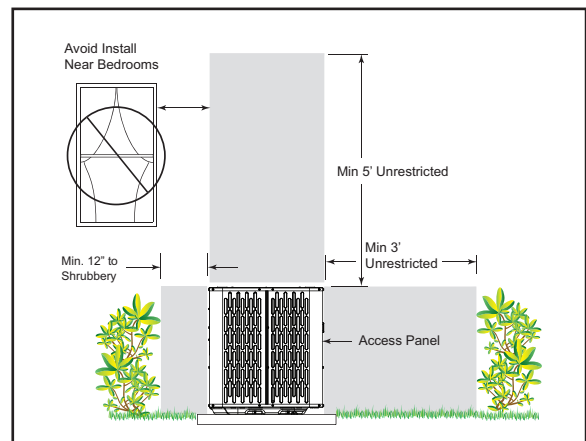

## Section 3. Unit Preparation

### 3.1 Prepare The Unit For Installation

**STEP 1** - Check for damage and report promptly to the carrier any damage found to the unit.

## Section 4. Setting the Unit

### 4.1 Pad Installation

When installing the unit on a support pad, such as a concrete slab, consider the following:

- The pad should be at least 1" larger than the unit on all sides.
- The pad must be separate from any structure.
- The pad must be level.
- The pad should be high enough above grade to allow for drainage.
- The pad location must comply with National, State, and Local codes.

## Section 5. Refrigerant Line Considerations

### 5.1 Refrigerant Line and Service Valve Connection Sizes

**Table 5.1**

| Models    | Line Sizes |             | Service Valve Connection Sizes |                        |
|-----------|------------|-------------|--------------------------------|------------------------|
|           | Vapor Line | Liquid Line | Vapor Line Connection          | Liquid Line Connection |
| A4AC4018D | 3/4        | 3/8         | 3/4                            | 3/8                    |
| A4AC4023D | 3/4        | 3/8         | 3/4                            | 3/8                    |
| A4AC4024D | 3/4        | 3/8         | 3/4                            | 3/8                    |
| A4AC4029D | 3/4        | 3/8         | 3/4                            | 3/8                    |
| A4AC4030D | 3/4        | 3/8         | 3/4                            | 3/8                    |
| A4AC4036D | 3/4        | 3/8         | 3/4                            | 3/8                    |
| A4AC4042D | 7/8        | 3/8         | 3/4                            | 3/8                    |
| A4AC4048D | 7/8        | 3/8         | 7/8                            | 3/8                    |
| A4AC4060D | 1-1/8      | 3/8         | 7/8                            | 3/8                    |

### 5.2 Factory Charge

The outdoor condensing units are factory charged with the system charge required for the outdoor condensing unit, ten (10) feet of tested connecting line, and the smallest rated indoor evaporative coil match. Always verify proper system charge via subcooling (TXV/EEV) or superheat (fixed orifice) per the unit nameplate.


| TUBING INFORMATION |             |   |       |       |       |       |
|--------------------|-------------|---|-------|-------|-------|-------|
| LINE TYPE          |             | REFRIGERANT TO ADD AT SPECIFIED ADDITIONAL LENGTH |       |       |       |       |
| Suction Line       | Liquid Line | 20 ft   | 30 ft | 40 ft | 50 ft | 60 ft |
| 3/4"               | 3/8"        | 3 oz  | 9 oz  | 15 oz | 21 oz | 27 oz |
| 7/8"               | 3/8"        | 3 oz  | 9 oz  | 16 oz | 22 oz | 28 oz |

### 5.3 Required Refrigerant Line Length

Determine required line length and lift. You will need this later in STEP 2 of Section 14.


Total Line Length = \_\_\_\_\_ Ft.

Total Vertical Change (lift) = \_\_\_\_\_ Ft.

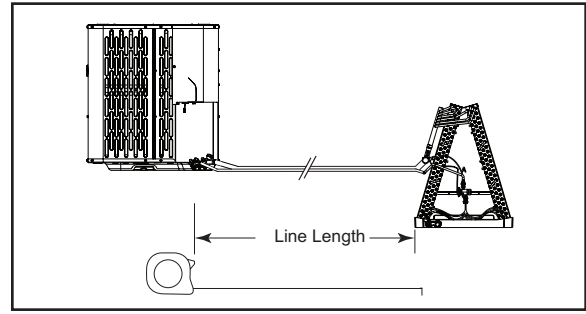

### 5.4 Refrigerant Line Insulation

**Important:** The Vapor Line must always be insulated. DO NOT allow the Liquid Line and Vapor Line to come in direct (metal to metal) contact.

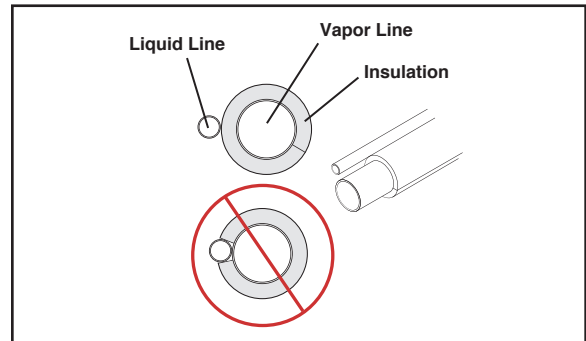

### 5.5 Reuse Existing Refrigerant Lines

#### ⚠ CAUTION

If using existing refrigerant lines make certain that all joints are brazed, not soldered.

For retrofit applications, where the existing indoor evaporator coil and/or refrigerant lines will be used, the following precautions should be taken:

- Ensure that the indoor evaporator coil and refrigerant lines are the correct size.
- Ensure that the refrigerant lines are free of leaks, acid, and oil.

**Important:** For more information see publication number SS-APG006F-EN.

## Section 6. Refrigerant Line Routing




### 6.1 Precautions

**Important:** Take precautions to prevent noise within the building structure due to vibration transmission from the refrigerant lines.

Comply with National, State, and Local Codes when isolating line sets from joists, rafters, walls, or other structural elements.

For Example:

- When the refrigerant lines have to be fastened to floor joists or other framing in a structure, use isolation type hangers.
- Isolation hangers should also be used when refrigerant lines are run in stud spaces or enclosed ceilings.
- Where the refrigerant lines run through a wall or sill, they should be insulated and isolated.
- Isolate the lines from all ductwork. • Minimize the number of 90° turns.

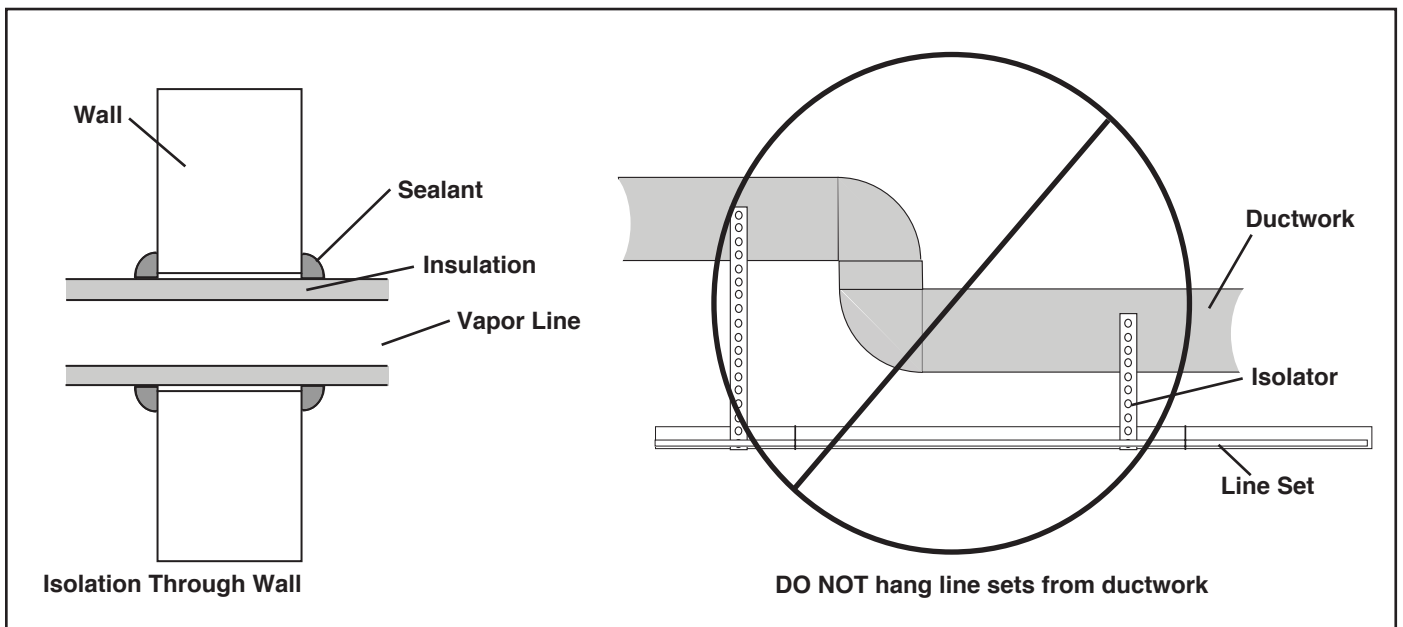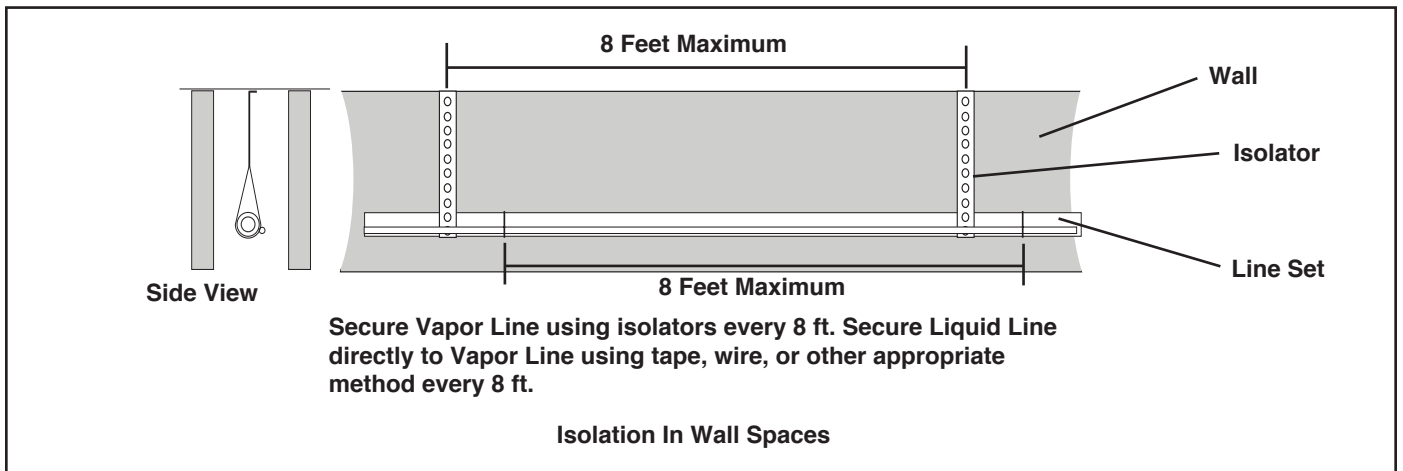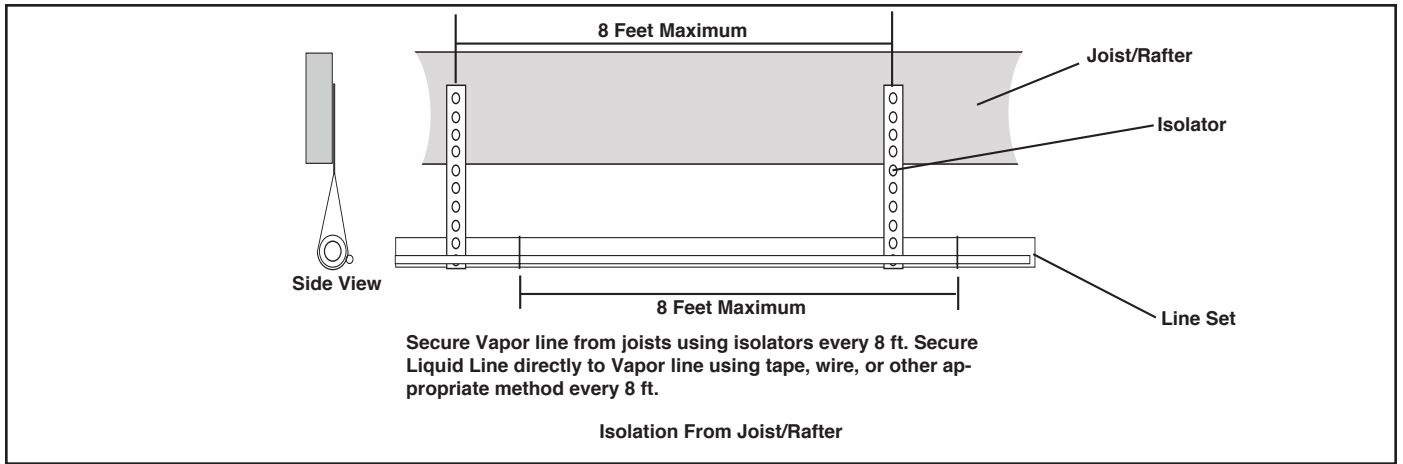

## Section 7. Refrigerant Line Brazing

### 7.1 Braze The Refrigerant Lines

**STEP 1** - Remove caps or plugs. Use a deburring tool to deburr the pipe ends. Clean both internal and external surfaces of the tubing using an emery cloth.

**STEP 2** - Remove the pressure tap cap and valve cores from both service valves.

**STEP 3** - Purge the refrigerant lines and indoor coil with dry nitrogen.

**STEP 4** - Wrap a wet rag around the valve body to avoid heat damage and continue the dry nitrogen purge.

Braze the refrigerant lines to the service valves.


Continue the dry nitrogen purge. Do not remove the wet rag until all brazing is completed.

**Important:** Remove the wet rag before stopping the dry nitrogen purge.


**Note:** Install drier in Liquid Line.

**NOTE:** Precautions should be taken to avoid heat damage to basepan during brazing. It is recommended to keep the flame directly off of the basepan.


**STEP 5** - Replace the pressure tap valve cores after the service valves have cooled.

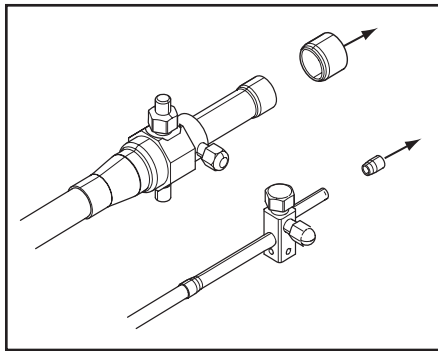


STEP 1

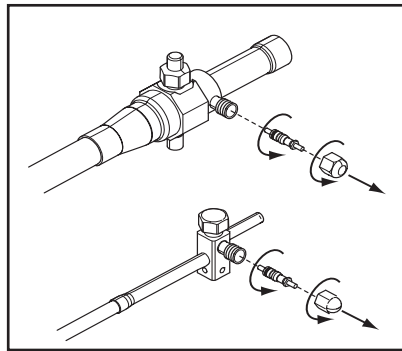


STEP 2

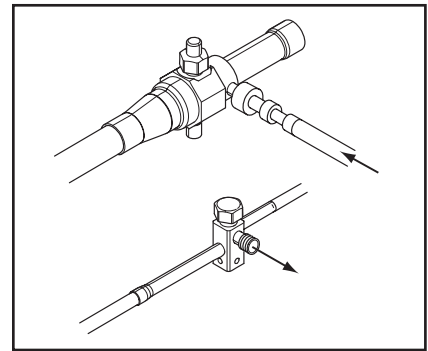

STEP 3

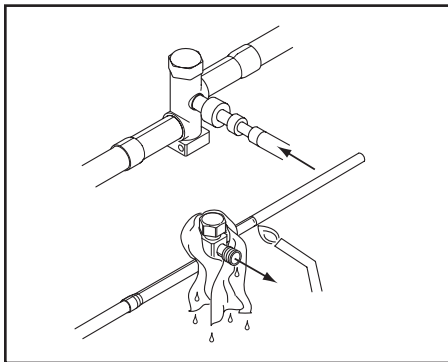

STEP 4

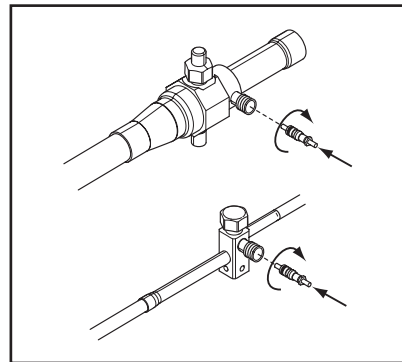

STEP 5

## Section 8. Refrigerant Line Leak Check

### 8.1 Check For Leaks

**STEP 1** - Pressurize the refrigerant lines and evaporator coil to 150 PSIG using dry nitrogen.

**STEP 2** - Check for leaks by using a soapy solution or bubbles at each brazed location.

Remove nitrogen pressure and repair any leaks before continuing.



## Section 9. Evacuation

### 9.1 Evacuate the Refrigerant Lines and Indoor Coil

**Important:** Do not open the service valves until the refrigerant lines and indoor coil leak check and evacuation are complete.

**STEP 1** - Evacuate until the micron gauge reads no higher than 350 microns, then close off the valve to the vacuum pump.

**STEP 2** - Observe the micron gauge. Evacuation is complete if the micron gauge does not rise above 500 microns in one (1) minute.

Once evacuation is complete blank off the vacuum pump and micron gauge, and close the valves on the manifold gauge set.

## Section 10. Service Valves

### 10.1 Open the Gas Service Valve

**Important:** Leak check and evacuation must be completed before opening the service valves.

**NOTE:** Do not vent refrigerant gases into the atmosphere.

**STEP 1** - Remove valve stem cap.

**STEP 2** - Using an adjustable wrench, turn valve stem 1/4 turn counterclockwise to the fully open position.

**STEP 3** - Replace the valve stem cap to prevent leaks. Tighten finger tight plus an additional 1/6 turn.

### 10.2 Open the Liquid Service Valve

#### ⚠ WARNING


Extreme caution should be exercised when opening the Liquid Line Service Valve. Turn counterclockwise until the valve stem just touches the rolled edge. No torque is required. Failure to follow this warning will result in abrupt release of system charge and may result in personal injury and /or property damage.

**Important:** Leak check and evacuation must be completed before opening the service valves.


**STEP 1** - Remove service valve cap.

**STEP 2** - Fully insert 3/16" hex wrench into the stem and back out counterclockwise until valve stem just touches the rolled edge (approximately five (5) turns.)

**STEP 3** - Replace the valve cap to prevent leaks. Tighten finger tight plus an additional 1/6 turn.

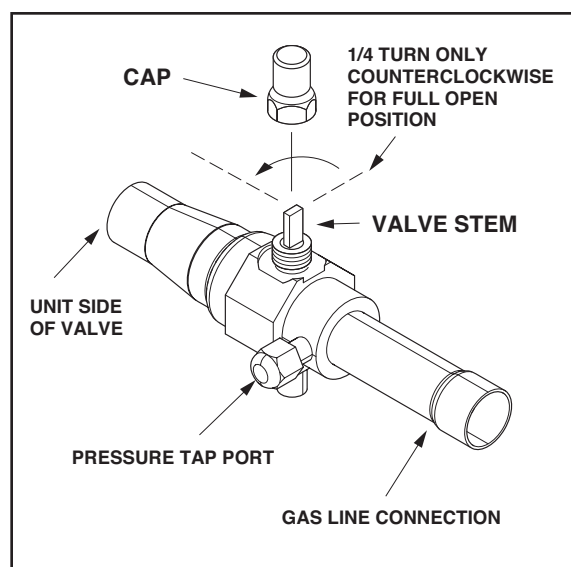

Gas Service Valve

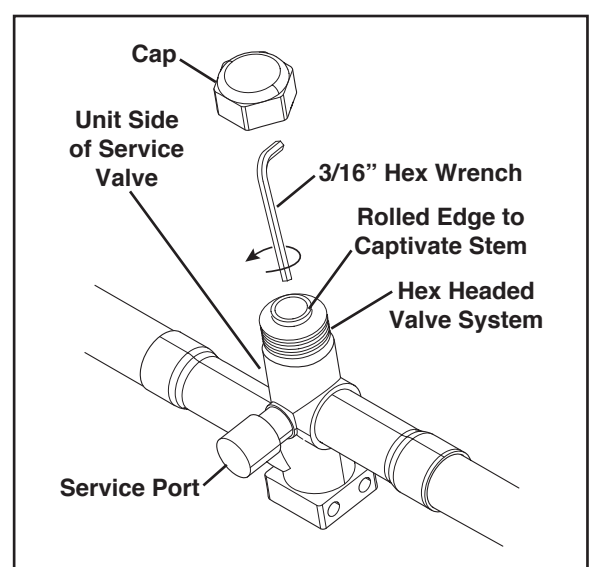

Liquid Service Valve

# Section 11. Electrical - Low Voltage



## 11.1 Low Voltage Maximum Wire Length

Table 11.1 defines the maximum total length of low voltage wiring from the outdoor unit, to the indoor unit, and to the thermostat.

**Table 11.1**

| 24 VOLTS  |                  |
|-----------|------------------|
| WIRE SIZE | MAX. WIRE LENGTH |
| 18 AWG    | 150 Ft.          |
| 16 AWG    | 225 Ft.          |
| 14 AWG    | 300 Ft.          |

## 11.2 Low Voltage Hook-up Diagrams

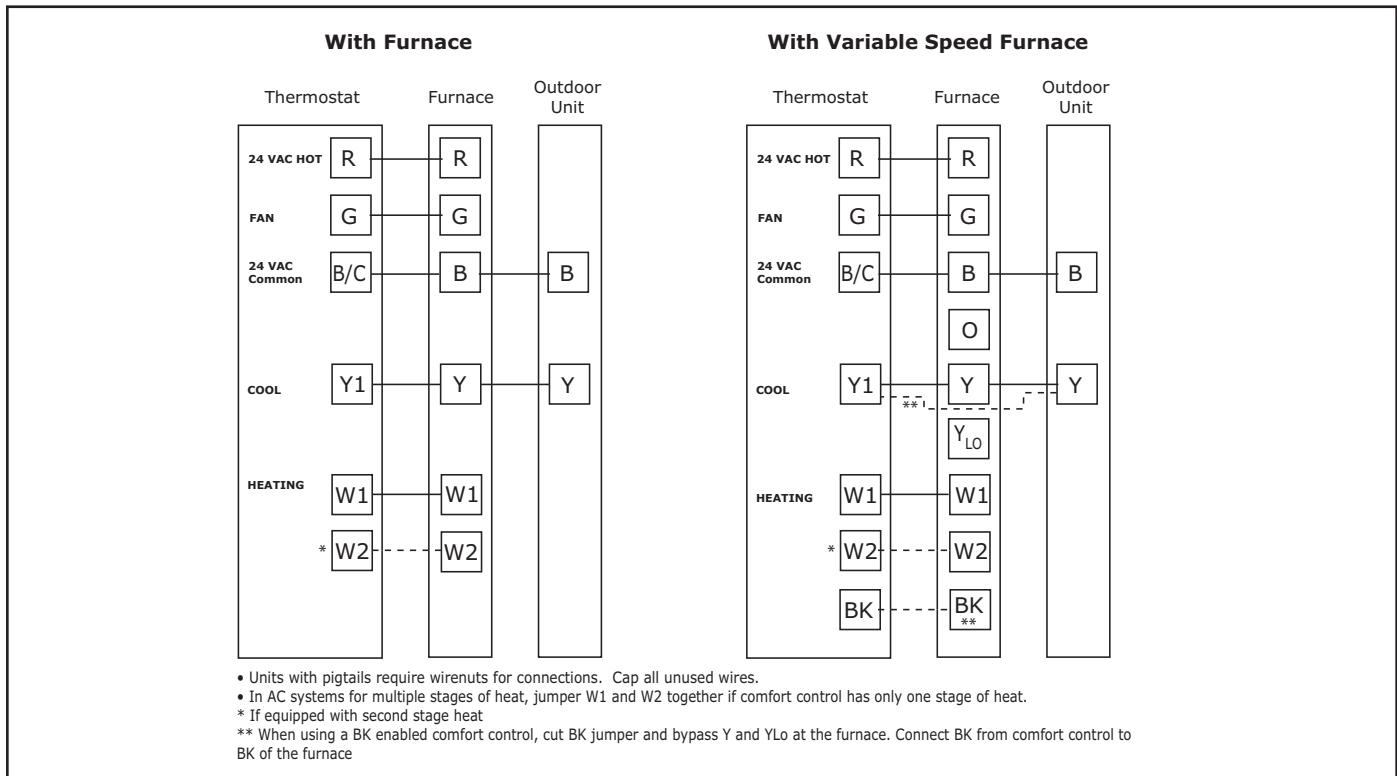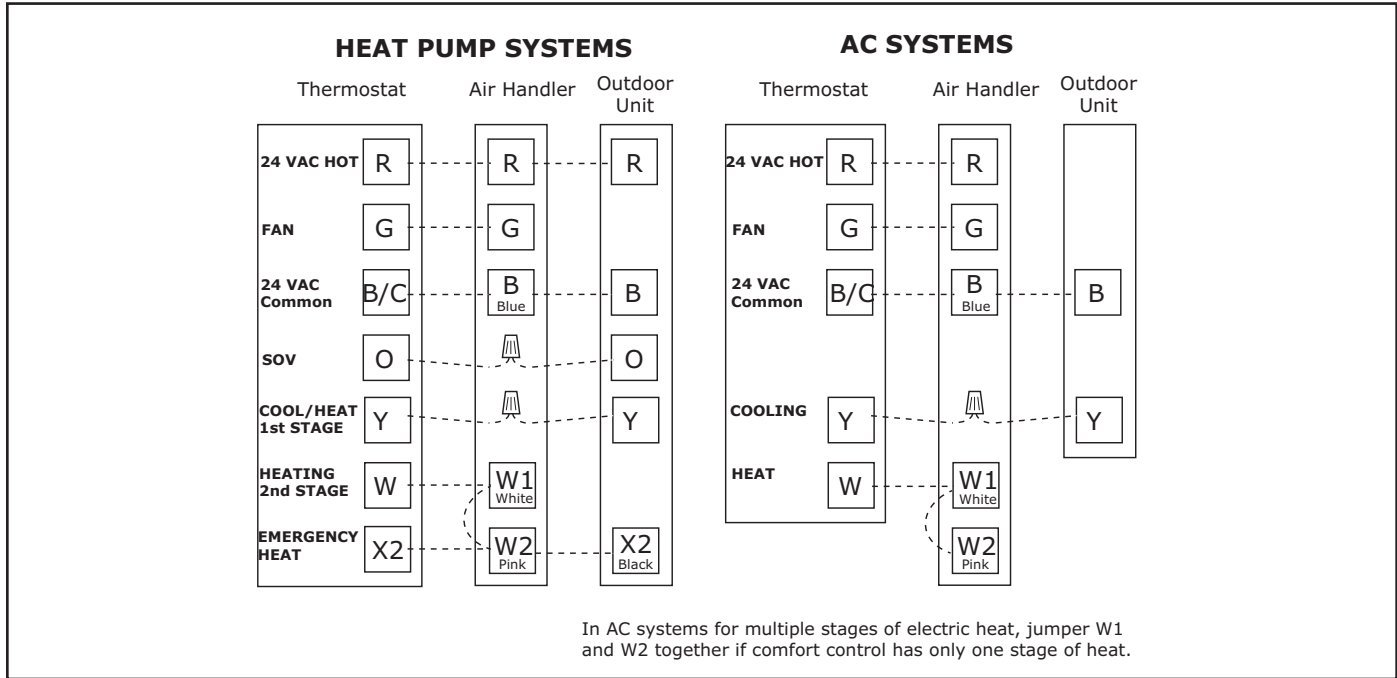



## Section 14. System Charge Adjustment (Systems can be rated with TXV, EEV or Piston)

**NOTE:** For systems using a indoor piston metering device, refer to the Superheat charging method and chart. For systems using a TXV or EEV indoor metering device, refer to Subcool charging method and charts.

### 14.1 Temperature Measurements


**STEP 1** - Check the outdoor temperatures.

Subcooling (in cooling mode) is the only recommended method of charging above 55° F ambient outdoor temperature.


**Note:** For Superheat (In Cooling Mode), refer to the Superheat Charging Table

For best results the indoor temperature should be kept between 70° F to 80° F.

**Note:** It is important to return in the spring or summer to accurately charge the system in the cooling mode when outdoor ambient temperature is above 55° F.

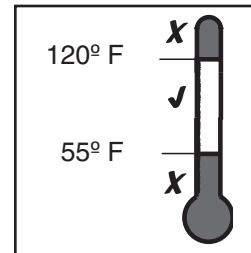

Outdoor Temp

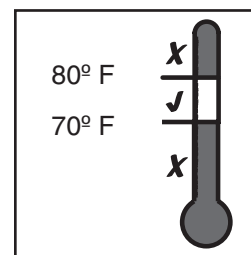

Indoor Temp


### 14.2 Subcooling Charging in Cooling (Above 55° F Outdoor Temp.)

**STEP 1** - Use the refrigerant line total length and lift measurements from Section 5 and use line length adders as shown in Section 5.2 if required.

Total Line Length = \_\_\_\_\_ Ft.


Vertical Change (Lift) = \_\_\_\_\_ Ft.

**Note:** Use this method when matched with a TXV or EEV indoor unit.

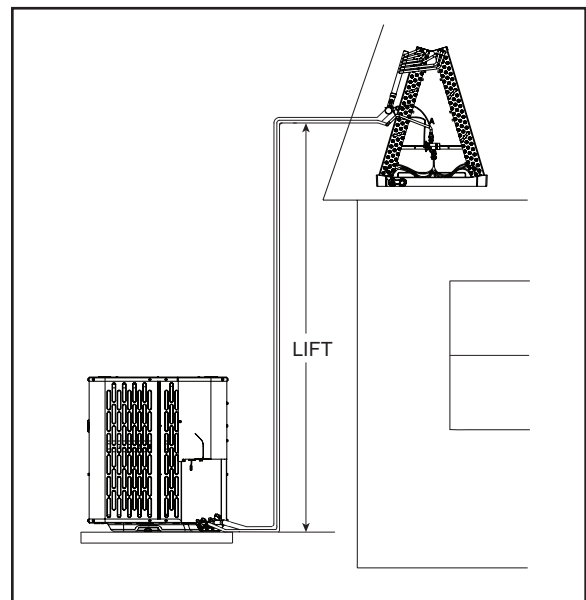


**STEP 2** - Determine the final subcooling value using total Line Length and Lift measured in STEP 1 and the charts below.


**018D Models**

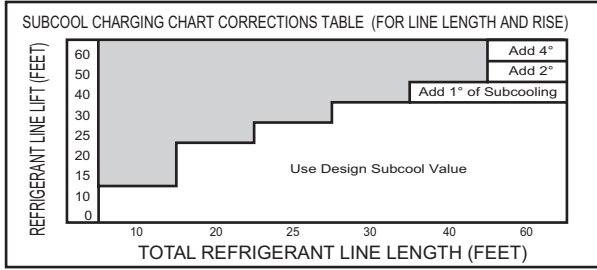


**023D & 024D Models**

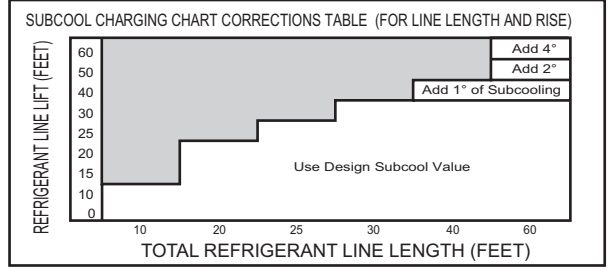


**029D, 030D & 036D Models**

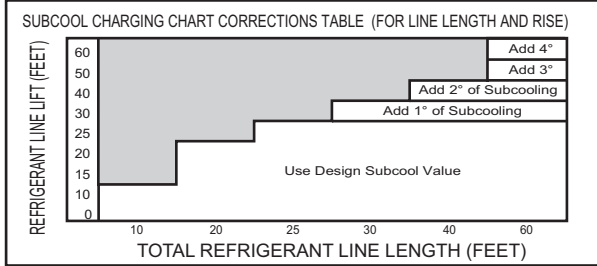

**042D Models**

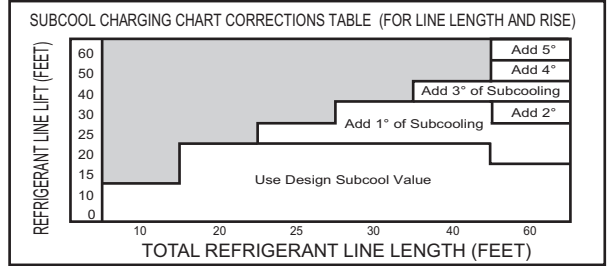

**048D & 060D Models**

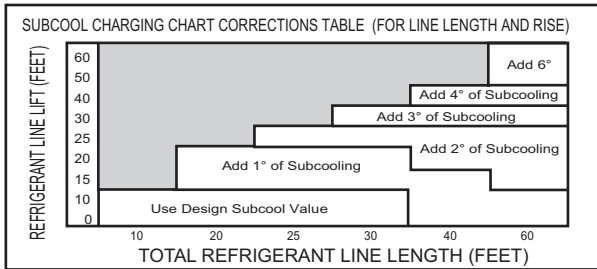

Design Subcooling Value = \_\_\_\_\_ ° F  
(from nameplate)

Subcooling Correction = \_\_\_\_\_ ° F

Final Subcooling Value = \_\_\_\_\_ ° F

**STEP 3** - Stabilize the system by operating for a minimum of 20 minutes.

At startup, or whenever charge is removed or added, the system must be operated for a minimum of 20 minutes to stabilize before accurate measurements can be made.

**STEP 4** - Measure the liquid line temperature and pressure at the outdoor unit's service valve.

Measured Liquid Line Temp = \_\_\_\_\_ ° F

Liquid Gage Pressure = \_\_\_\_\_ PSIG

Final Subcooling Value = \_\_\_\_\_ ° F

**STEP 5** - Use the final subcooling value, refrigerant temperature and pressure from STEP 4, to determine the proper liquid gage pressure using Table 14.2.


Example: Assume a 12° F Final Subcooling value and liquid temp of 90° F.

1. Locate 12° F Final Subcooling in Table 14.2.
2. Locate the Liquid Temperature (90° F) in the left column.
3. The Liquid Gage Pressure should be approximately 327 PSIG. (This is shown as the intersection of the Final Subcooling column and the Liquid Temperature row.)

Table 14.2

| R-410A REFRIGERANT CHARGING CHART |                       |     |     |     |     |     |     |
|-----------------------------------|-----------------------|-----|-----|-----|-----|-----|-----|
| LIQUID TEMP (°F)                  | FINAL SUBCOOLING (°F) |     |     |     |     |     |     |
|                                   | 8                     | 9   | 10  | 11  | 12  | 13  | 14  |
| LIQUID GAGE PRESSURE (PSI)        |                       |     |     |     |     |     |     |
| 55                                | 179                   | 182 | 185 | 188 | 191 | 195 | 198 |
| 60                                | 195                   | 198 | 201 | 204 | 208 | 211 | 215 |
| 65                                | 211                   | 215 | 218 | 222 | 225 | 229 | 232 |
| 70                                | 229                   | 232 | 236 | 240 | 243 | 247 | 251 |
| 75                                | 247                   | 251 | 255 | 259 | 263 | 267 | 271 |
| 80                                | 267                   | 271 | 275 | 279 | 283 | 287 | 291 |
| 85                                | 287                   | 291 | 296 | 300 | 304 | 309 | 313 |
| 90                                | 309                   | 313 | 318 | 322 | 327 | 331 | 336 |
| 95                                | 331                   | 336 | 341 | 346 | 351 | 355 | 360 |
| 100                               | 355                   | 360 | 365 | 370 | 376 | 381 | 386 |
| 105                               | 381                   | 386 | 391 | 396 | 402 | 407 | 413 |
| 110                               | 407                   | 413 | 418 | 424 | 429 | 435 | 441 |
| 115                               | 435                   | 441 | 446 | 452 | 458 | 464 | 470 |
| 120                               | 464                   | 470 | 476 | 482 | 488 | 495 | 501 |
| 125                               | 495                   | 501 | 507 | 514 | 520 | 527 | 533 |

From Dwg. D154557P01 Rev. 3

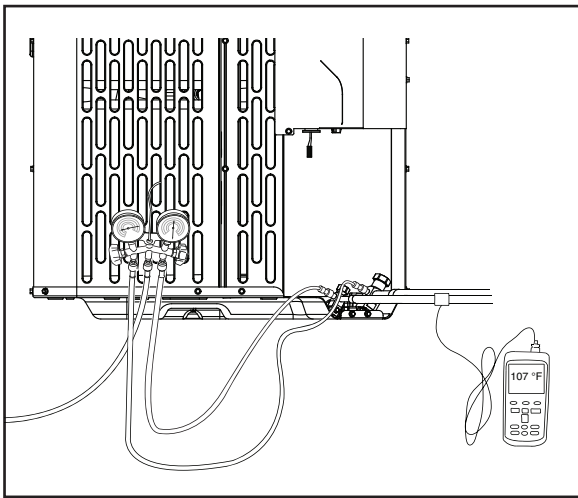

**STEP 6** - Adjust refrigerant level to attain proper gage pressure.

**Add refrigerant** if the Liquid Gage Pressure is lower than the chart value.

1. Connect gages to refrigerant bottle and unit as illustrated.
2. Purge all hoses.
3. Open bottle.
4. Stop adding refrigerant when liquid line temperature and Liquid Gage Pressure matches the charging chart Final Subcooling value.

**Recover refrigerant** if the Liquid Gage Pressure is higher than the chart value.

**STEP 7** - Stabilize the system.



1. Wait 20 minutes for the system condition to stabilize between adjustments.

**Note:** When the Liquid Line Temperature and Gage Pressure approximately match the chart, the system is properly charged.

2. Remove gages.
3. Replace service port caps to prevent leaks. Tighten finger tight plus an additional 1/6 turn.

**STEP 8** - Verify typical performance.

Refer to System Pressure Curves at the end of the document to verify typical performance.

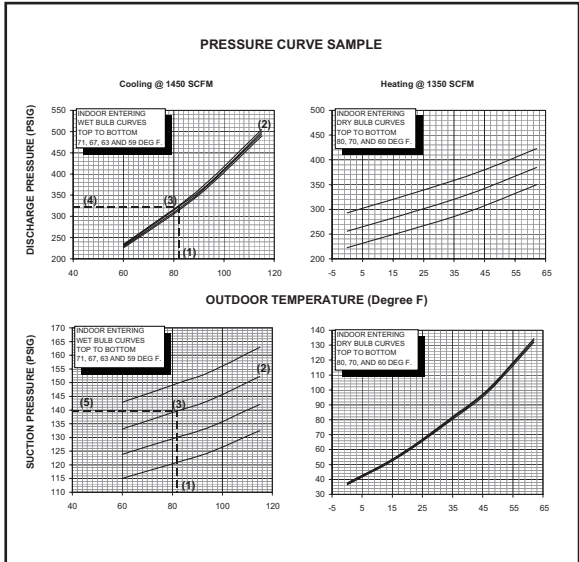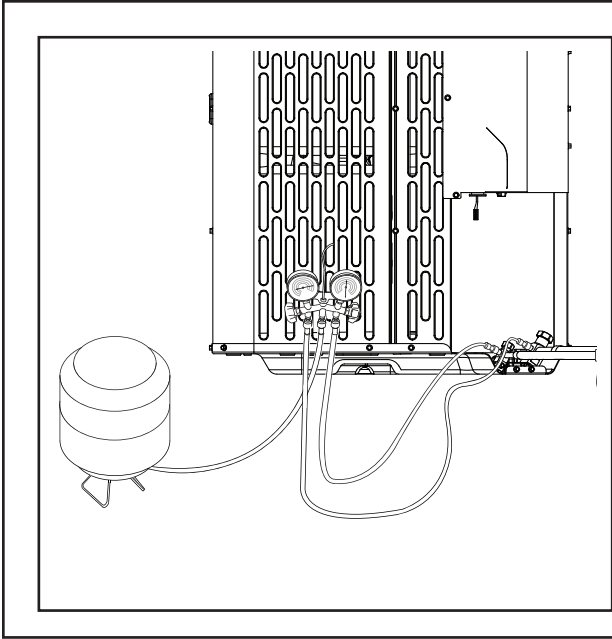

**Fixed Orifice Superheat Charging Table**

|                            |     | Indoor Wet Bulb Temp (F) |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |  |
|----------------------------|-----|--------------------------|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|----|--|
|                            |     | 50                       | 51 | 52 | 53 | 54 | 55 | 56 | 57 | 58 | 59 | 60 | 61 | 62 | 63 | 64 | 65 | 66 | 67 | 68 | 69 | 70 | 71 | 72 | 73 | 74 | 75 | 76 | 77 | 78 |  |
| Outdoor Dry Bulb Temp. (F) | 55  | 7                        | 9  | 10 | 11 | 12 | 14 | 15 | 17 | 18 | 20 | 21 | 23 | 24 | 26 | 27 | 29 | 30 |    |    |    |    |    |    |    |    |    |    |    |    |  |
|                            | 60  | 5                        | 7  | 8  | 9  | 10 | 12 | 13 | 15 | 16 | 18 | 19 | 21 | 22 | 24 | 25 | 27 | 28 | 30 | 31 |    |    |    |    |    |    |    |    |    |    |  |
|                            | 65  |                          |    | 4  | 6  | 8  | 10 | 11 | 13 | 14 | 16 | 17 | 18 | 19 | 21 | 22 | 24 | 25 | 27 | 28 | 27 | 31 |    |    |    |    |    |    |    |    |  |
|                            | 70  |                          |    |    |    | 5  | 7  | 8  | 10 | 11 | 13 | 14 | 16 | 17 | 18 | 19 | 21 | 22 | 24 | 25 | 27 | 28 | 30 | 31 |    |    |    |    |    |    |  |
|                            | 75  |                          |    |    |    |    |    | 5  | 6  | 7  | 9  | 10 | 12 | 14 | 16 | 18 | 19 | 21 | 22 | 24 | 26 | 28 | 29 | 31 | 32 |    |    |    |    |    |  |
|                            | 80  |                          |    |    |    |    |    |    |    | 4  | 6  | 7  | 9  | 10 | 11 | 12 | 14 | 16 | 18 | 19 | 21 | 23 | 25 | 26 | 28 | 29 | 31 | 33 |    |    |  |
|                            | 85  |                          |    |    |    |    |    |    |    |    | 4  | 6  | 7  | 9  | 10 | 13 | 14 | 16 | 18 | 20 | 21 | 23 | 24 | 26 | 28 | 29 | 30 | 31 | 32 |    |  |
|                            | 90  |                          |    |    |    |    |    |    |    |    |    | 4  | 6  | 8  | 10 | 11 | 13 | 14 | 16 | 18 | 20 | 22 | 24 | 25 | 27 | 28 | 30 | 31 |    |    |  |
|                            | 95  |                          |    |    |    |    |    |    |    |    |    |    | 4  | 6  | 8  | 10 | 11 | 13 | 14 | 16 | 18 | 20 | 22 | 23 | 25 | 26 | 28 | 29 |    |    |  |
|                            | 100 |                          |    |    |    |    |    |    |    |    |    |    |    |    | 6  | 8  | 10 | 12 | 13 | 16 | 18 | 20 | 21 | 23 | 25 | 27 | 29 |    |    |    |  |
|                            | 105 |                          |    |    |    |    |    |    |    |    |    |    |    |    |    | 4  | 6  | 7  | 9  | 11 | 13 | 15 | 18 | 20 | 22 | 24 | 26 | 28 |    |    |  |
|                            | 110 |                          |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    | 4  | 7  | 9  | 11 | 13 | 16 | 18 | 21 | 23 | 26 | 28 |    |    |  |
| 115                        |     |                          |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    |    | 6  | 9  | 12 | 14 | 16 | 19 | 21 | 24 | 26 |    |    |    |  |

Using a digital psychrometer, measure the return air wet-bulb temperature at the unit just before the coil. Also measure the outdoor dry-bulb temperature. Use these temperatures to locate the target superheat on the charging table. Do not attempt to charge the system if these conditions fall outside of this charging table.  
 ADD refrigerant to DECREASE total superheat. REMOVE refrigerant to INCREASE total superheat. Always allow 10 to 15 minutes of operation after any refrigerant or air flow change prior to determining the final superheat.

**STEP 9 - Record System Information for reference.**

Record system pressures and temperatures after charging is complete.

Outdoor model number = \_\_\_\_\_

Measured Suction Line Temp = \_\_\_\_\_ ° F

Measured Outdoor Ambient = \_\_\_\_\_ ° F

Liquid Gage Pressure = \_\_\_\_\_ PSI

Measured Indoor Ambient = \_\_\_\_\_ ° F

Suction Gage Pressure = \_\_\_\_\_ PSI

Measured Liquid Line Temp = \_\_\_\_\_ ° F

# Section 15. Checkout Procedures

## 15.1 Operational And Checkout Procedures

Final phases of this installation are the unit Operational and Checkout Procedures. To obtain proper performance, all units must be operated and charge adjustments made.


**Important:** Perform a final unit inspection to be sure that factory tubing has not shifted during shipment. Adjust tubing if necessary so tubes do not rub against each other when the unit runs. Also be sure that wiring connections are tight and properly secured.

### CHECKOUT PROCEDURE

After installation has been completed, it is recommended that the entire system be checked against the following list:

- |  |  |
|--|--|
| 1. Leak check refrigerant lines. .... [ ]  | 7. Be sure that indoor coil drain line drains freely. Pour water into drain pan..... [ ] |
| 2. Properly insulate suction lines and fittings..... [ ]   | 8. Be sure that supply registers and return grilles are open and unobstructed..... [ ]   |
| 3. Properly secure and isolate all refrigerant lines..... [ ]  | 9. Be sure that a return air filter is installed..... [ ]                                |
| 4. Seal passages through masonry.<br>If mortar is used, prevent mortar from coming into direct contact with copper tubing..... [ ] | 10. Be sure that the correct airflow setting is used. (Indoor blower motor) ..... [ ]    |
| 5. Verify that all electrical connections are tight..... [ ]   | 11. Operate complete system in each mode to ensure safe operation..... [ ]               |
| 6. Observe outdoor fan during on cycle for clearance and smooth operation..... [ ]   |  |


## Section 16. Refrigerant Circuits (Reference only)

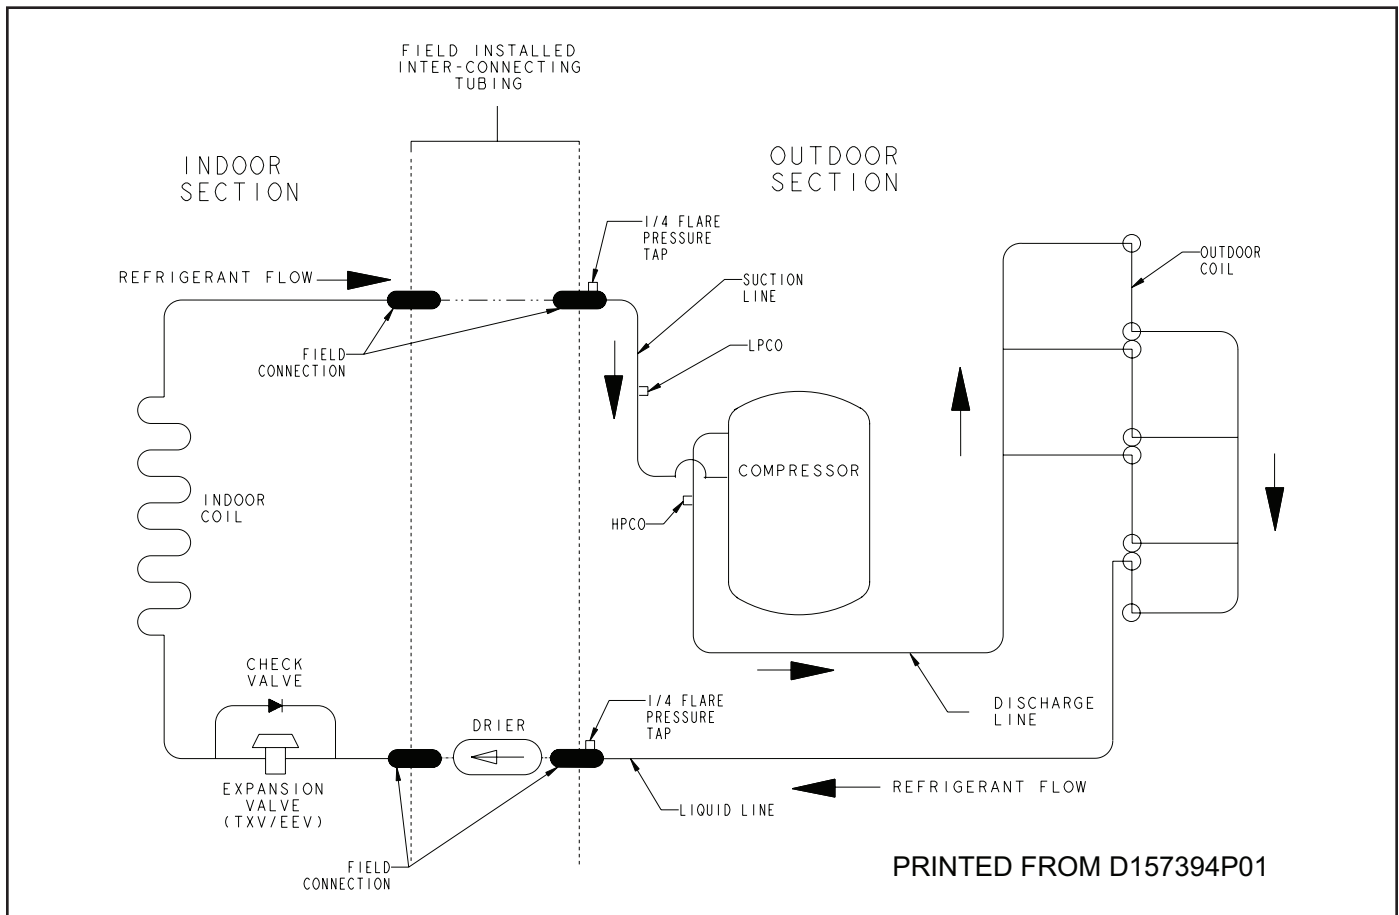




# Section 17. Wiring Diagrams

## 018D, 023D, 024D, 029D, 036D, 042D, 048D & 060D Models

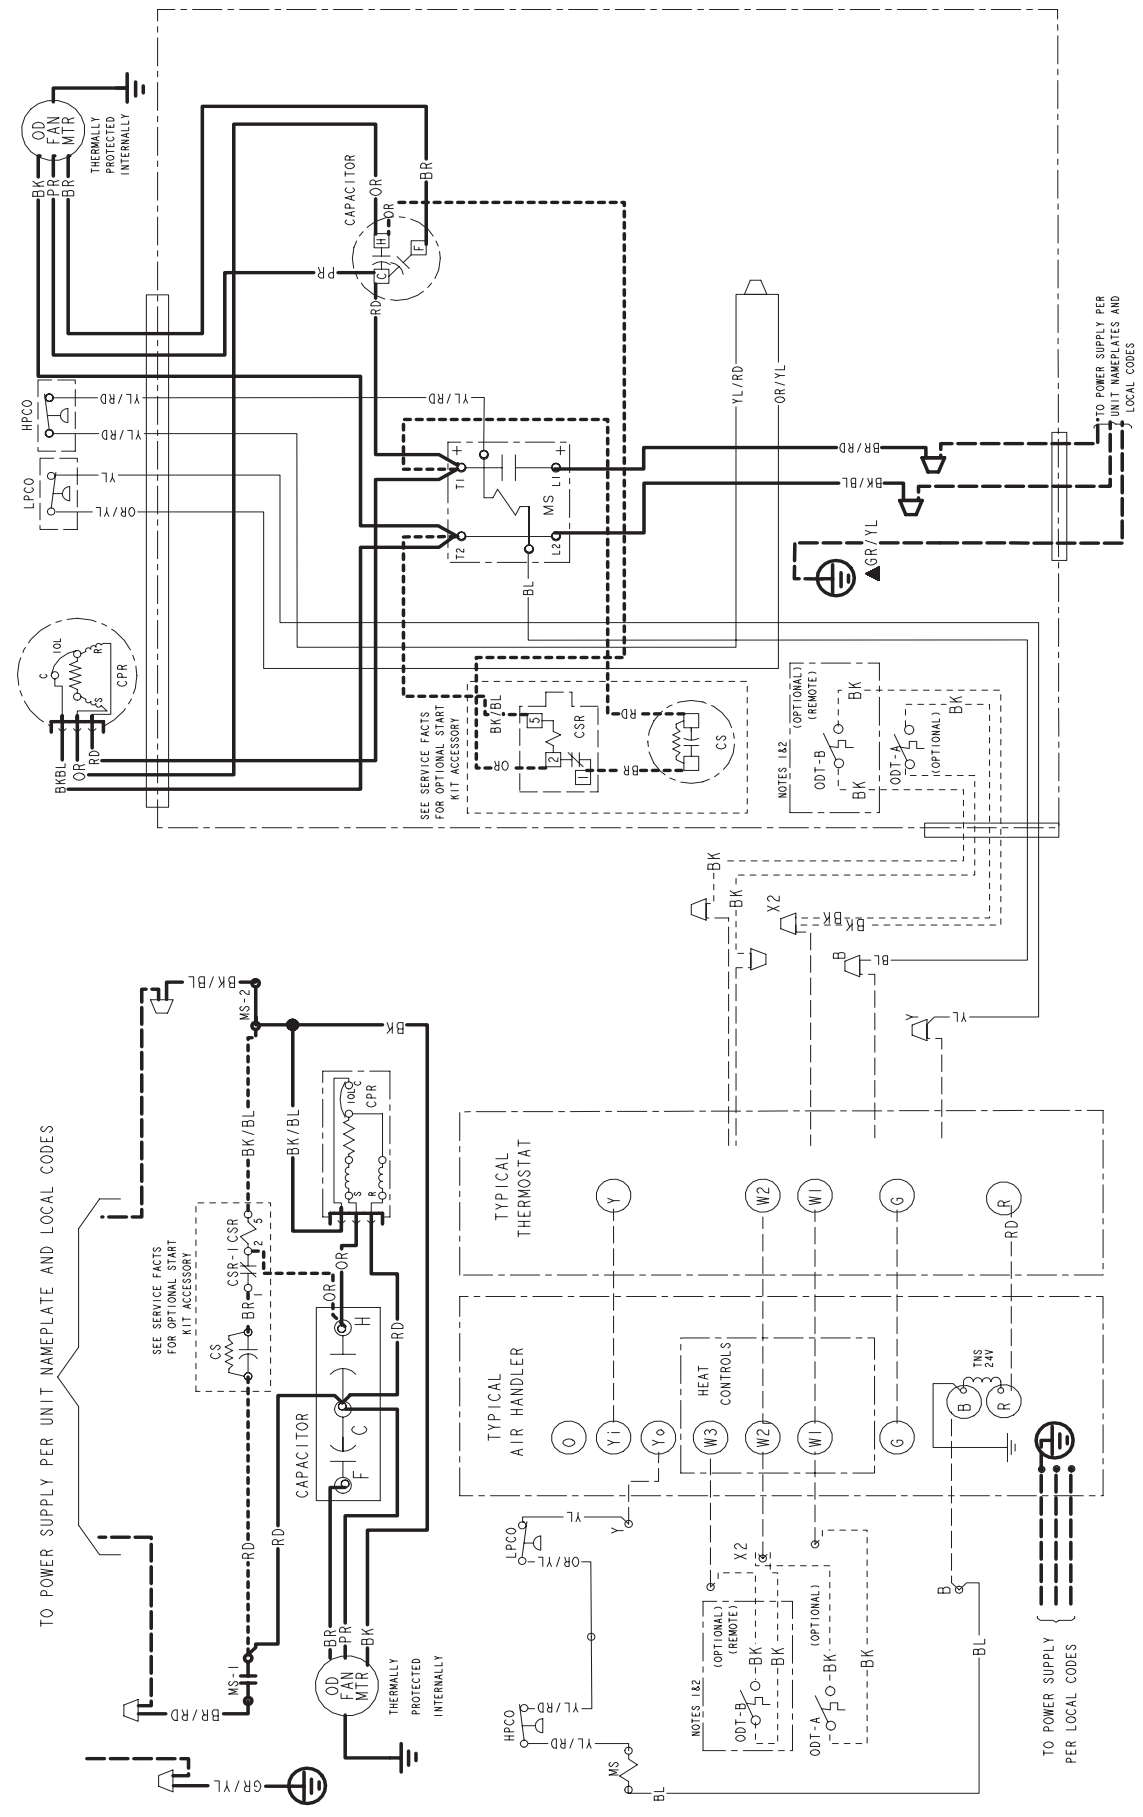

PRINTED FROM DI60712P01 REVE

# 030D Models

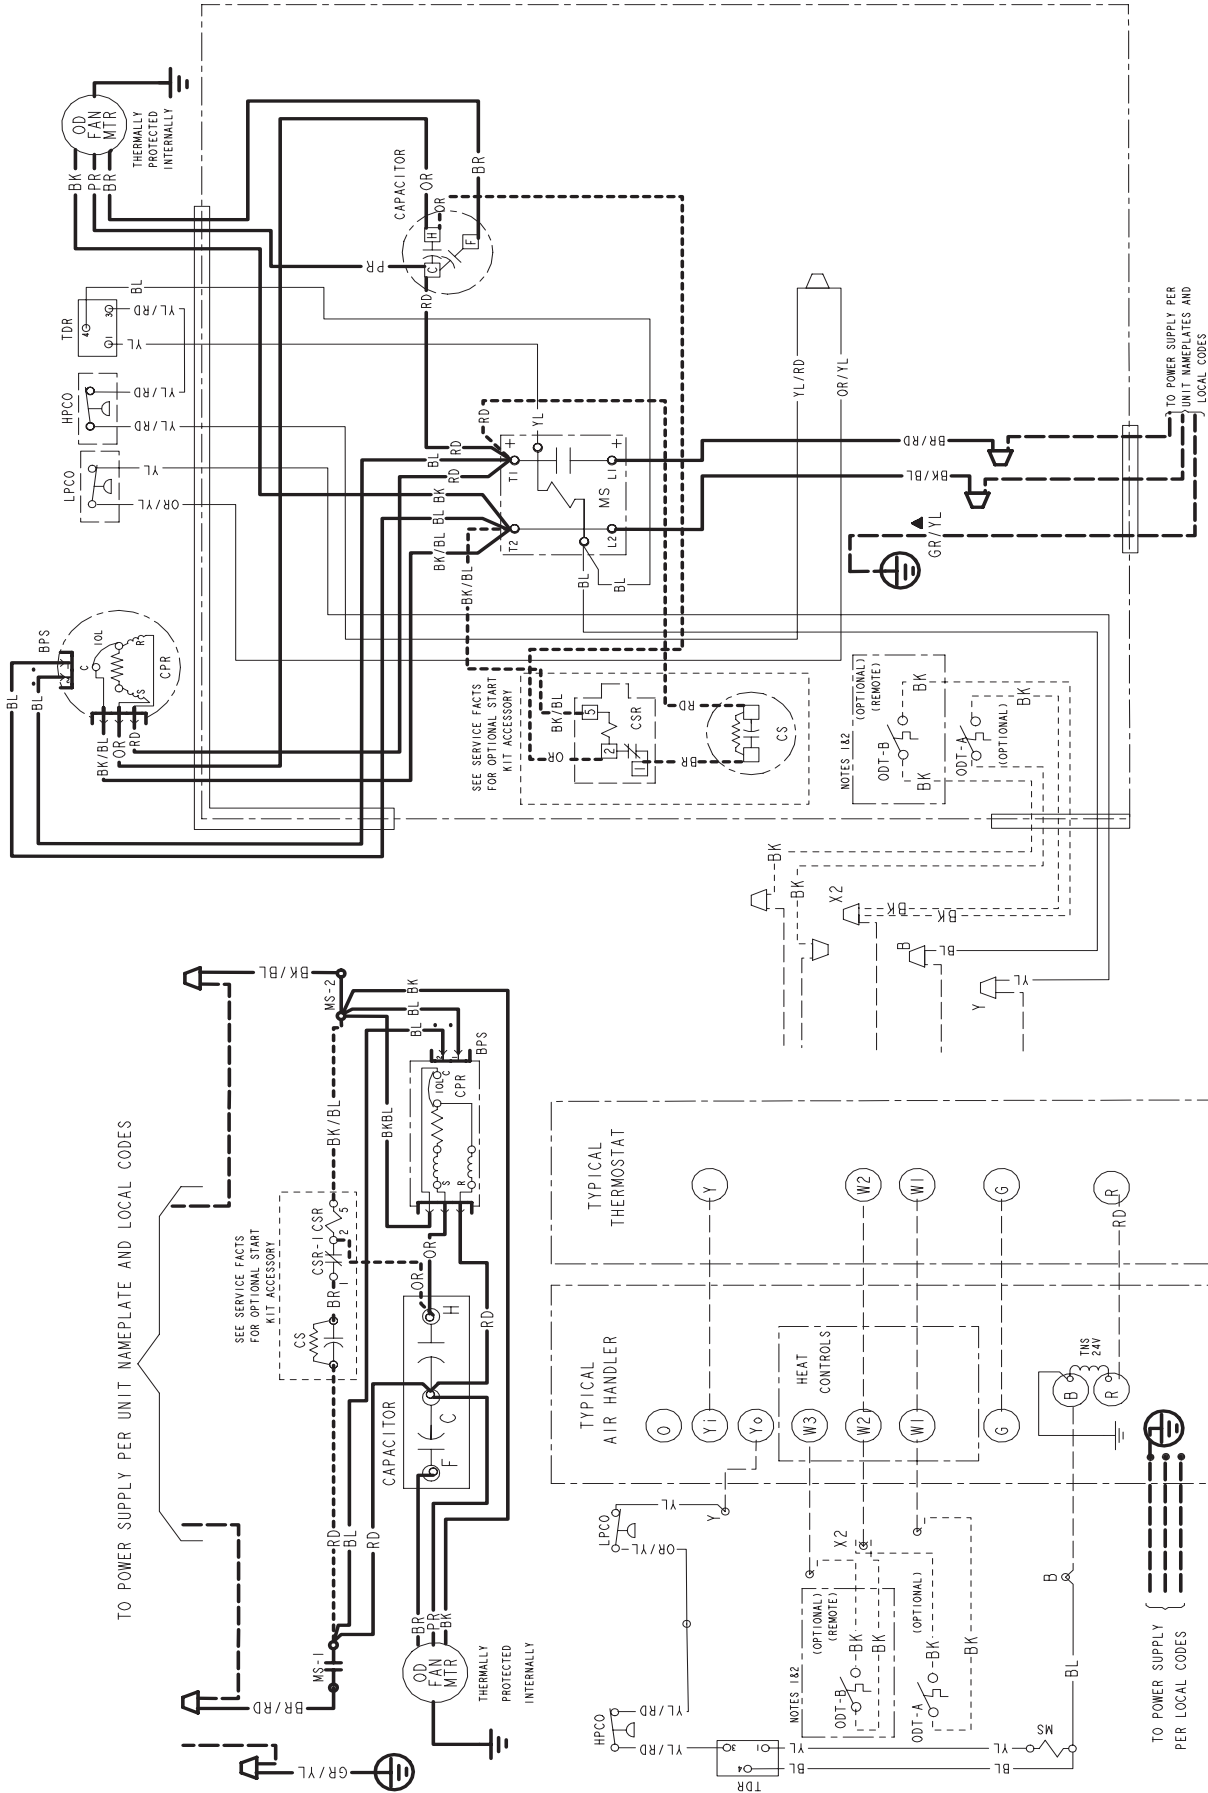







 



















PRINTED FROM DI61483P01 REVD

NOTES:

  1. IF ODT-B IS NOT USED. ADD JUMPER BETWEEN W2 & W3 AT AIR HANDLER. IF USED, ODT-B MUST BE MOUNTED REMOTE OF CONTROL BOX IN AN APPROVED WEATHER PROOF ENCLOSURE.
2. IF ODT-A IS NOT USED. ADD JUMPER BETWEEN W1 & W2 AT AIR HANDLER.
3. LOW VOLTAGE (24 V) FIELD WIRING MUST BE 18 AWG MINIMUM.
4. USE COPPER CONDUCTORS ONLY!
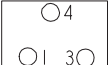
## LEGEND

|  |   |    |         |    |        |
|--|---|----|---------|----|--------|
|   | 24 V                                      | }  | FACTORY |    |        |
|   | LINE                                      | }  | WIRING  |    |        |
|   | 24 V                                      | }  | FIELD   |    |        |
|   | LINE                                      | }  | WIRING  |    |        |
|   | FIELD INSTALLED FACTORY WIRING            |    |         |    |        |
|   | MAGNETIC COIL                             |    |         |    |        |
|   | GROUND                                    |    |         |    |        |
|   | JUNCTION                                  |    |         |    |        |
|   | CAPACITOR                                 |    |         |    |        |
|   | WIRE NUT OR                               |    |         |    |        |
|   | TERMINAL                                  |    |         |    |        |
|    | TRANSFORMER                               |    |         |    |        |
| CF   | FAN CAPACITOR                             |    |         |    |        |
| CN   | WIRE CONNECTOR                            |    |         |    |        |
| CPR  | COMPRESSOR                                |    |         |    |        |
| CR   | RUN CAPACITOR                             |    |         |    |        |
| CS   | STARTING CAPACITOR                        |    |         |    |        |
| CSR  | CAPACITOR SWITCHING RELAY                 |    |         |    |        |
| ODT  | OUTDOOR THERMOSTAT                        |    |         |    |        |
| HPCO   | HIGH PRESSURE CUTOUT SWITCH               |    |         |    |        |
| LPCO   | LOW PRESSURE CUTOUT SWITCH                |    |         |    |        |
| MS   | COMPRESSOR MOTOR CONTACTOR                |    |         |    |        |
| TNS  | TRANSFORMER                               |    |         |    |        |
| IOL  | INTERNAL OVERLOAD PROTECTOR               |    |         |    |        |
| TDR  | TIME DELAY REALY                          |    |         |    |        |
| BPS  | BYPASS VALVE                              |    |         |    |        |
|   | TERMINAL BLOCK/BOARD                      |    |         |    |        |
|   | RELAY CONTACT (N.O)                       |    |         |    |        |
|   | RELAY CONTACT (N.C)                       |    |         |    |        |
|   | THERMISTOR                                |    |         |    |        |
|   | TEMP ACTUATED SWITCH                      |    |         |    |        |
|   | INTERNAL OVERLOAD PROTECTION              |    |         |    |        |
|   | PRESSURE ACTUATED SWITCH                  |    |         |    |        |
|   | RESISTER OR HEATING ELEMENT               |    |         |    |        |
|   | MOTOR WINDING                             |    |         |    |        |
|    | TIME DELAY RELAY                          |    |         |    |        |
|   | POL. PLUG FEMALE HOUSING (MALE TERMINALS) |    |         |    |        |
|   | POL. PLUG MALE HOUSING (FEMALE TERMINALS) |    |         |    |        |
|  COLOR OF WIRE<br>BK/BL<br> COLOR OF MARKER |   |    |         |    |        |
| BK   | BLACK                                     | RD | RED     | OR | ORANGE |
| BL   | BLUE                                      | WH | WHITE   | GR | GREEN  |
| BR   | BROWN                                     | YL | YELLOW  | PR | PURPLE |
| PK   | PINK                                      |    |         |    |        |
| FOR CANADIAN INSTALLATIONS<br>POUR INSTALLATIONS CANADIENNES   |   |    |         |    |        |
| CAUTION: NOT SUITABLE FOR USE ON SYSTEMS EXCEEDING 150V-TO-GROUND<br>ATTENTION: NE CONVIENT PAS AUX INSTALLATIONS DE PLUS DE 150 V A LA TERRE  |   |    |         |    |        |

# Section 18. Pressure Curves

**COOLING PERFORMANCE CAN BE CHECKED WHEN THE OUTDOOR TEMP IS ABOVE 65 DEG F.**

TO CHECK COOLING PERFORMANCE, SELECT THE PROPER INDOOR CFM, ALLOW PRESSURES TO STABILIZE. MEASURE INDOOR WET BULB TEMPERATURE, OUTDOOR TEMPERATURE, LIQUID AND SUCTION PRESSURES. ON THE PLOTS LOCATE OUTDOOR TEMPERATURE (1); LOCATE INDOOR WET BULB (2); FIND INTERSECTION OF OD TEMP. & ID W.B. (3); READ LIQUID (4) OR SUCTION (5) PRESSURE IN LEFT COLUMN.

EXAMPLE: (1) OUTDOOR TEMP. 82 F.

(2) INDOOR WET BULB 67 F.

(3) AT INTERSECTION

(4) LIQUID PRESSURE @ 600 CFM IS 305 PSIG



(5) SUCTION PRESSURE @ 600 CFM IS 145 PSIG

ACTUAL:

LIQUID PRESSURE SHOULD BE +/- 10 PSI OF CHART



SUCTION PRESSURE SHOULD BE +/- 3 PSIG OF CHART

**PRESSURE CURVES (Refer below table for models)**

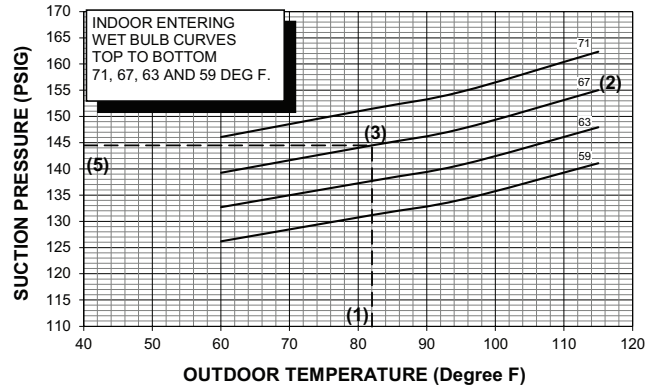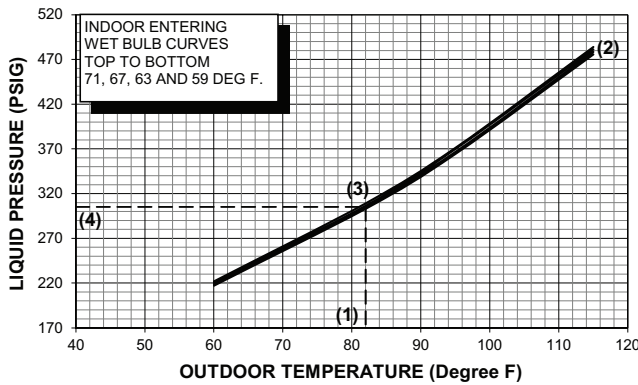



| OD Model   | Cooling @SCFM |
|------------|---------------|
| A4AC4018D1 | 800           |
| A4AC4023D1 | 800           |

**PRESSURE CURVES (Refer below table for models)**

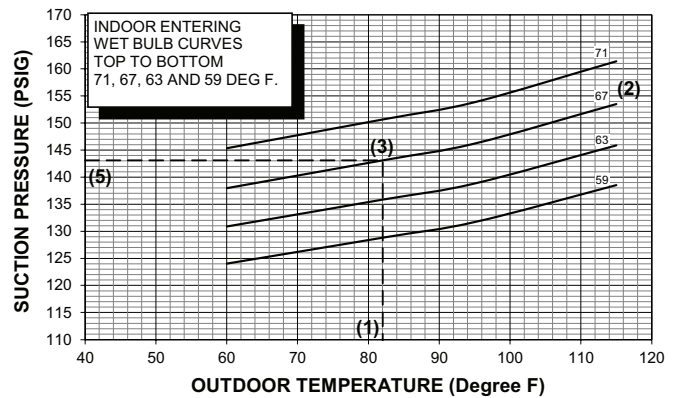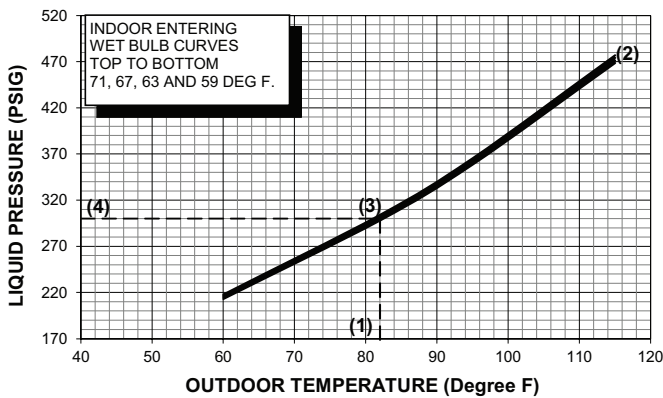



| OD Model   | Cooling @SCFM |
|------------|---------------|
| A4AC4024D1 | 800           |
| A4AC4030D1 | 800           |
| A4AC4042D1 | 1250          |
| A4AC4048D1 | 1400          |

### PRESSURE CURVES (Refer below table for models)

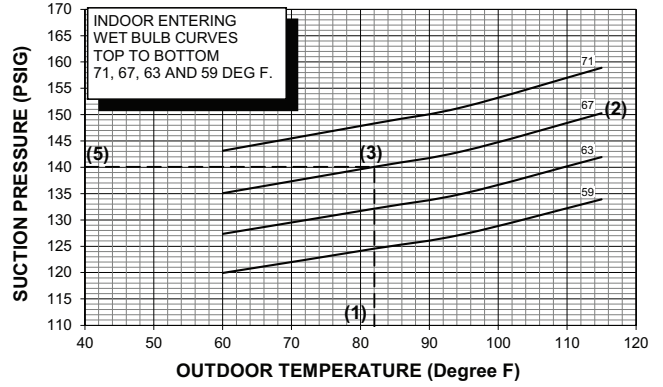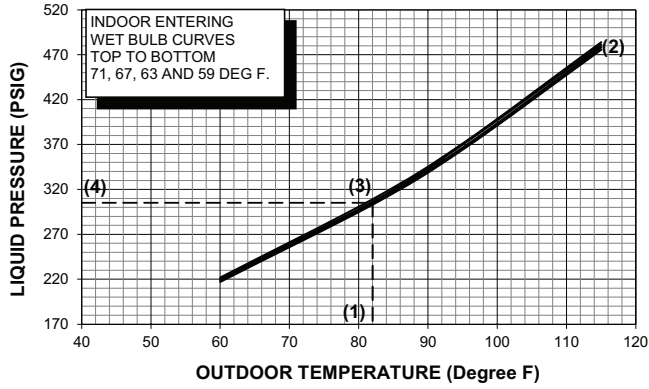

| OD Model   | Cooling @SCFM |
|------------|---------------|
| A4AC4029D1 | 1050          |
| A4AC4036D1 | 950           |

### PRESSURE CURVES (Refer below table for models)

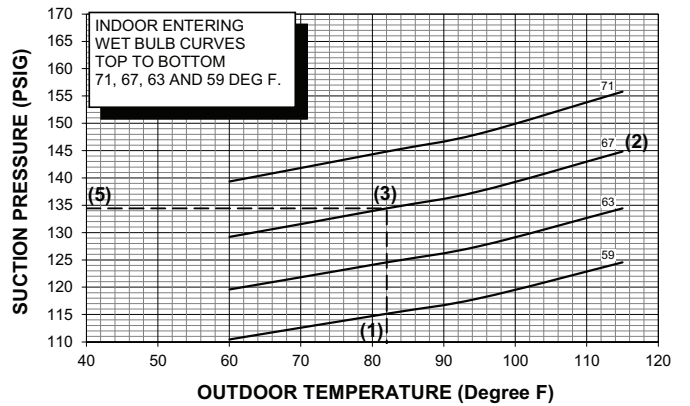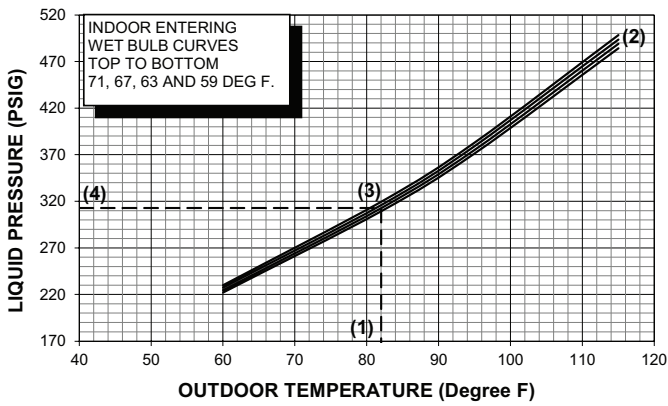

| OD Model   | Cooling @SCFM |
|------------|---------------|
| A4AC4060D1 | 1450          |

About Trane and American Standard Heating and Air Conditioning  
Trane and American Standard create comfortable, energy efficient indoor environments for residential applications.  
For more information, please visit [www.trane.com](http://www.trane.com) or [www.americanstandardair.com](http://www.americanstandardair.com)

---



The AHRI Certified mark indicates company participation in the AHRI Certification program. For verification of individual certified products, go to [ahridirectory.org](http://ahridirectory.org).

The manufacturer has a policy of continuous data improvement and it reserves the right to change design and specifications without notice. We are committed to using environmentally conscious print practices.

88-A4AC4001-1K-EN 17 Mar 2023  
Supersedes 88-A4AC4001-1J-EN (April 2022)

© 2023