

## NOTES:

- 1 ALL WIRING AND DEVICES SHOWN DASHED TO BE SUPPLIED AND INSTALLED BY THE CUSTOMER IN ACCORDANCE WITH LOCAL AND NATIONAL ELECTRICAL CODES.
- 2 IF ANY OF THE ORIGINAL WIRE, AS SUPPLIED WITH THIS UNIT, MUST BE REPLACED, REPLACE IT WITH APPLIANCE WIRING MATERIAL RATED AT 105°C AND 600V.
- 3 THREE PHASE MOTORS ARE PROTECTED UNDER PRIMARY SINGLE PHASING CONDITIONS. ALL MOTORS HAVE INTERNAL OVERLOAD PROTECTION. COMPRESSORS HAVE INTERNAL THERMAL PROTECTION.
- 4 CONNECTIONS SHOWN INCLUDE OPTIONAL COMM, RTEM, AND RTOM. PLUG RTOM-P4 IS NOT CONNECTED UNLESS RTEM OR RTOM IS INSTALLED. IF RTEM OR RTOM IS INSTALLED WITHOUT COMM, RTOM-P4 IS CONNECTED TO RTOM-J4. IF RTEM IS INSTALLED WITHOUT RTOM, RTOM-P2 IS CONNECTED TO PPF33. REFER TO ACCOMPANYING LITERATURE FOR PROPER CONNECTION/COMBINATION OF OPTIONAL COMPONENTS.
- 5 CONNECTIONS SHOWN INCLUDE OPTIONAL HPC1 AND TOL1. IF NEITHER OPTION IS INSTALLED CONNECT WIRE W23 TO WIRE 122A. IF EITHER OR BOTH OPTIONS ARE INSTALLED CONNECT THEM IN SERIES AS SHOWN.
- 6 OPTIONAL MAS, RAS, RHS, QHS AND ASSOCIATED WIRING NOT USED WITH MOTORIZED (NON-MODULATING) OR MANUAL OUTSIDE DAMPER.
- 7 STANDARD ECONOMIZER ECA IS ATTACHED TO THE BACK OF THE RTEM.
- 8 REQUIRED FOR OPTIONAL REFERENCE ENTHALPY CONTROL.
- 9 REQUIRED FOR OPTIONAL COMPARATIVE ENTHALPY CONTROL.
- 10 CONNECTIONS SHOWN ARE FOR 230V/60HZ/3PH. WHEN 208V/60HZ/3PH OPERATION IS REQUIRED REMOVE WIRE 2Y FROM 230V TERMINAL ON TNS1AND CONNECT TO 208V TERMINAL.

CONNECTIONS SHOWN INCLUDE ALL OPTIONAL SMOKE DETECTORS AND CONDENSATE OVERFLOW. IF ONLY THE SMOKE DETECTORS (RASD, SASD) ARE INSTALLED, CONNECT WIRE W81 TO WIRE W83/W85. IF ONLY CONDENSATE OVERFLOW IS INSTALLED, CONNECT WIRE W80 TO TNS1-24V.

14 MINIMUM HEATING SPEED IS TAP 4. TO SET COOLING AND HEATING TO THE SAME SPEED (TAP 4 OR 5), DISCONNECT WIRE W54 FROM 10M AND CONNECT IT TO THE EXTRA TERMINAL PROVIDED ON WIRE W56.

16 IF WIRES 158D AND W51 ARE NOT PRESENT, CONNECT WIRES 158A AND 100G DIRECTLY TO TC01.

## CAUTION

USE COPPER CONDUCTORS ONLY!

UNIT TERMINALS ARE NOT DESIGNED TO ACCEPT OTHER TYPES OF CONDUCTORS.

FAILURE TO DO SO MAY CAUSE DAMAGE TO THE EQUIPMENT.

## ATTENTION

N'UTILISER QUE DES CONDUCTEURS EN CUIVRE!

LES BORNES DE L'UNITÉ NE SONT PAS CONÇUES POUR RECEVOIR D'AUTRES TYPES DE CONDUCTEURS.

L'UTILISATION DE TOUT AUTRE CONDUCTEUR PEUT ENDOMMAGER L'EQUIPEMENT.

## PRECAUCIÓN

¡UTILICE ÚNICAMENTE CONDUCTORES DE COBRE!

LAS TERMINALES DE LA UNIDAD NO ESTÁN DISEÑADAS PARA ACEPTAR OTROS TIPOS DE CONDUCTORES.

SI NO LO HACE, PUEDE OCASIONAR DAÑO AL EQUIPO.

## IMPORTANT!

DO NOT ENERGIZE UNIT UNTIL CHECK-OUT AND START-UP PROCEDURE HAS BEEN COMPLETED.

WIRE COLOR DESIGNATION			
ABBR	COLOR	ABBR	COLOR
BK	BLACK	V (PR)	PURPLE
BL	BLUE	R	RED
BR	BROWN	TN	TAN
G	GREEN	W	WHITE
GY	GRAY	Y	YELLOW
O	ORANGE		

## TRANE

THIS DRAWING IS PROPRIETARY AND SHALL NOT BE COPIED OR ITS CONTENTS DISCLOSED TO OUTSIDE PARTIES WITHOUT THE CONSENT OF TRANE.

DRAWN BY:

TRANE® DATE:

REPLACES: ---

REVISION DATE:

CAD SYSTEM USED:

SIMILAR TO: ---

FILE NUMBER:  
12131678

DRAWING NUMBER:  
12131672

SHEET:  
1 OF 1

REV  
C

PRECEDENT

DIAGRAM

CONNECTION PRINT  
GAS HEAT 208/230V  
RELIAEL CONTROL



## WARNING

HAZARDOUS VOLTAGE!

DISCONNECT ALL ELECTRIC POWER INCLUDING REMOTE DISCONNECTS AND FOLLOW LOCK OUT AND TAG PROCEDURES BEFORE SERVICING. INSURE THAT ALL MOTOR CAPACITORS HAVE DISCHARGED STORED VOLTAGE. UNITS WITH VARIABLE SPEED DRIVE, REFER TO DRIVE INSTRUCTIONS FOR CAPACITOR DISCHARGE.

FAILURE TO DO THE ABOVE BEFORE SERVICING COULD RESULT IN DEATH OR SERIOUS INJURY.



## AVERTISSEMENT

TENSION DANGEREUSE!

COUPER TOUTES LES TENSIONS ET OUVRIR LES SECTIONNEURS À DISTANCE. PUIS SUIVRE LES PROCÉDURES DE VERROUILLAGE ET DES ÉTIQUETTES AVANT TOUTE INTERVENTION. VÉRIFIER QUE TOUS LES CONDENSATEURS DES MOTEURS SONT DÉCHARGÉS. DANS LE CAS D'UNITÉS COMPORTANT DES ENTRAÎNEMENTS À VITESSE VARIABLE, SE REPORTER AUX INSTRUCTIONS DE L'ENTRAÎNEMENT POUR DÉCHARGER LES CONDENSATEURS.

NE PAS RESPECTER CES MESURES DE PRÉCAUTION PEUT ENTRAÎNER DES BLESSURES GRAVES POUVANT ÊTRE MORTELLES.



## ADVERTENCIA

¡VOLTAJE PELIGROSO!

DESCONECTE TODA LA ENERGÍA ELÉCTRICA, INCLUSO LAS DESCONEXIONES REMOTAS Y SIGA LOS PROCEDIMIENTOS DE CIERRE Y ETIQUETADO ANTES DE PROCEDER AL SERVICIO. ASEGURESE DE QUE TODOS LOS CAPACITORES DEL MOTOR HAYAN DESCARGADO EL VOLTAJE ALMACENADO. PARA LAS UNIDADES CON EJE DE DIRECCIÓN DE VELOCIDAD VARIABLE, CONSULTE LAS INSTRUCCIONES PARA LA DESCARGA DEL CONDENSADOR.

EL NO REALIZAR LO ANTERIORMENTE INDICADO, PODRÍA OCASIONAR LA MUERTE O SERIAS LESIONES PERSONALES.

