

IMPORTANT!
DO NOT ENERGIZE
UNIT UNTIL CHECK-OUT
AND START-UP PROCEDURE
HAS BEEN COMPLETED

DEVICE PREFIX LOCATION CODE	
AREA	LOCATION
1	INSIDE UNIT CONTROL BOX
2	CONDENSER SECTION
3	AIR HANDLER SECTION
4	HEATING SECTION
5	EXTERNAL FIELD MOUNTED DEVICE


WARNING
HAZARDOUS VOLTAGE!
DISCONNECT ALL ELECTRIC POWER
INCLUDING REMOTE DISCONNECTS,
BEFORE SERVICING.
FAILURE TO DISCONNECT POWER
BEFORE SERVICING MAY CAUSE SEVERE
PERSONAL INJURY OR DEATH.

AVERTISSEMENT
VOLTAGE HASARDEUX!
DECONNECTEZ TOUTES LES SOURCES
ELECTRIQUES INCLUANT LES
DISJONCTEURS SITUES A DISTANCE
AVANT D'EFFECTUER L'ENTRETIEN.
L'ECART DE DECONNECTER LA SOURCE
DE PUISSANCE AVANT L'ENTRETIEN
PEUT ENTRAÎNER DES
BLESSURES CORPORELLES SEVERES
OU LA MORT.


CAUTION
USE COPPER CONDUCTORS ONLY!
UNIT TERMINALS ARE NOT DESIGNED
TO ACCEPT OTHER TYPES OF
CONDUCTORS.
FAILURE TO DO SO MAY CAUSE
DAMAGE TO THE EQUIPMENT.

NOTES

- 2 PROGRAM CONTROL FOR 2 WIRE CONTROL.
- 3 PROGRAM R2 AS RUNNING STATE.
- 5 VFD W/O LINE REACTOR WIRING SHOWN. SEE INSETS
B & C FOR VFD W/ LINE REACTOR WIRING.

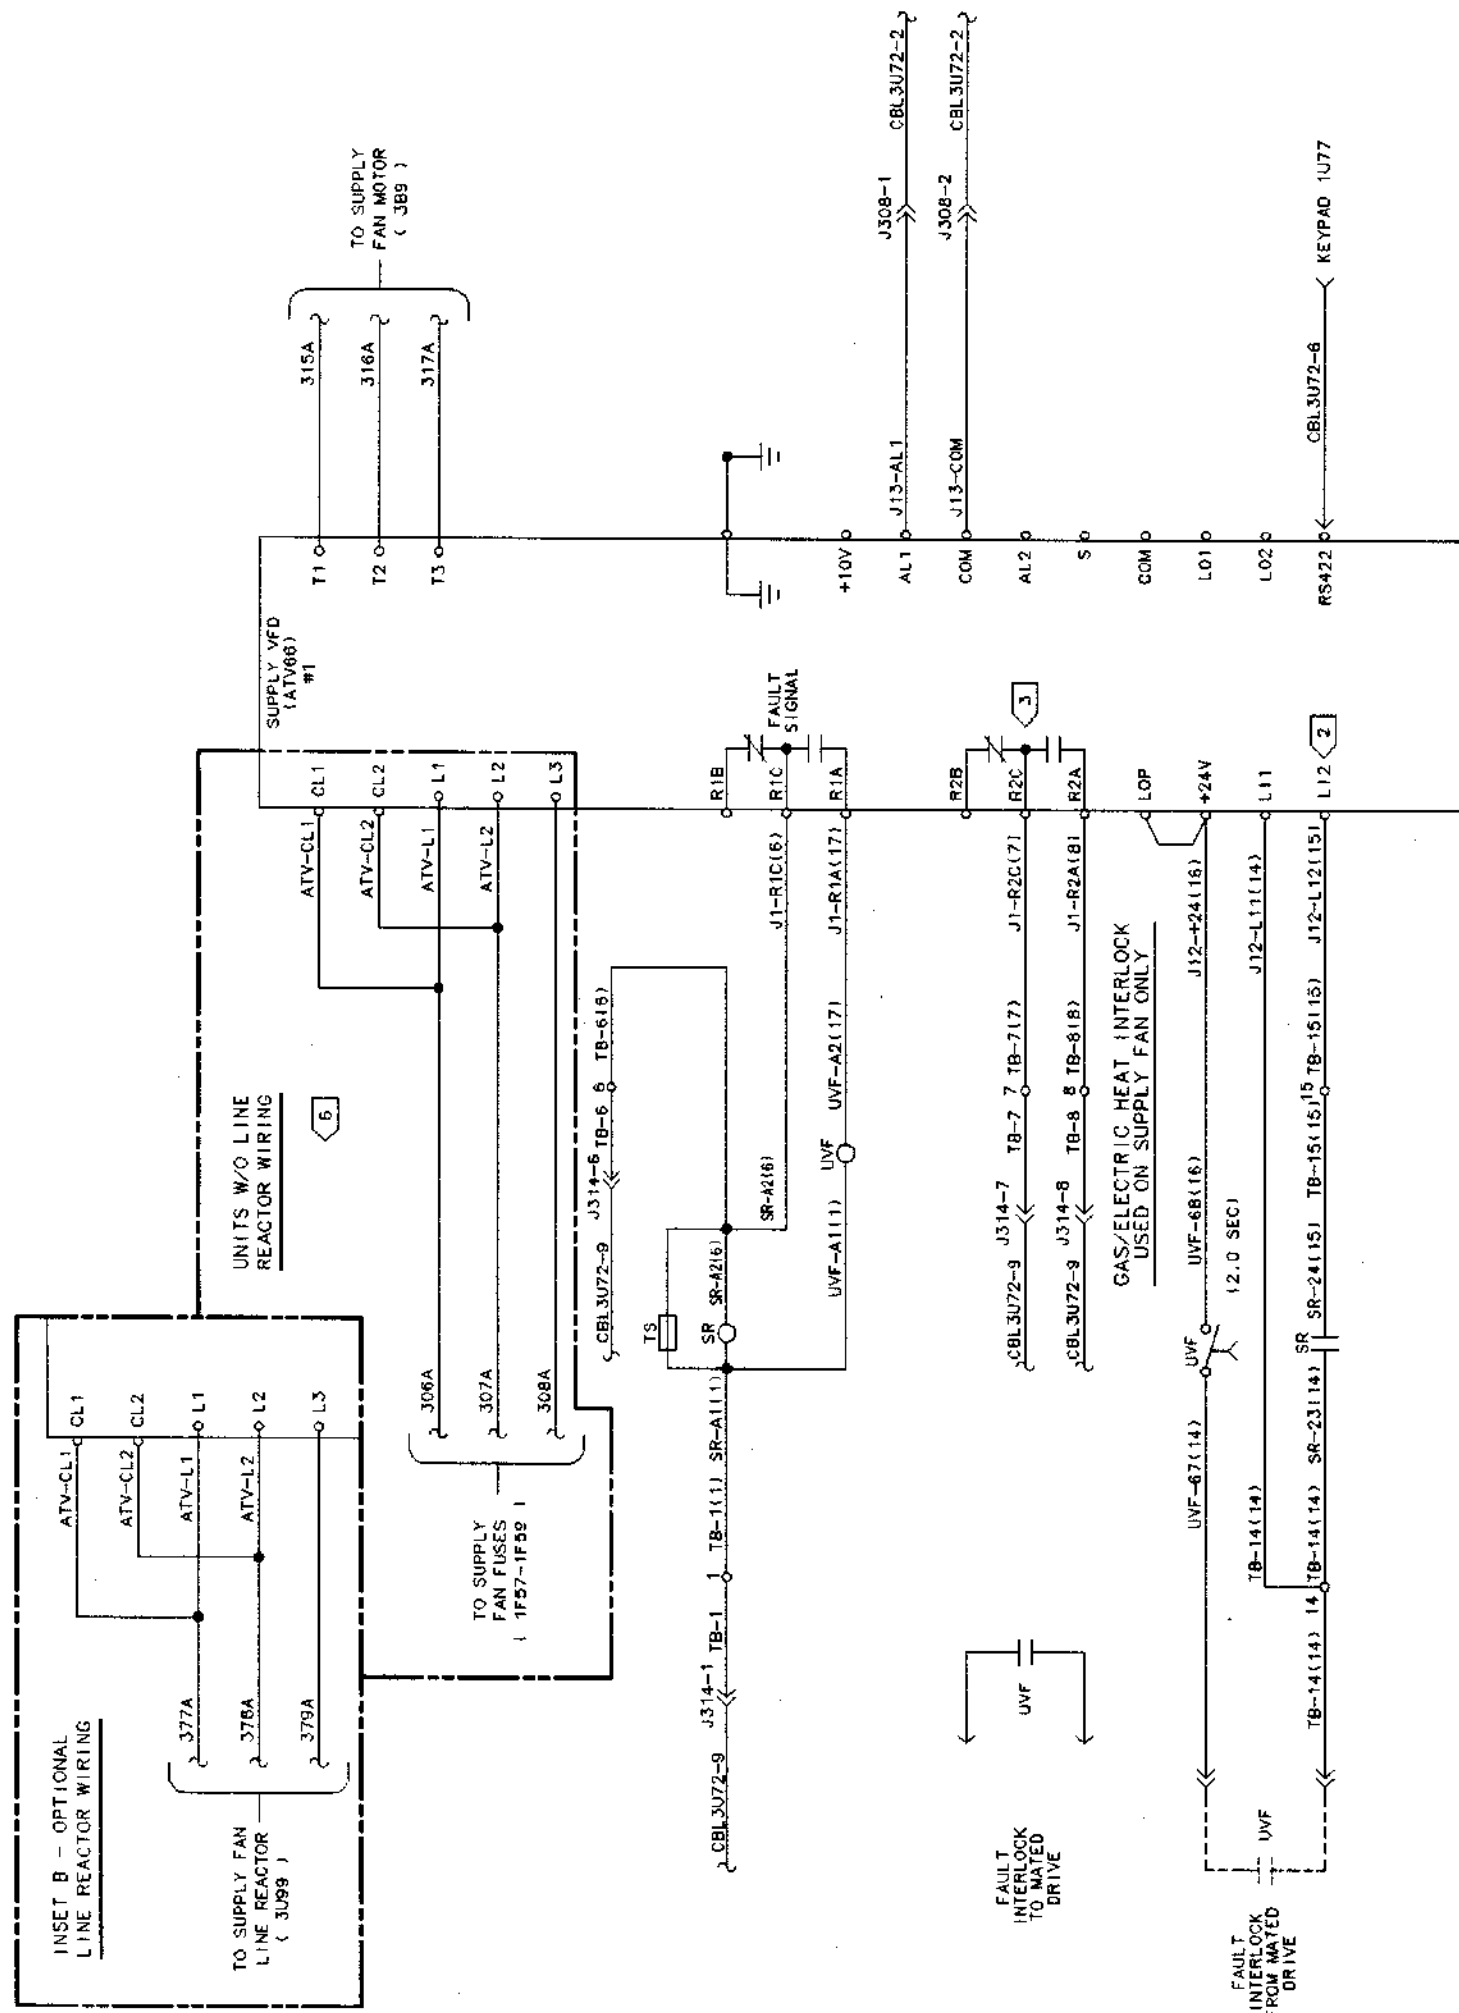

3U72 SUPPLY VFD ASSEMBLY #1

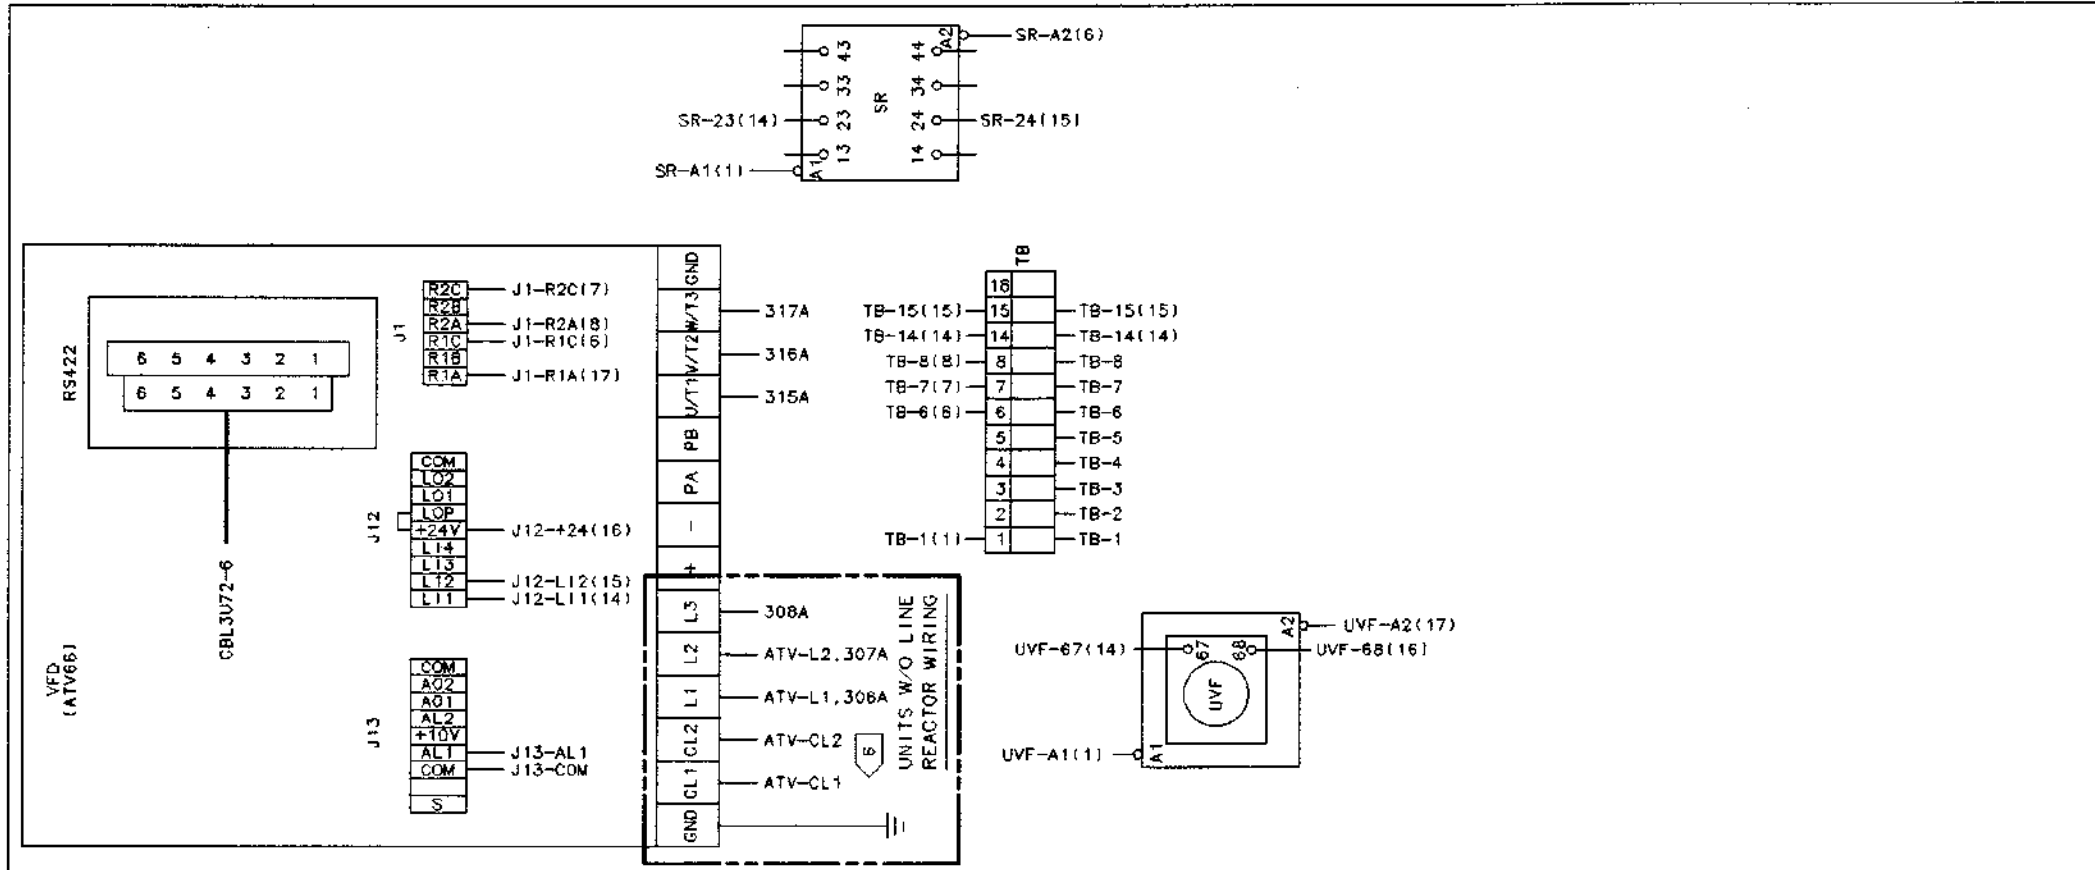

ABBREVIATIONS	
PB	POWER BLOCK
SR	START RELAY
TB	TERMINAL BLOCK
TS	TRANSIENT SUPPRESSOR
UWF	TIME-DELAY RELAY
VFD	VARIABLE FREQUENCY DRIVE

