

IMPORTANT!
DO NOT ENERGIZE
UNIT UNTIL CHECKING
AND SET-UP HAS BEEN
COMPLETED

DEVICE PREFIX LOCATION CODE	
AREA	LOCATION
1	INSIDE UNIT CONTROL BOX
2	CONDENSER SECTION
3	AIR HANDLER SECTION
4	HEATING SECTION
5	EXTERNAL FIELD MOUNTED DEVICE


WARNING
HAZARDOUS VOLTAGE!
DISCONNECT ALL ELECTRICAL POWER
BEFORE SERVICING. DISCONNECTS
FAILURE TO DISCONNECT POWER
BEFORE SERVICING CAN CAUSE SEVERE
PERSONAL INJURY OR DEATH.

AVERTISSEMENT
VOLTAGE HASARDEUX!
DECONNECTEZ TOUTES LES SOURCES
ELECTRIQUES INCLUANT LES STANCES
AVANT D'EFFECTUER LE TRAVAIL.
FAUTE DE DECONNECTER LA SOURCE
ELECTRIQUE AVANT D'EFFECTUER
LE TRAVAIL PEUT ENTRAINER DES
BLESSES CORPORELLES SEVERES
OU LA MORT.

CAUTION
USE COPPER CONDUCTORS ONLY!
UNIT TERMINALS ARE NOT DESIGNED
TO ACCEPT OTHER TYPES OF
CONDUCTORS.
FAILURE TO DO SO MAY CAUSE
DAMAGE TO THE EQUIPMENT.

NOTES

- 2 PROGRAM CONTROL FOR 2 WIRE CONTROL.
3 PROGRAM R2 AS RUNNING STATE.
B VFD W/O LINE REACTOR WIRING SHOWN. SEE INSETS
C B C FOR VFD W/O LINE REACTOR WIRING.

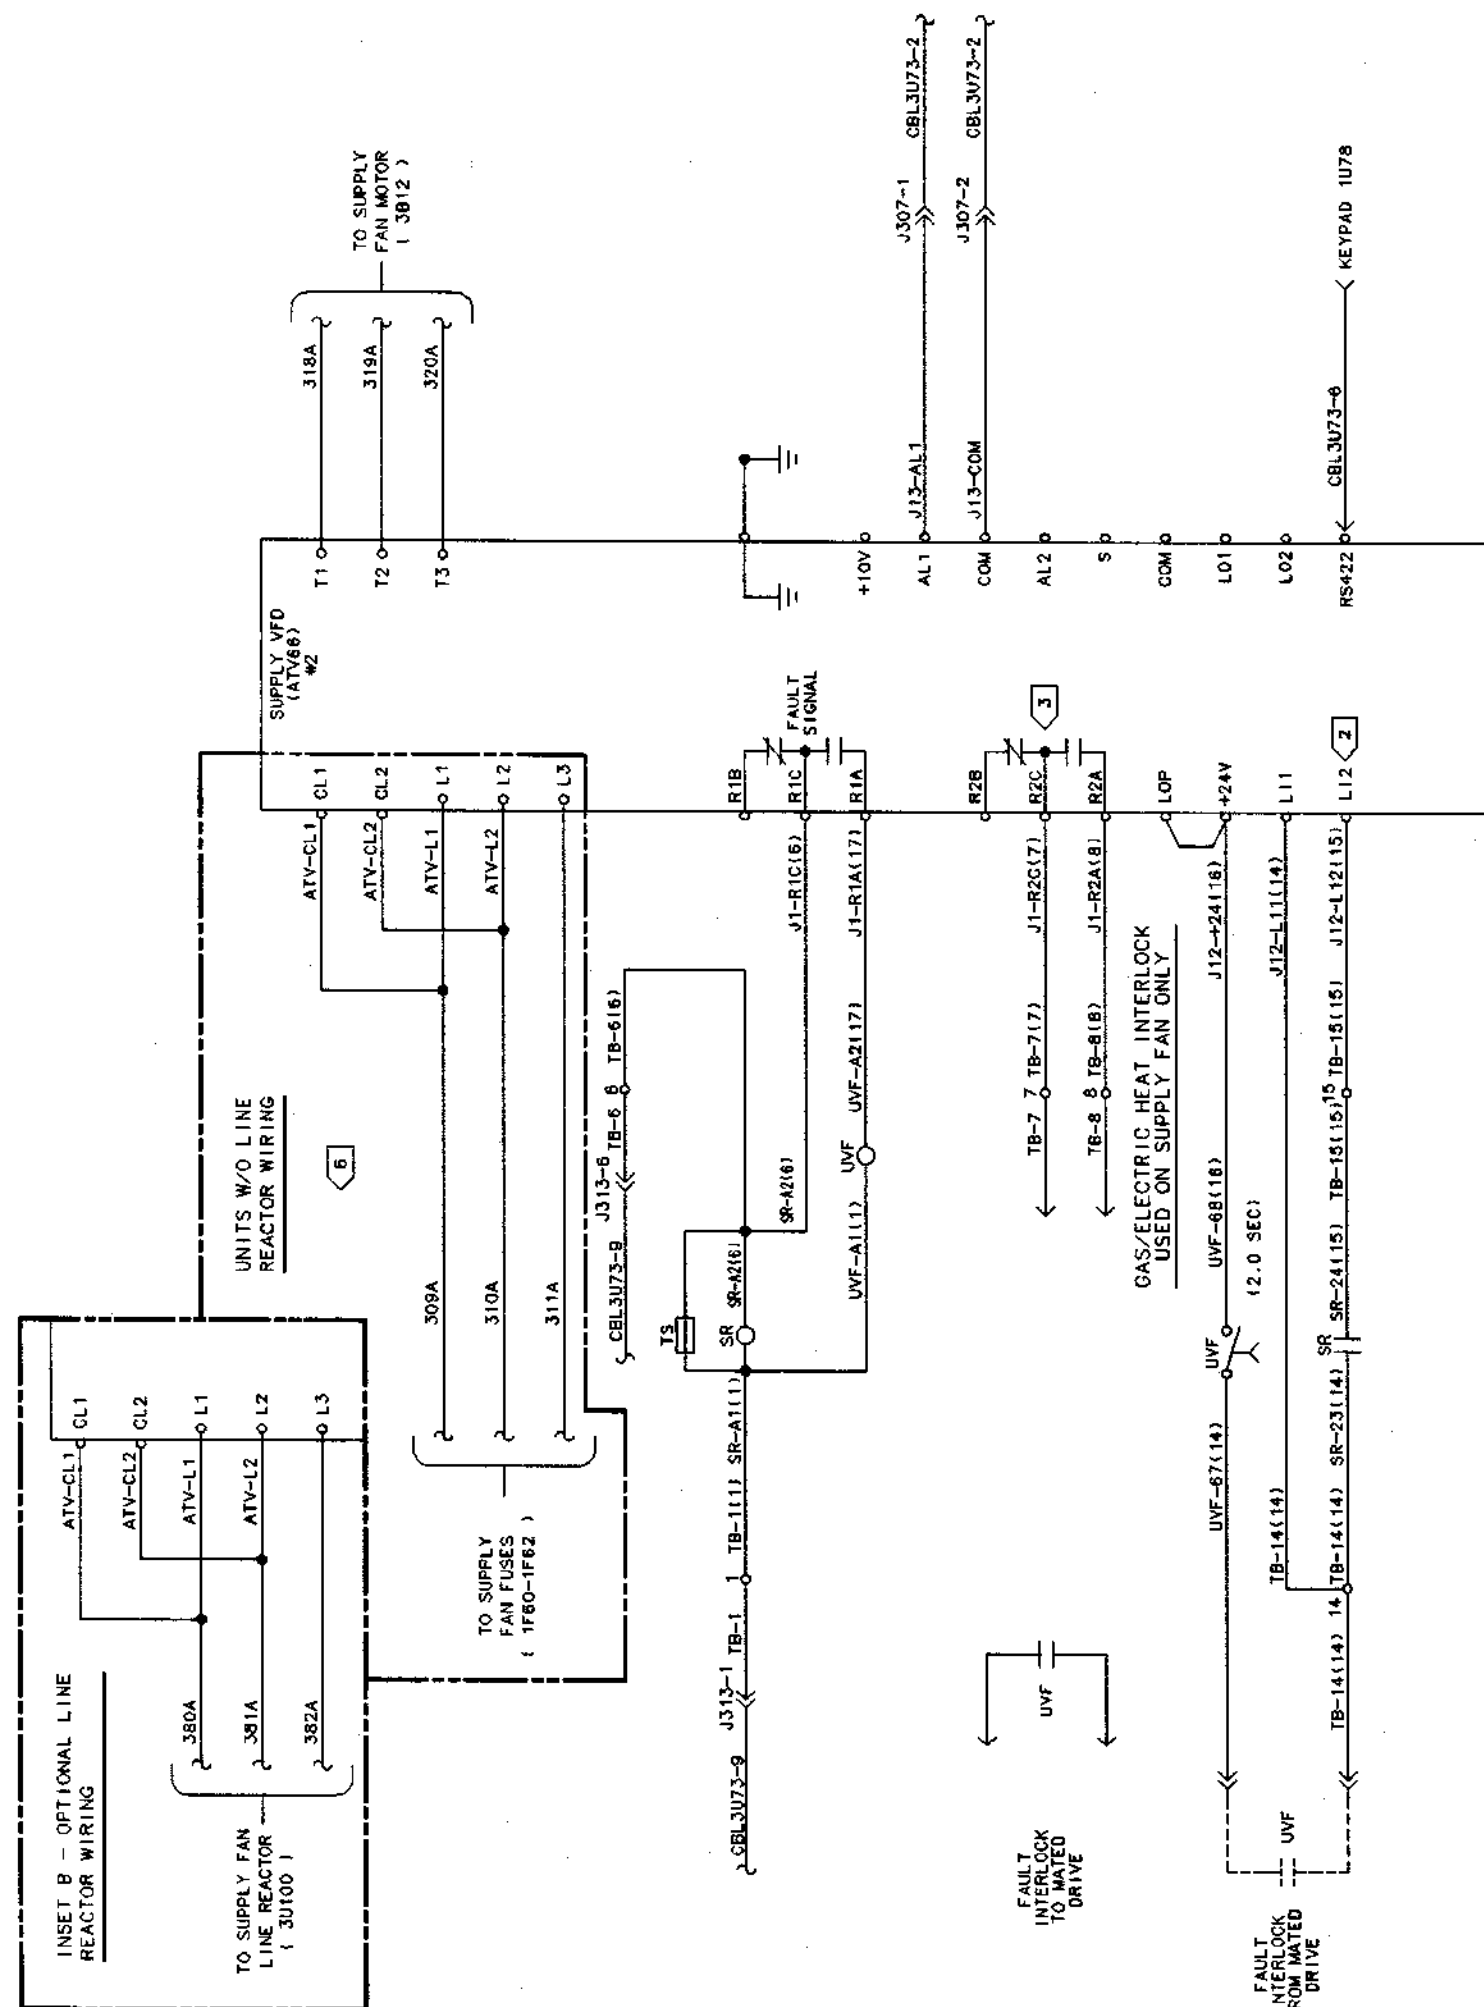

3U73 SUPPLY VFD ASSEMBLY #2

