

NOTES

- CONSTANT VOLUME ONLY - WHEN CUSTOMER INSTALLED DUCT SENSOR (871) - SEE FIELD DIAGRAM IS REQUIRED. REMOVE RESISTOR (771) - 770B-3 & 67 AND INSTALL PER FIELD WIRING DIAGRAM.
- VARIABLE AIR VOLUME ONLY - REMOVE RESISTOR (770B FROM 770B-4 & 770B-5) WHEN FIELD SUPPLIED ECONOMIZER IS REQUIRED.
- VARIABLE AIR VOLUME ONLY - RESISTOR (770A - 2000) AS SHOWN IS FOR 20 THRU 30 TON UNITS. RESISTOR IS 4000 ON 40 THRU 60 TON UNITS.
- "EVP" ONLY - SEE "EVP" CONTROL PANEL DIAGRAM FOR INTERCONNECTION BETWEEN UNIT CONTROLS. PANEL AREA 11 WITH "EVP" PLATE AREA 17 INSTALLED AND "EVP" CONTROL PANEL AREA 8 - CUSTOMER INSTALLED.
- "EVP" ONLY - WIRING "20A" "21A" & "22B" ARE REQUIRED FOR 40, 50 & 60 TON UNITS ONLY. WIRES ARE PRESENT ON EVP ADDER PLATE FOR 20 THRU 30 TON UNITS BUT NOT USED.
- VARIABLE AIR VOLUME ONLY - REMOVE FACTORY INSTALLED RESISTOR (770A - 8000 FROM TULL ON ALL 30 THRU 60 TON UNITS.

IMPORTANT!
DO NOT DISCONNECT
AND RE-CONNECT
WIRING WITHOUT
HOLDING THE
WIRING IN PLACE

WARNING

HAZARDOUS VOLTAGE!
DISCONNECT ALL ELECTRIC POWER
INCLUDING REMOTE DISCONNECTS
BEFORE SERVICING.
FAILURE TO DISCONNECT POWER
BEFORE SERVICING CAN CAUSE SEVERE
PERSONAL INJURY OR DEATH.

AVERTISSEMENT

VOLTAJE HASARDEUX!
DECONNECTEZ TOUTES LES SOURCES
ELECTRIQUES INCLUANT LES
DISJONCTEURS SITUES A DISTANCE
AVANT D'ETRECTION L'ENTRETIEN.
FAUTE DE DECONNECTER LA SOURCE
ELECTRIQUE AVANT D'ETRECTION
PEUT CAUSER DE GRAVES LESIONS
CORPORELLES SEVERES
OU LA MORT.

CAUTION

USE COPPER CONDUCTORS ONLY!
UNIT TERMINALS ARE NOT DESIGNED
TO ACCEPT OTHER TYPES OF
CONDUCTORS.
FAILURE TO DO SO MAY CAUSE
DAMAGE TO THE EQUIPMENT.

SEE APPROPRIATE INSET FOR APPLICABLE CONTROL VARIATION

OPTIONAL (AREA 7)
"CONSTANT VOLUME" CONTROLS PLATE

OPTIONAL (AREA 7)
"VARIABLE AIR VOLUME" CONTROLS PLATE

OPTIONAL (AREA 7)
"EVP" CONTROLS PLATE

