 

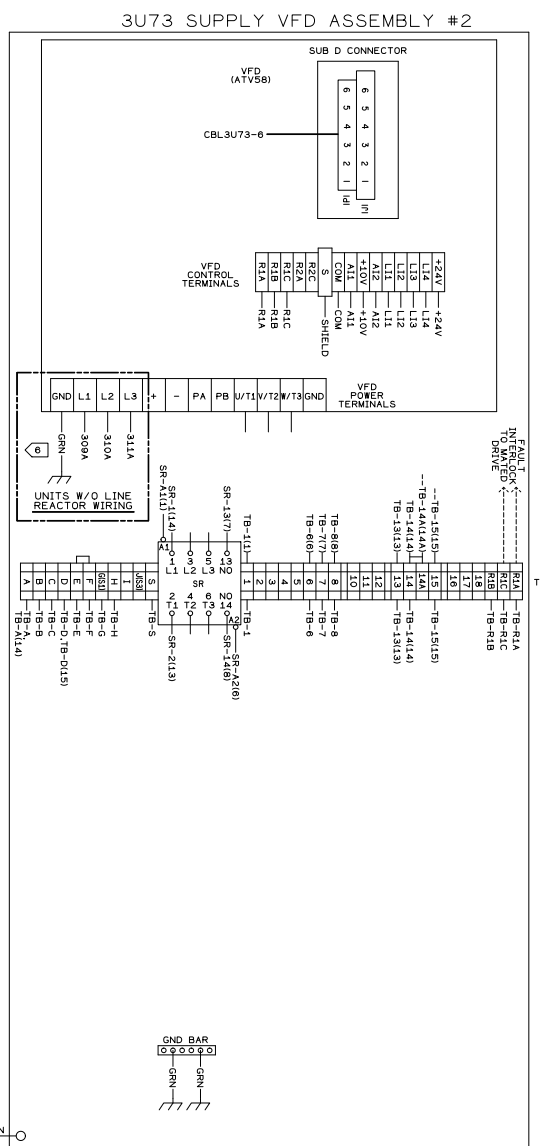
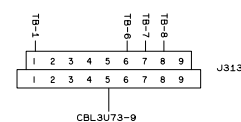


- 1 —
- 2 —
- 3 —
- 4 —
- 5 —
- 6 —
- 7 —
- 8 —
- 9 —
- 10 —
- 11 —
- 12 —
- 13 —
- 14 —
- 15 —
- 16 —
- 17 —
- 18 —
- 19 —
- 20 —
- 21 —
- 22 —
- 23 —
- 24 —
- 25 —
- 26 —
- 27 —
- 28 —
- 29 —
- 30 —
- 31 —
- 32 —
- 33 —
- 34 —
- 35 —
- 36 —
- 37 —
- 38 —
- 39 —
- 40 —
- 41 —
- 42 —
- 43 —
- 44 —
- 45 —
- 46 —
- 47 —
- 48 —
- 49 —
- 50 —
- 51 —
- 52 —
- 53 —
- 54 —
- 55 —
- 56 —
- 57 —
- 58 —
- 59 —
- 60 —

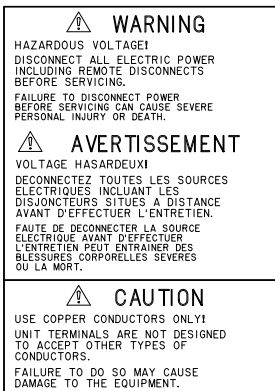

| DEVICE PREFIX LOCATION CODE |                               |
|-----------------------------|-------------------------------|
| AREA                        | LOCATION                      |
| 1                           | INSIDE UNIT CONTROL BOX       |
| 2                           | CONDENSER SECTION             |
| 3                           | AIR HANDLER SECTION           |
| 4                           | HEATING SECTION               |
| 5                           | EXTERNAL FIELD MOUNTED DEVICE |

[illegible]