



TRANE

Date:04-03-96

HERMETIC CENTRIFUGAL LIQUID CHILLER

CENTRAVAC®
FIELD CONNECTION WIRING - STARTER BY OTHERS
CVHE,CVHF,CVHG


DRAWING NUMBER
2307-5219

REV
A

1. ALWAYS LOCK OUT, TAG OUT, AND DISCONNECT ALL ELECTRICAL POWER TO THE CHILLER BEFORE ANY FIELD WIRING IS DONE. NEVER ATTEMPT TO REPAIR OR REPLACE ANY ELECTRICAL COMPONENTS WHILE THE CHILLER IS ENERGIZED.
2. DO NOT ATTEMPT TO REPAIR OR REPLACE ANY ELECTRICAL COMPONENTS WHILE THE CHILLER IS ENERGIZED. ALWAYS LOCK OUT, TAG OUT, AND DISCONNECT ALL ELECTRICAL POWER TO THE CHILLER BEFORE ANY FIELD WIRING IS DONE.
3. BE AWARE THAT THE CHILLER CONTAINS HIGH VOLTAGE (240V) ELECTRICAL COMPONENTS. ALWAYS LOCK OUT, TAG OUT, AND DISCONNECT ALL ELECTRICAL POWER TO THE CHILLER BEFORE ANY FIELD WIRING IS DONE.
4. ALWAYS WEAR PROPERLY FITTING SAFETY GLASSES AND PROTECTIVE CLOTHING WHEN WORKING ON THE CHILLER.
5. ALWAYS USE THE CORRECT WIRING GAUGE AND TYPE OF WIRE AS SPECIFIED IN THE WIRING DIAGRAM.
6. ALWAYS USE THE CORRECT WIRING METHOD AND WIRING MATERIALS AS SPECIFIED IN THE WIRING DIAGRAM.
7. ALWAYS USE THE CORRECT WIRING TERMINALS AND WIRING METHODS AS SPECIFIED IN THE WIRING DIAGRAM.
8. ALWAYS USE THE CORRECT WIRING TERMINALS AND WIRING METHODS AS SPECIFIED IN THE WIRING DIAGRAM.
9. ALWAYS USE THE CORRECT WIRING TERMINALS AND WIRING METHODS AS SPECIFIED IN THE WIRING DIAGRAM.
10. ALWAYS USE THE CORRECT WIRING TERMINALS AND WIRING METHODS AS SPECIFIED IN THE WIRING DIAGRAM.

⚠ WARNING
DISCONNECT ALL ELECTRICAL POWER INCLUDING REMOTE DISCONNECTS BEFORE SERVICING. FAILURE TO DISCONNECT POWER BEFORE SERVICING CAN CAUSE SEVERE PERSONAL INJURY OR DEATH.

⚠ CAUTION
USE COPPER CONDUCTORS ONLY TO ACCEPT OTHER TYPES OF CONDUCTORS. FAILURE TO DO SO MAY CAUSE DAMAGE TO THE EQUIPMENT.

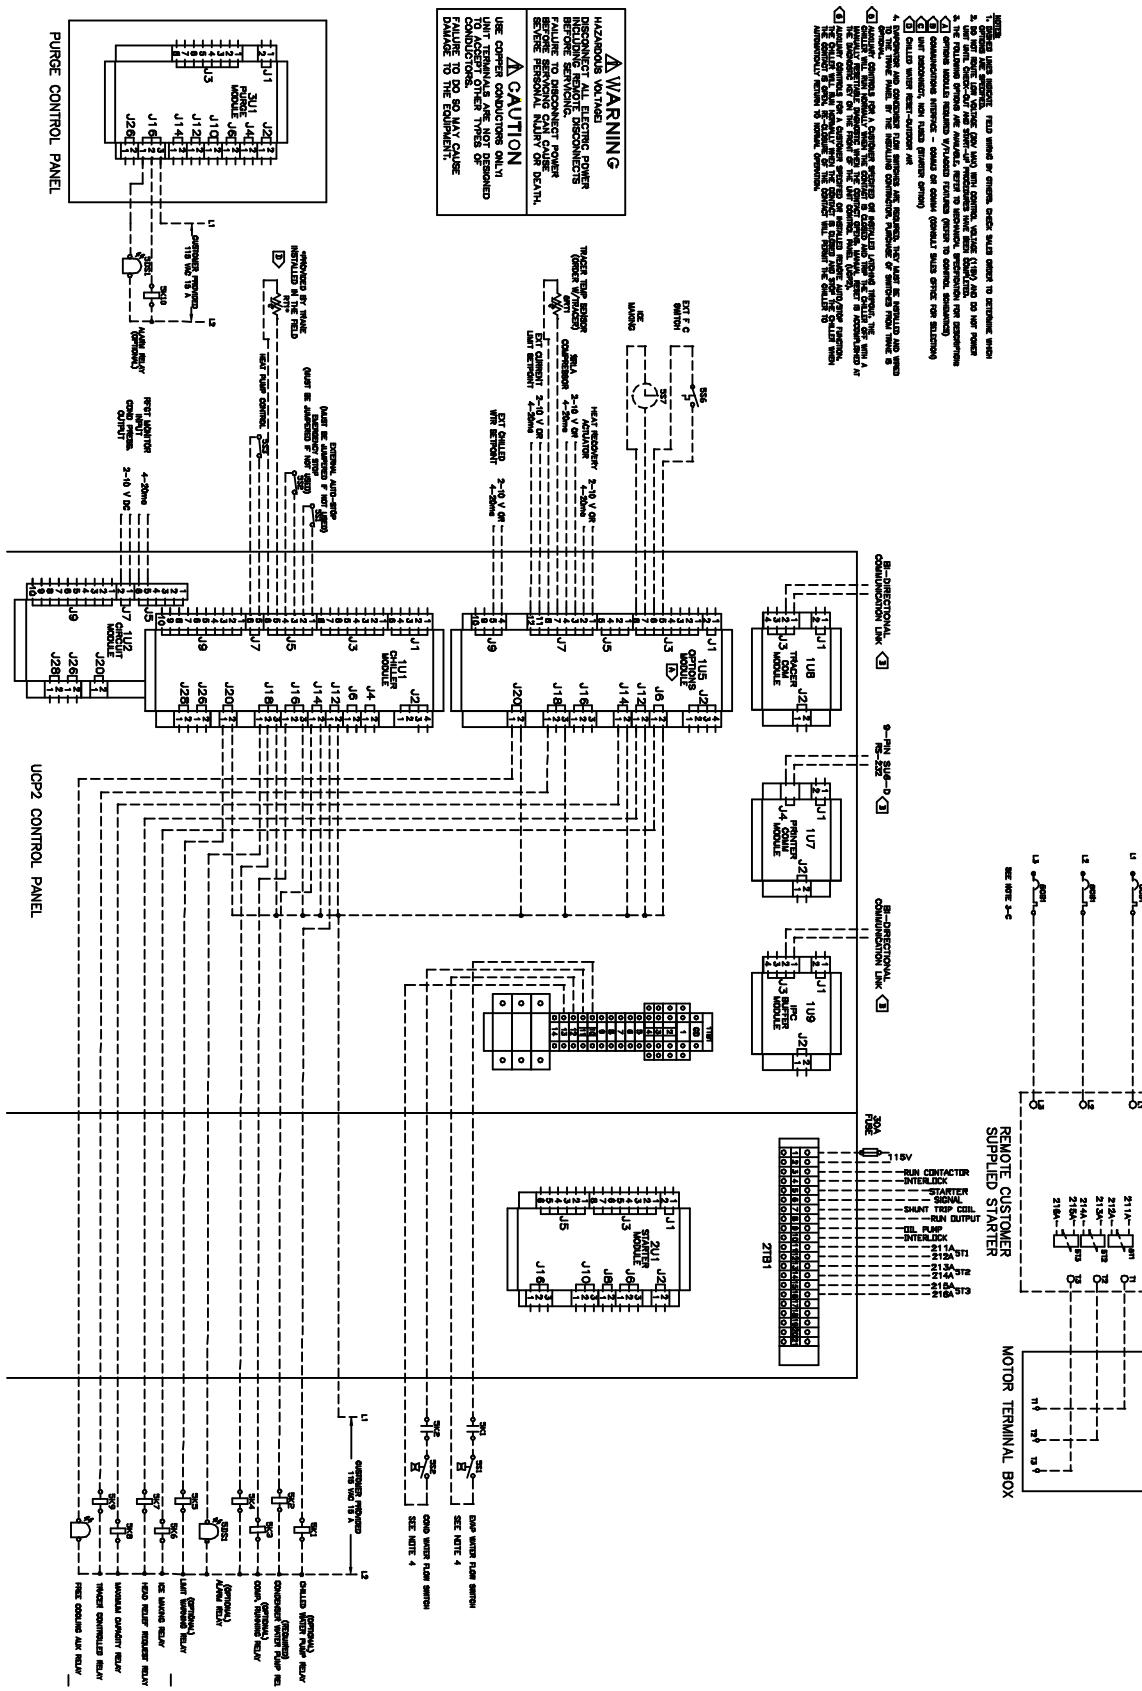

⚠ WARNING
HAZARDOUS VOLTAGE.
DISCONNECT ALL ELECTRICAL POWER INCLUDING REMOTE DISCONNECTS BEFORE SERVICING.
FAILURE TO DISCONNECT POWER BEFORE SERVICING CAN CAUSE SEVERE PERSONAL INJURY OR DEATH.

⚠ AVERTISSEMENT
VOLTAGE DANGEREUX.
DECONNECTEZ TOUTES LES SOURCES ELECTRIQUES INCLUANT LES DISCONNECTS LOINTAINS AVANT D'EXECUTER L'ENTRETIEN.
FAUTE DE DECONNECTER LA SOURCE ELECTRIQUE AVANT D'EXECUTER L'ENTRETIEN PEUT ENTRAINER DES BLESSURES CORPORELLES SEVERES OU LA MORT.

⚠ CAUTION
USE COPPER CONDUCTORS ONLY. UNIT TERMINALS ARE NOT DESIGNED TO ACCEPT OTHER TYPES OF CONDUCTORS.
FAILURE TO DO SO MAY CAUSE DAMAGE TO THE EQUIPMENT.

THIS DRAWING IS PROPRIETARY AND SHALL NOT BE COPIED OR ITS CONTENTS DISCLOSED TO OTHER PARTIES WITHOUT THE WRITTEN CONSENT OF THE TRANE COMPANY.