




SENSORS

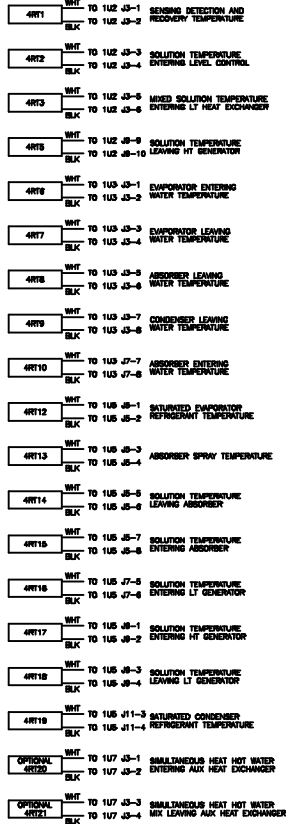


ADJUSTABLE FREQUENCY DRIVES

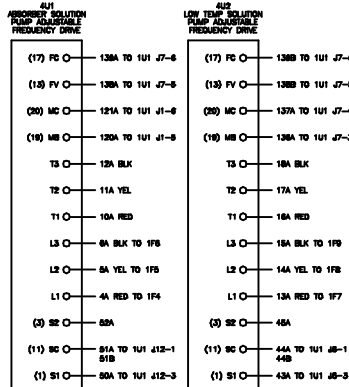


PURGE

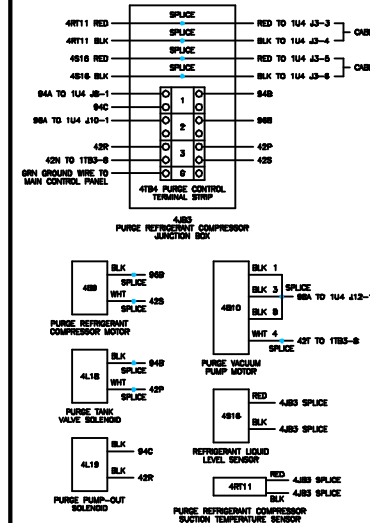


PUMP MOTORS

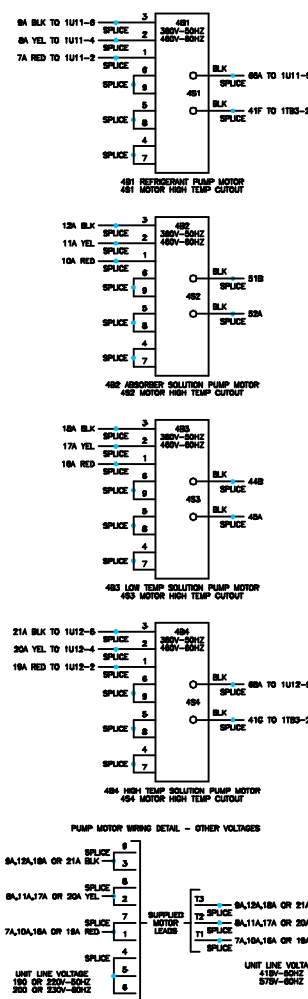

VALVES

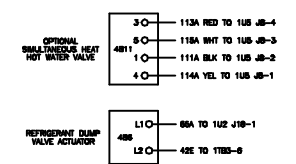

PRESSURE TRANSDUCERS

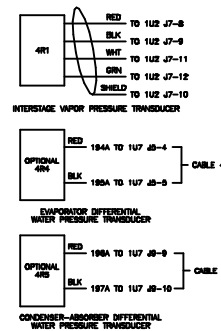

IF UNIT TERMINAL, WIRE OR OTHERWISE Labeled OTHERWISE, SEE 2307-8227	ALTERNATE WIRING SCHEMATIC SEE 2307-8227	SEE 2307-8227 WIRING SCHEMATIC SEE 2307-8227	2307-8227
WIRE GAUGE 18-22	WIRE GAUGE 18-22	WIRE GAUGE 18-22	WIRE GAUGE 18-22
WIRE TYPE 18-22	WIRE TYPE 18-22	WIRE TYPE 18-22	WIRE TYPE 18-22
WIRE COLOR 18-22	WIRE COLOR 18-22	WIRE COLOR 18-22	WIRE COLOR 18-22

CONNECTION DIAGRAM
UNIT MOUNTED CONTROLS
AREA HIDDEN ABSORPTION

- SHEET 2 OF 3 -

NOTES:

- REFER TO DRAWING 2307-8227 FOR MAIN UNIT CONTROL PANEL MOUNTED DEVICES AND WIRING. REFER TO DRAWING 2307-8228 FOR BURNER, BURNER CONTROL PANEL AND FUEL TANK MOUNTED DEVICES AND WIRING VARIATIONS.
- ALL TRANE DEVICES AND ASSOCIATED WIRING MARKED AS OPTIONAL MAY NOT BE PRESENT ON THE UNIT. UNLESS REQUIRED BY CONTROL OPTIONS SPECIFIED ON THE BILLS OF MATERIAL, REFER TO THE AS-BUILT SCHEMATIC WIRING DIAGRAM SUPPLIED WITH THE UNIT TO DETERMINE OPTIONAL TRANE DEVICES AND WIRING ACTUALLY SUPPLIED ON THE UNIT. REFER TO THE UNIT FIELD CONNECTION DIAGRAM SUPPLIED WITH THE UNIT TO DETERMINE THE ACTUAL CUSTOMER SUPPLIED DEVICES AND WIRING REQUIRED ON THE UNIT.
- TERMINALS INDICATED ON 4U1 AND 4U2 DEVICES ARE USED ON ALL UNIT LINE VOLTAGES EXCEPT 57B-60HZ. WHEN UNIT LINE VOLTAGE IS 57B-60HZ, DEVICE TERMINALS SHOWN IN PARENTHESES ARE USED.

DEVICE PREFIX CODES:
1 = MAIN UNIT CONTROL PANEL
2 = BURNER CONTROL PANEL
4 = UNIT MOUNTED DEVICE
5 = CUSTOMER PROVIDED DEVICE

WARNING
HAZARDOUS VOLTAGE!
DISCONNECT ALL ELECTRIC POWER
INCLUDING REMOTE DISCONNECTS
BEFORE SERVICING.
FAILURE TO DISCONNECT POWER
BEFORE SERVICING CAN CAUSE
SEVERE PERSONAL INJURY OR DEATH.
AVERTISSEMENT
DANGER D'ÉLECTRICITÉ!
DÉCONNECTEZ TOUTES LES SOURCES
ÉLECTRIQUES Y COMPRIS LES
DISCONNECTS À DISTANCE
AVANT D'EFFECTUER L'ENTRETIEN.
FAUTE DE DÉCONNECTER LA SOURCE
ÉLECTRIQUE AVANT D'EFFECTUER
L'ENTRETIEN PEUT ENTRAINER DES
BLESSURES CORPORELLES SÉVÈRES
OU LA MORT.

CAUTION
USE COPPER CONDUCTORS ONLY!
UNIT TERMINALS ARE NOT DESIGNED
TO ACCEPT OTHER TYPES OF