



20	OPTIONAL REMOTE PANEL (5U22) OR ZONE PANEL (5U23) OR REMOTE PANEL WITH NIGHT SET BACK (5U24) MAY BE USED WITH CVT UNITS.
21	FOR OPTIONAL REMOTE ZONE TEMP SENSOR , DO NOT CONNECT TERMINAL 1 (5U22) OR (5U23) AND CONNECT (5U23) AS SHOWN. 5U23 IS USED FOR: 1. CVT REMOTE ZONE TEMP SENSING OR CONTROL SENSING 2. CVT REMOTE ZONE TEMP SENSING OR CONTROL SENSING
22	OPTIONAL REMOTE PANEL (5U22) OR REMOTE PANEL WITH NIGHT SET BACK (5U24) MAY BE USED WITH ALL 115V APPLICATIONS. BINARY INPUTS/OUTPUTS ASSOCIATED WITH FAN CONTROL ARE 115 VAC.
23	USE CLASS 1 WIRING FOR ALL 115V APPLICATIONS.
24	UNIT WIRING SHOWS AIRSIDE ECONOMIZER INSTALLED. SEE INSET "A" WHEN O/A DAMPER IS REQUIRED.
25	REMOVE JUMPER W14 FOR EXTERNAL AUTO/STOP INPUT.
26	FIELD SUPPLIED AND INSTALLED OCCUPIED/UNOCCUPIED CONTACTS FOR USE ON UNITS WITHOUT REMOTE PANEL WITH NIGHT SETBACK (5U24).
27	CHANGEOVER INPUT TO BE USED ONLY ON VAV UNITS WITH HYDRONIC HEAT.
28	USE CLASS 2 WIRING FOR 24 VDC AND 24 VDC APPLICATIONS. ANALOG/BINARY INPUT AND ANALOG OUTPUTS ARE 24 VDC. BINARY OUTPUTS ARE 24 VAC.
29	ALARM OUTPUT SWITCHES DURING ANY MANUAL RESET DIAGNOSTIC.
30	O/A TEMP SENSOR REQUIRED FOR AIRSIDE ECONOMIZER OPERATION. LOW AMBIENT LOCK OUT, AND AIR COOLED LOW PRESSURE CUT-OUT TIME DELAY.
31	WHEN 5U20 REMOTE ZONE TEMP SENSOR IS USED, ATTACH IT TO 5U24 TERMINALS S1 AND S2.
32	OPTIONAL TIMED OVERSPEED INITIATE BUTTON.
33	O/A HUMIDITY SENSOR REQUIRED FOR AIRSIDE ECONOMIZER OPERATION.
34	REMOVE JUMPER W11, FOR RUN PERMISSION CONTROL. IF THIS CONTROL OPTION IS USED, ALL CONNECTIONS MUST ALSO BE MADE FOR THE FAN RUN REQUEST CIRCUIT. SEE INSET B.
35	CONTACTS CONNECTED TO THE UNOCCUPIED INPUT ARE CUSTOMER SUPPLIED WHEN THE TIMECLOCK IS NOT FACTORY INSTALLED. UNIT WILL BE IN UNOCCUPIED MODE WHEN CONTACT IS CLOSED.
36	REMOVE JUMPER W12 WHEN EMERGENCY STOP INPUT IS DESIRED. REMOVE JUMPER W13 WHEN SUPPLY DUCT HIGH TEMP, T'STAT AND/OR PLENUM HIGH STATIC PRESSURE SWITCH OPTION IS DESIRED.
37	WHEN ELECTRIC HEAT IS INSTALLED, MOVE THE SUPPLY AIR TEMP. SENSOR DOWN STREAM OF THE ELECTRIC HEATERS.
39	THE ZONE TEMP. SENSOR MAY BE ORDERED 3 DIFFERENT WAYS: 1) TEMP. THERMISTOR ONLY 2) TEMP. THERMISTOR WITH OVERRIDE AND CANCEL BUTTONS 3) TEMP. THERMISTOR WITH OVERRIDE/CANCEL BUTTONS WITH VARIABLE SETPOINT POTENTIOMETER.

⚠️ ADVERTENCIA

VOLTAJE PELIGROSO!

DESCONECTE TODA LA ENERGÍA ELÉCTRICA, INCLUSO LAS DESCONEXIONES REMOTAS Y SIGA LOS PROCEDIMIENTOS DE CIERRE Y ETIQUETADO ANTES DE PROCEDER AL SERVICIO. ASEGURESE DE QUE TODOS LOS COMPONENTES DEL MOTOR HAYAN DESCARGADO EL VOLTAJE ALMACENADO. PARA LAS UNIDADES CON EJE DE DIRECCIÓN DE VELOCIDAD VARIABLE, CONSULTE LAS INSTRUCCIONES PARA LA DESCARGA DEL CONDENSADOR.

EL NO REALIZAR LO ANTERIORMENTE INDICADO, PODRÍA CAUSAR LA MUERTE O SERIAS LESIONES PERSONALES.