
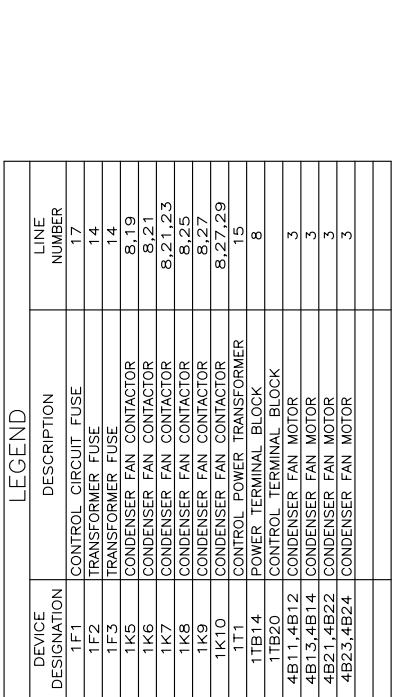


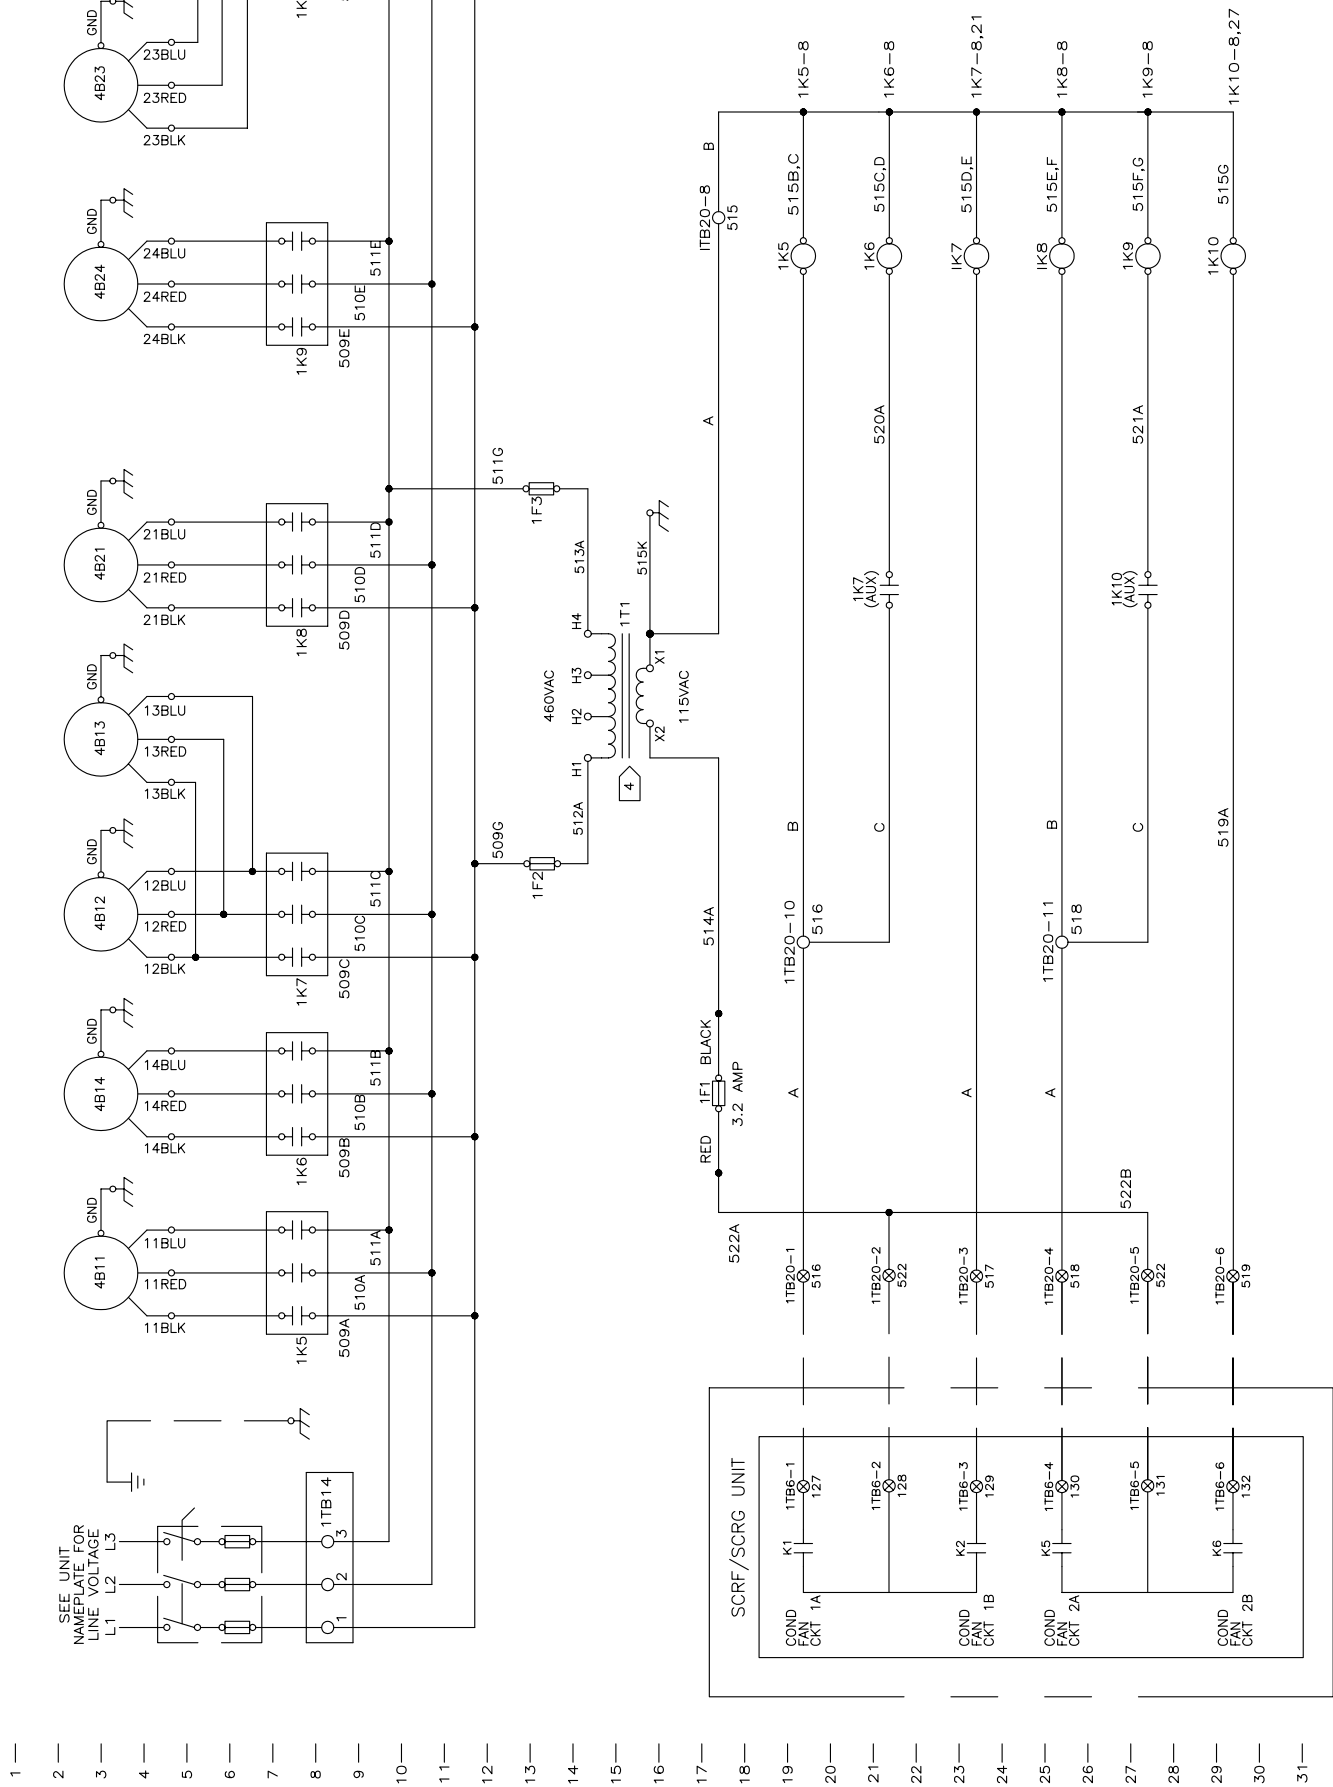

DEVICE PREFIX LOCATION CODE	
AREA	LOCATION
1	CONTROL PANEL
4	EXTERNAL MOUNTED COMPONENTS
6	CUSTOMER PROVIDED DEVICE


NOTE:

1. DASHED LINES INDICATE RECOMMENDED FIELD WIRING BY OTHERS. DASHED LINE ENCLOSURES AND/OR DASHED DEVICE OUTLINES INDICATE COMPONENTS PROVIDED BY THE FIELD. PHANTOM LINE ENCLOSURES INDICATE ALTERNATE CIRCUITRY OR AVAILABLE SALES OPTIONS. SOLID LINES INDICATE WIRING BY THE TRANE COMPANY.
2. UNLESS OTHERWISE NOTED, ALL SWITCHES ARE SHOWN AT 25°C (77°F) AT ATMOSPHERIC PRESSURE, AT 50% RELATIVE HUMIDITY, WITH ALL UTILITIES TURNED OFF AND AFTER A NORMAL SHUTDOWN HAS OCCURRED.
3. NUMBERS ALONG THE RIGHT SIDE OF THE SCHEMATIC DESIGNATE THE LOCATION OF THE CONTACTS BY LINE NUMBER.

CONNECTIONS SHOWN TO TRANSFORMER 1T1 ARE FOR 460V/60 HZ OPERATION. SEE THE FOLLOWING INSETS FOR OTHER VOLTAGE CONNECTIONS:

INSET "A" - 200 VOLT/60 HZ
INSET "B" - 575 VOLT/60 HZ

SEE INSET "D" FOR CONNECTIONS WHEN CONDENSER UNIT IS PAIRED WITH AN INDOOR EVAPORATOR UNIT PROVIDED BY OTHER MANUFACTURERS.

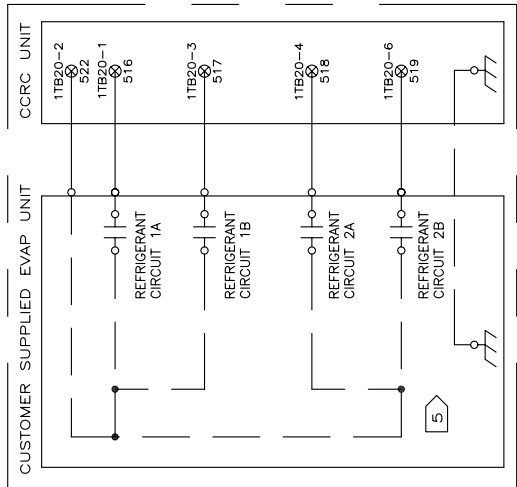

STAGES OF FAN OPERATION		
STAGE	COND FAN CKT IN OPERATION	COND FAN(S) IN OPERATION
1	COND FAN CKT (1A) ONLY	(4B11)
2	COND FAN CKT (1B) ONLY	(4B12, 4B13)
3	COND FAN CKT (1A) AND (1B)	(4B11, 4B12, 4B13, 4B14)
4	COND FAN CKT (2A) ONLY	(4B21)
5	COND FAN CKT (2B) ONLY	(4B22, 4B23)
6	COND FAN CKT (2A) AND (2B)	(4B21, 4B22, 4B23, 4B24)

[illegible]

⚠ WARNING HAZARDOUS VOLTAGE!
DISCONNECT ALL ELECTRIC POWER INCLUDING REMOTE DISCONNECTS AND FOLLOW LOCK OUT AND TAG PROCEDURES BEFORE SERVING. INSURE THAT ALL MOTOR CAPACITORS HAVE DISCHARGED TO ZERO VOLTAGE. UNITS MUST BE SERVICED AFTER RECEIVING INSTRUCTIONS FOR CAPACITOR DISCHARGE.

⚠ AVERTISSEMENT TENSION DANGEREUSE!
COUPER TOUTES LES TENSIONS ET OUVRIR LES SECTIONNEURS A DISTANCE, PUIS SUIVRE LES PROCÉDURES DE VERROUILLAGE ET DES ÉTIQUETTES AVANT TOUTE INTERVENTION. VÉRIFIER QUE TOUTES LES CONDENSATEURS DES MOTEURS SONT DÉCHARGÉS. DANS CAS LES UNITÉS DOIVENT ÊTRE RÉPARÉES APRÈS AVOIR REÇU LES INSTRUCTIONS POUR DÉCHARGER LES CONDENSATEURS.

⚠ ADVERTENCIA ¡VOLTAJE PELIGROSO!
DESCONECTE TODA LA ENERGÍA ELÉCTRICA, INCLUSO LAS DESCONEXIONES REMOTAS Y SIGA LOS PROCEDIMIENTOS DE CIERRE Y ETIQUETADO ANTES DE PROCEDER AL SERVICIO. ASEGURESE DE QUE TODOS LOS CAPACITORES DEL MOTOR HAYAN DESCARGADO EL VOLTAJE ALMACENADO. LAS UNIDADES DEBEN SER REPARADAS DESPUÉS DE RECIBIR LAS INSTRUCCIONES PARA LA DESCARGA DEL CONDENSADOR.

FAILURE TO DO THE ABOVE BEFORE SERVING COULD RESULT IN DEATH OR SERIOUS INJURY.

NE PAS RESPECTER CES MESURES DE PRÉCAUTION PEUT ENTRAÎNER DES BLESSURES GRAVES POUVANT ÊTRE MORTELLES.

EL NO REALIZAR LO ANTERIORMENTE INDICADO, PODRÍA OCASIONAR LA MUERTE O SERIAS LESIONES PERSONALES.