


MAIN CONTROL BOX

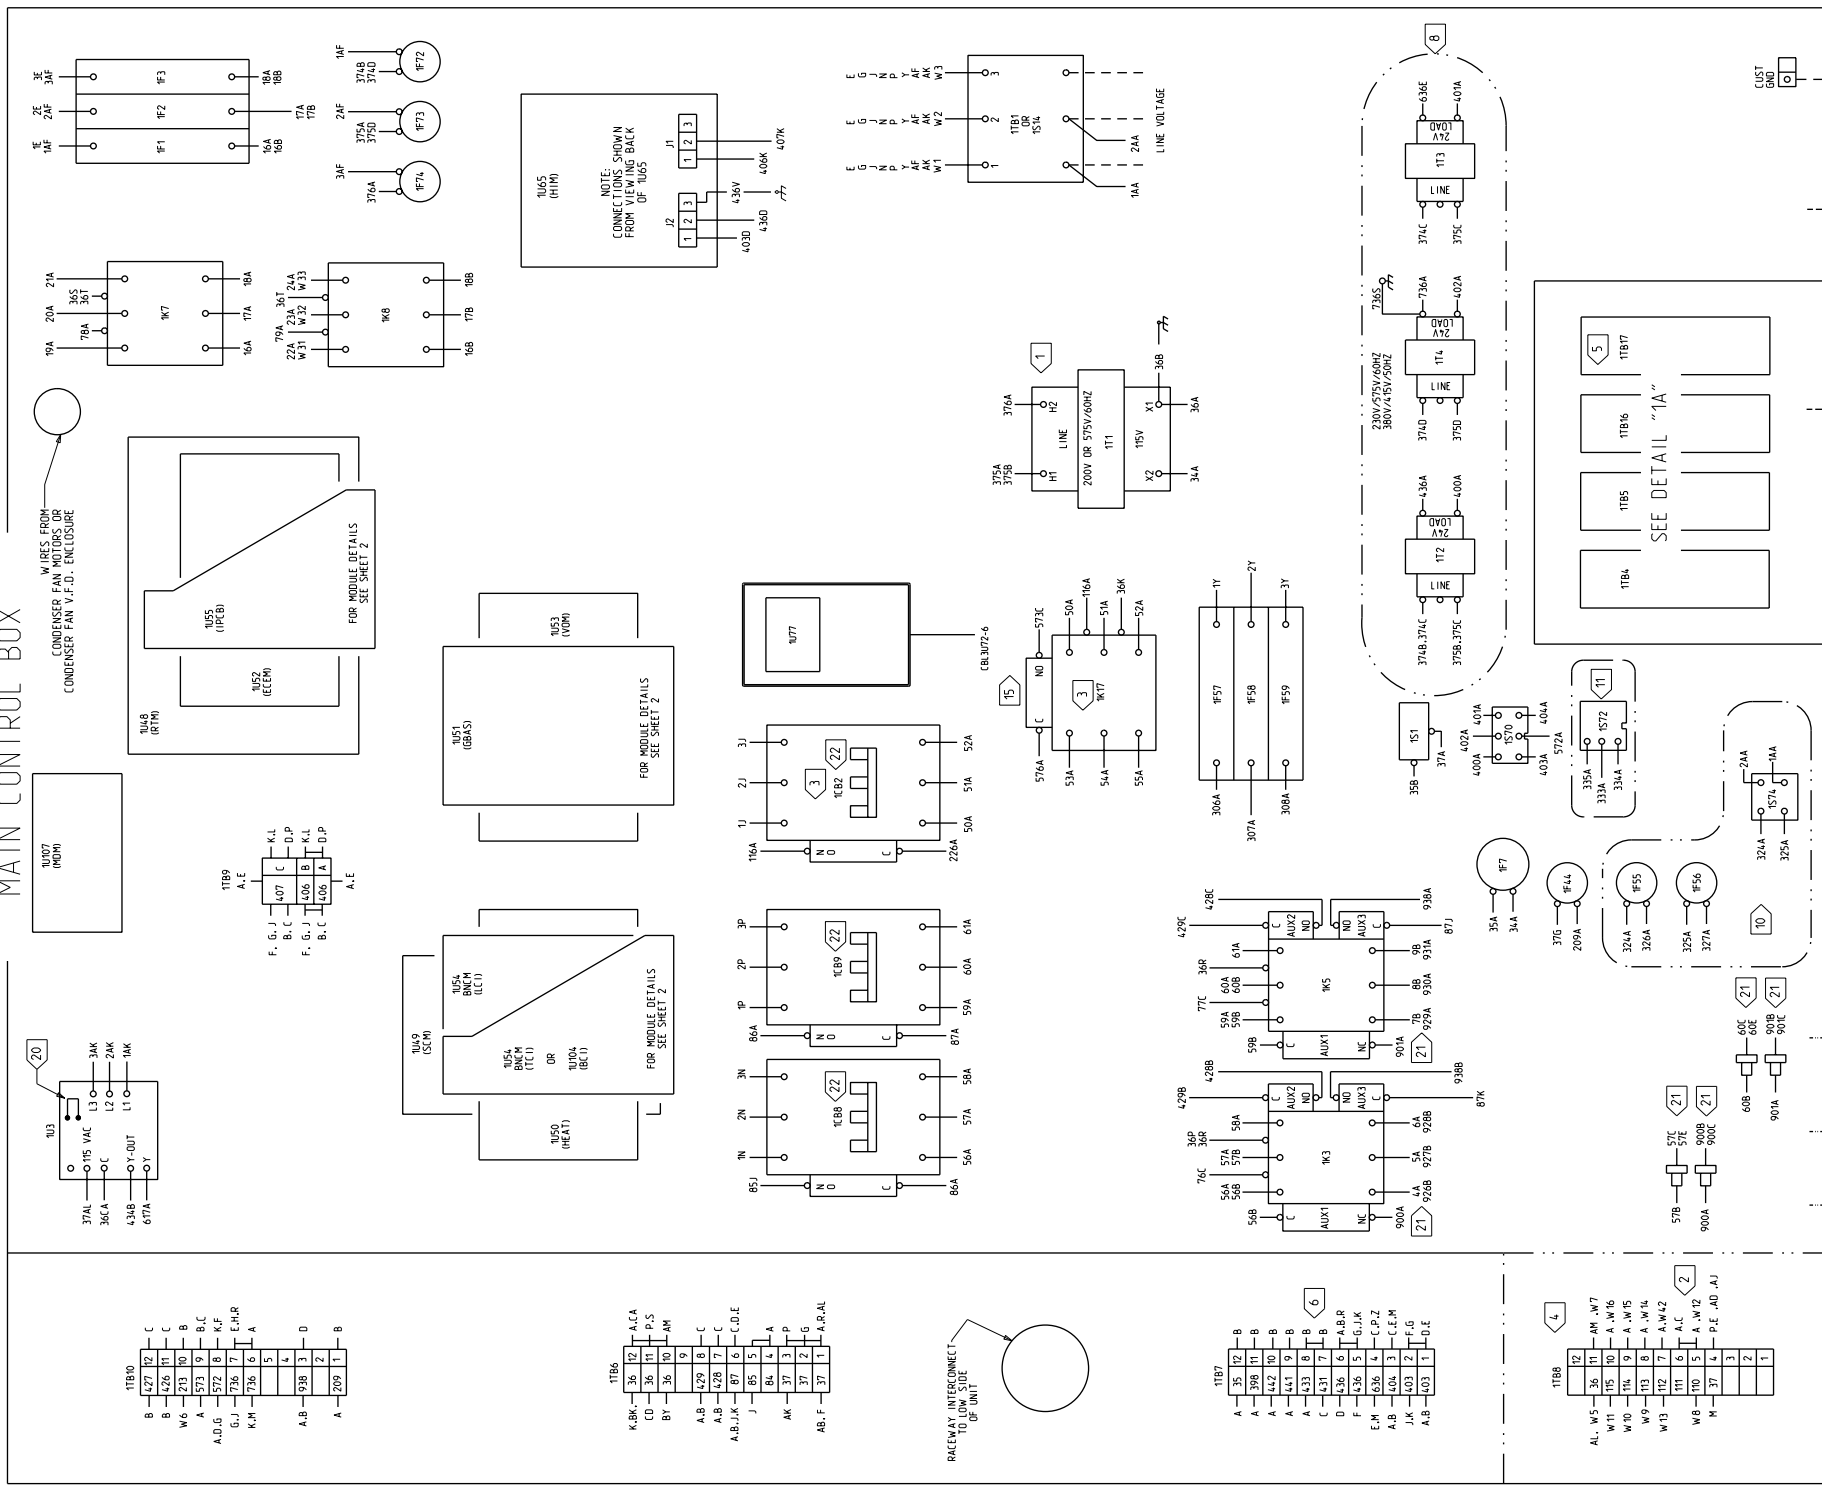


WIRES FROM COMP CRANKCASE HEATERS.
SATURATED COND TEMP SENSORS.
HIGH & LOW PRESSURE CUTOUPS AND
HOT GAS BYPASS SOLENOID VALVE

WIRES FROM COMPRESSOR

CUSTOMER CONTROL
WIRE ENTRY

IMPORTANT!
DO NOT ENERGIZE UNIT
UNTIL CHECK-OUT AND
START-UP PROCEDURE HAS
BEEN COMPLETED.

1784											
A	1	1 008	4 96	12	A	A	A	A	A	A	A
A	2	1 09	4 24	13	A	A	A	A	A	A	A
A	3	1 40	4 23	14	E	A	A	A	A	A	A
A	4	4 2	4 35	15	A	A	A	A	A	A	A
A	5	4 11	4 31	16	C	A	A	A	A	A	A
A	6	4 47	4 34	17	B	A	A	A	A	A	A
A	7	4 13	4 38	18	A	A	A	A	A	A	A
A	8	1 4	4 37	19	A	A	A	A	A	A	A
A	9	4 5	3 27	20	A	A	A	A	A	A	A
A	10	4 6	3 36	21	A	A	A	A	A	A	A
A	11	4 25	4 36	22	A	A	A	A	A	A	A
1785											
A	1	1 469	4 75	12	A	A	A	A	A	A	A
A	2	1 490	4 76	13	A	A	A	A	A	A	A
A	3	5 24	5 28	14	A	A	A	A	A	A	A
A	4	5 22	5 29	15	A	A	A	A	A	A	A
A	5	5 25	5 30	16	A	A	A	A	A	A	A
A	6	5 26	5 31	17	A	A	A	A	A	A	A
A	7	5 27	5 32	18	A	A	A	A	A	A	A
A	8	5 49	5 33	19	A	A	A	A	A	A	A
A	9	5 50	5 34	20	A	A	A	A	A	A	A
A	10	4 27	4 43	21	A	A	A	A	A	A	A
A	11	4 26	4 44	22	A	A	A	A	A	A	A
1786											
A	1	5 07	4 45	12	A	A	A	A	A	A	A
A	2	5 08	4 46	13	A	A	A	A	A	A	A
A	3	5 09	4 47	14	A	A	A	A	A	A	A
A	4	5 41	4 48	15	A	A	A	A	A	A	A
A	5	5 42	4 49	16	A	A	A	A	A	A	A
A	6	5 43	4 50	17	A	A	A	A	A	A	A
A	7	5 44	4 51	18	A	A	A	A	A	A	A
A	8	5 45	4 52	19	A	A	A	A	A	A	A
A	9	5 46	4 53	20	A	A	A	A	A	A	A
A	10	4 62	4 54	21	A	A	A	A	A	A	A
A	11	4 63	4 55	22	A	A	A	A	A	A	A
1787											
A	1	4 85	4 96	12	A	A	A	A	A	A	A
A	2	4 86	4 97	13	A	A	A	A	A	A	A
A	3	4 87	4 98	14	A	A	A	A	A	A	A
A	4	4 88	4 99	15	A	A	A	A	A	A	A
A	5	5 35	5 00	16	A	A	A	A	A	A	A
A	6	5 35	5 01	17	A	A	A	A	A	A	A
A	7	4 91	5 02	18	A	A	A	A	A	A	A
A	8	4 92	5 03	19	A	A	A	A	A	A	A
A	9	4 93	5 04	20	A	A	A	A	A	A	A
A	10	4 94	5 05	21	A	A	A	A	A	A	A
A	11	4 95	5 06	22	A	A	A	A	A	A	A

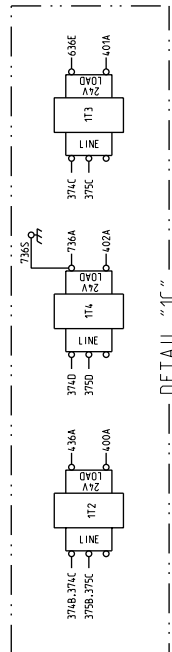

DETAIL "1C"

DETAIL "1B"

CAUTION
CONDUCTORS ONLY!

PRECAUCIÓN

ATTENTION

P R É S E N T A T I O N
N'UTILISER QUE DES CONDUCTEURS EN CUIVRE!
LES BORNES DE L'UNITÉ NE SONT PAS CONÇUES
POUR RECEVOIR D'AUTRES TYPES DE CONDUCTEURS.
L'UTILISATION DE TOUT AUTRE CONDUCTEUR PEUT
ENDOMMAGER L'EQUIPEMENT.

CAUTION
USE COPPER CONDUCTORS ONLY!
UNIT TERMINALS ARE NOT DESIGNED TO ACCEPT
OTHER TYPES OF CONDUCTORS.
FAILURE TO DO SO MAY CAUSE DAMAGE TO THE
EQUIPMENT.

200V/460V/60Hz