
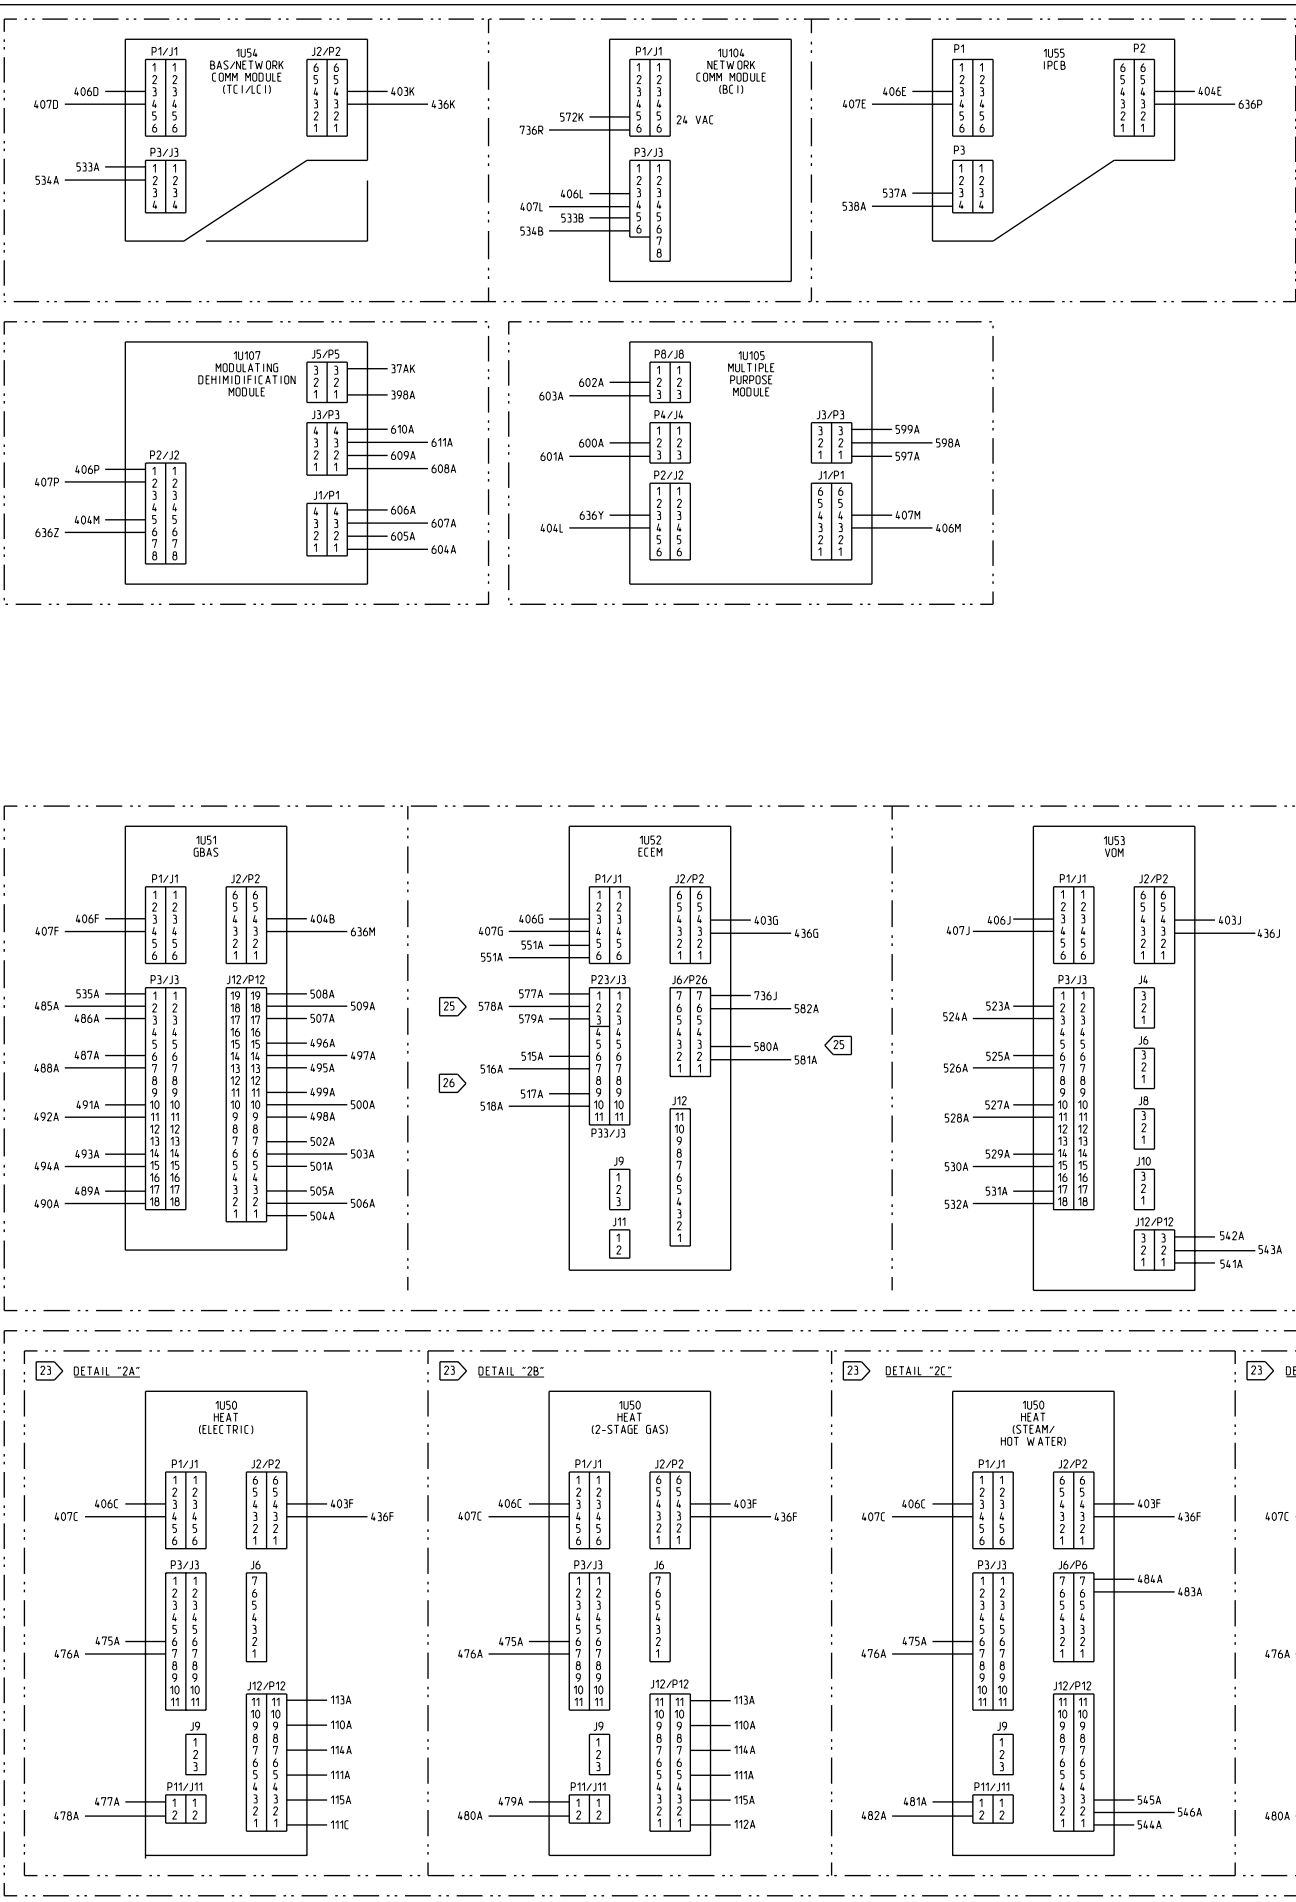


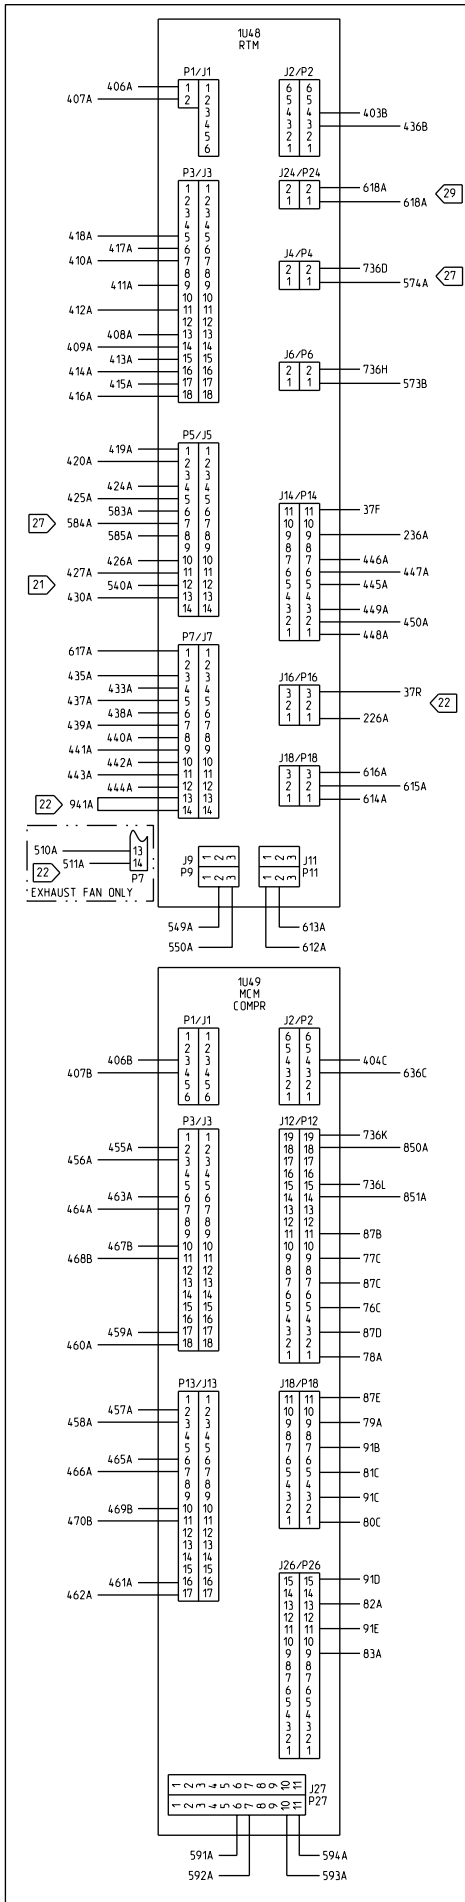

TRANE		FILE NUMBER:	DRAWING NUMBER:	SHEET:	REV
THIS DRAWING IS PROPRIETARY AND SHALL NOT BE COPIED OR ITS CONTENTS DISCLOSED TO OUTSIDE PARTIES WITHOUT THE CONSENT OF TRANE.		2307-9157	2307-9162	1 OF 1	C
DRAWN BY: T.DPRIEST		TRANE® DATE: 09/26/08		ROOFTOP PACKAGED AIR CONDITIONER	
REPLACES: 2309-3030		REVISION DATE: 07-Jan-10		DIAGRAM	
CAD SYSTEM USED: Pro/DETAIL		SIMILAR TO: --		CONNECTION - UNIT CONTROL MODULE	
				RT 40-75 TON	
				SHEET 2 OF 3	

- NOTES:
- 21 WIRE NO'S 540A & 430A REQUIRED WITH REFERENCE ENTHALPY AND COMPARATIVE ENTHALPY OPTIONS ONLY.
- 22 WIRE NO'S 510A, 511A, 37R & 226A REQUIRED WITH OPTIONAL EXHAUST FAN. WIRE NO. 941A REQUIRED FOR OPTIONAL RETURN FAN ONLY.
- 23 REFER TO DETAILS "2A", "2B", "2C" AND "2D" FOR CORRECT HEAT MODULE (1U50) CONNECTIONS.
DETAIL "2A" - ELECTRIC HEAT (SEHF - SEHG)
DETAIL "2B" - 2-STAGE NATURAL GAS HEAT (SFHF - SFHG)
DETAIL "2C" - STEAM OR HOT WATER HEAT (SSHWF - SLHWF)
DETAIL "2D" - MODULATING NATURAL GAS HEAT (SFHF - SFHG)
- 25 WIRE NO'S 577A, 578A, 579A, 582A, 736J, 580A & 581A REQUIRED WITH 100% POWER EXHAUST WITH STATITRAC OPTION ONLY.
- 26 WIRE NO'S 515A, 516A, 517A & 518A REQUIRED WITH COMPARATIVE ENTHALPY OPTION ONLY.
- 27 WIRE NO'S 583A, 584A, 585A, 736D & 574A REQUIRED WITH INLET VANE OPTION ONLY.
- 29 JUMPER WIRE 618A REQUIRED ONLY WHEN CONFIGURED WITH DEHUMIDIFICATION.

IMPORTANT!
DO NOT ENERGIZE UNIT
UNTIL CHECK-OUT AND
START-UP PROCEDURE HAS
BEEN COMPLETED.

CAUTION
USE COPPER CONDUCTORS ONLY!
UNIT TERMINALS ARE NOT DESIGNED TO
ACCEPT OTHER TYPES OF CONDUCTORS.
FAILURE TO DO SO MAY CAUSE DAMAGE TO
THE EQUIPMENT.

ATTENTION
N'UTILISER QUE DES CONDUCTEURS EN
CUIVRE!
LES BORNES DE L'UNITÉ NE SONT PAS
CONÇUES POUR RECEVOIR D'AUTRES TYPES
DE CONDUCTEURS.
L'UTILISATION DE TOUT AUTRE CONDUCTEUR
PEUT ENDOMMAGER L'EQUIPEMENT.

PRECAUCIÓN
UTILICE ÚNICAMENTE CONDUCTORES DE
COBRE!
LAS TERMINALES DE LA UNIDAD NO ESTÁN
DISEÑADAS PARA ACEPTAR OTROS TIPOS DE
CONDUCTORES.

SI NO LO HACE, PUEDE OCASIONAR DAÑO AL
EQUIPO.

WARNING
HAZARDOUS VOLTAGE!
DISCONNECT ALL ELECTRIC POWER
INCLUDING REMOTE DISCONNECTS AND
FOLLOW LOCK OUT AND TAG PROCEDURES
BEFORE SERVICING. INSURE THAT ALL
MOTOR CAPACITORS HAVE DISCHARGED
STORED VOLTAGE. UNITS WITH VARIABLE
SPEED DRIVE, REFER TO DRIVE
INSTRUCTIONS FOR CAPACITOR DISCHARGE.

FAILURE TO DO THE ABOVE BEFORE
SERVICING COULD RESULT IN DEATH OR
SERIOUS INJURY.

AVERTISSEMENT
TENSION DANGEREUSE!
COUPER TOUTES LES TENSIONS ET
Ouvrir les sectionneurs à distance.
Puis suivre les procédures de
verrouillage et des étiquettes avant
toute intervention. Vérifier que tous
les condensateurs des moteurs sont
déchargés. Dans le cas d'unités
comportant des entraînements à
vitesse variable, se reporter aux
instructions de l'entraînement pour
décharger les condensateurs.

NE PAS RESPECTER CES MESURES DE
PRÉCAUTION PEUT ENTRAÎNER DES
BLESSURES GRAVES POUVANT ÊTRE
MORTELLES.

ADVERTENCIA
¡VOLTAJE PELIGROSO!
DESCONECTE TODA LA ENERGÍA ELÉCTRICA.
INCLUSO LAS DESCONEXIONES REMOTAS Y
SIGA LOS PROCEDIMIENTOS DE CIERRE Y
ETIQUETADO ANTES DE PROCEDER AL
SERVICIO. ASEGÚRESE DE QUE TODOS
LOS CAPACITORES DEL MOTOR HAYAN
DESCARGADO EL VOLTAJE ALMACENADO.
PARA LAS UNIDADES CON EJE DE
DIRECCIÓN DE VELOCIDAD VARIABLE,
CONSULTE LAS INSTRUCCIONES PARA LA
DESCARGA DEL CONDENSADOR.

EL NO REALIZAR LO ANTERIORMENTE
INDICADO, PODRÍA OCASIONAR LA MUERTE
O SERIAS LESIONES PERSONALES.