 

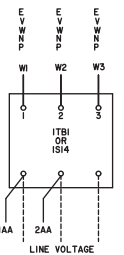


WIRES FROM _____
CONDENSER FAN MOTORS OR
CONDENSER FAN V.F.D. ENCLOSURE

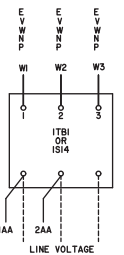

- ▶ 200V/60HZ OR 575V/60HZ TRANSFORMER (ITI) SHOWN. SEE DETAIL "IB" FOR OTHER VOLTAGE CONNECTIONS.
- ▶ JUMPER TB78-5 & TB78-6 REQUIRED ONLY ON UNITS WITH 2-STAGE NATURAL GAS HEAT OR ELECTRIC HEAT OPTION.
- ▶ IC82, IK7 AND ASSOCIATED WIRING REQUIRED WITH OPTIONAL EXHAUST AIR FAN.
- ▶ TB78 AND ASSOCIATED WIRING REQUIRED WITH ALL HEATING OPTIONS.
- ▶ IT87 AND ASSOCIATED WIRING REQUIRED WITH OPTIONAL GAS (US).
- ▶ WHEN HIGH DUCT TEMP T-STAT (5316 - 3517) IS ORDERED JUMPER IS REMOVED.
- ▶ 230V/60HZ, 380V/50HZ, 415V/50HZ, 515V/60HZ OR 575V/60HZ TRANSFORMERS SHOWN. SEE DETAIL "IC" FOR 200V/60HZ OR 460V/60HZ CONNECTIONS.
- ▶ JUMPER INSTALLED ONLY ON UNITS WITHOUT ECONOMIZER OPTION.
- ▶ IF55, IF56 ,J574 AND ASSOCIATED WIRING USED ON CONVENIENCE OUTLET OPTION ONLY.

16 IK98 AND ASSOCIATED WIRES USED ONLY ON ELECTRIC OR GAS HEAT UNITS.

17 WIRE IIIXC USED ON GAS HEAT ONLY.
WIRE II2XB USED ON ELECTRIC HEAT ONLY.

 **WARNING**
HAZARDOUS VOLTAGE!
DISCONNECT ALL ELECTRIC POWER
INCLUDING REMOTE DISCONNECTS
BEFORE SERVICING.
FAILURE TO DISCONNECT POWER
BEFORE SERVICING CAN CAUSE SEVERE
PERSONAL INJURY OR DEATH.

AVERTISSEMENT
VOLTAGE HASARDEUXI
DECONNECTEZ TOUTES LES SOURCES
ELECTRIQUES INCLUANT LES
DISJONCTEURS SITUES A DISTANCE
AVANT D'EFFECTUER L'ENTRETIEN.
FAUTE DE DECONNECTER LA SOURCE
ELECTRIQUE AVANT D'EFFECTUER
L'ENTRETIEN PEUT ENTRAENER DES
BLESSURES CORPORELLES SEVERES
OU LA MORT.

CAUTION
USE COPPER CONDUCTORS ONLY.
UNIT TERMINALS ARE NOT DESIGNED
TO ACCEPT OTHER TYPES OF
CONDUCTORS.
FAILURE TO DO SO MAY CAUSE
DAMAGE TO THE EQUIPMENT.

DETAIL "IB

DETAIL "IC"
200V/460V/60HZ

[illegible]