

NOTES:

- 1 WIRING SHOWN IS FOR 480V. FOR 575V MOVE ALL WIRES FROM 480V TERMINAL TO 575V TERMINAL ON TNS1.
- 2 WIRING SHOWN IS FOR 480V. FOR 575V MOVE ALL WIRES FROM 480V TERMINAL TO 575V TERMINAL ON TNS2.

- 8 FUSE FUS1, RELAY XFR, CAPACITOR CFS/CFB AND ASSOCIATED WIRES ARE ONLY USED WITH POWER EXHAUST OPTION.

- 14 MANUAL BYPASS SWITCH AND WIRES 410C, 413A, 414A, 415A OPTIONAL.

- 10 WIRING SHOWN FOR F CONTACTOR AND FCBI IS FOR ALL VAV UNITS EXCEPT THOSE WITH VFD. WHEN VARIABLE FREQUENCY DRIVE IS INSTALLED SEE INSET B.
- 11 WIRING SHOWN IS FOR OPTIONAL COMMUNICATION INTERFACE. COMMUNICATION WIRES FROM BMS TO TCI/LCI ARE TO BE WIRE TIED TO BOTTOM OF THE CONTROL BOX. SEE TCI/LCI LITERATURE FOR SWITCH SETTINGS.
- 12 FUSE FUS0, FUS1 AND SWITCH SRD ARE USED FOR OPTIONAL FACTORY POWER CONVENIENCE OUTLET. WIRES 400A AND 401A ARE CONNECTED TO FACTORY SUPPLIED DISCONNECT SWITCH.

METAL PLATE 11 X 17

IMPORTANT!
DO NOT ENERGIZE UNIT UNTIL CHECK-OUT AND START-UP PROCEDURE HAS BEEN COMPLETED

TRANS	
REPLACES:	CONTROL
REVISION BY:	REVISION DATE:
2309-3289	2307-9050

FILE NUMBER

SHARING NUMBER

2309-3289 c

CONTROL BOX CONNECTION FOR
TC 40-50 TON 480/575 VOLT
VARIABLE AIR VOLUME

SHEET 1 OF 2

WARNING

HAZARDOUS VOLTAGE!
DISCONNECT ALL ELECTRIC POWER INCLUDING REMOTE DISCONNECTS BEFORE SERVICING.
FAILURE TO DISCONNECT POWER BEFORE SERVICING CAN CAUSE SEVERE PERSONAL INJURY OR DEATH.

AVERTISSEMENT

VOLTAGE HASARDEUX!
DECONNECTEZ TOUTES LES SOURCES ELECTRIQUES INCLUANT LES DISJONCTEURS SITUES A DISTANCE AVANT D'EXECUTER L'ENTRETIEN.
ELECTRIQUE AVANT D'EXECUTER L'ENTRETIEN PEUT ENTRAINER DES BLESSURES CORPORELLES SEVERES OU LA MORT.

CAUTION

USE COPPER CONDUCTORS ONLY!
UNIT TERMINALS ARE NOT DESIGNED TO ACCEPT OTHER TYPES OF CONDUCTORS.
FAILURE TO DO SO MAY CAUSE DAMAGE TO THE EQUIPMENT.

