

NOTES:

1 WIRING SHOWN IS FOR 480V. FOR 575V, MOVE ALL WIRES FROM 480V TERMINAL TO 575V TERMINAL ON TNS1.

6 FUSE, FUSE/RELAY, XFR, CAPACITOR CFS, CFB AND ASSOCIATED WIRES ARE ONLY USED WITH POWER EXHAUST OPTION.

IMPORTANT!
DO NOT SERVICISE
UNIT UNTIL CHECK-OUT
AND START-UP PROCEDURE
HAS BEEN COMPLETED

WARNING
HAZARDOUS VOLTAGE!
DISCONNECT ALL ELECTRIC POWER
INCLUDING REMOTE DISCONNECTS
BEFORE SERVICING.
FAILURE TO DISCONNECT POWER
BEFORE SERVICING CAN CAUSE SEVERE
PERSONAL INJURY OR DEATH.

AVERTISSEMENT
VOLTAGE HASARDEUX!
DECONNECTEZ TOUTES LES SOURCES
ELECTRIQUES INCLUANT LES
DISJONCTEURS SITUES A DISTANCE
AVANT D'EFFECTUER L'ENTRETIEN.
L'ENTRETIEN PEUT ENTRAÎNER DES
BLESSURES CORPORELLES SEVERES
OU LA MORT.

CAUTION
USE COPPER CONDUCTORS ONLY!
UNIT TERMINALS ARE NOT DESIGNED
TO ACCEPT OTHER TYPES OF
CONDUCTORS.
FAILURE TO DO SO MAY CAUSE
DAMAGE TO THE EQUIPMENT.

11 X 17 METAL PLATE

TRANSCAPACITY
SERIES 2000
REPLACES
2000-2001
REVISION 2010
2309-3310

FILE NUMBER

DATE

2309-3310

REV

B

CONTROL BOX CONNECTION FOR
TE 27.5-35 TON 90KW 480/575 VOLT
CONSTANT VOLUME

SHEET 1 OF 2

