

121 -
122 -
123 -
124 -
125 -
126 -
127 -
128 -
129 -
130 -

132 –
133 –
134 –
135 –
136 –
137 –
138 –
139 –
140 –
141 –
142 –
143 –
144 –
145 –
146 –
147 –
148 –
149 –
150 –
151 –
152 –
153 –
154 –
155 –
156 –
157 –
158 –
159 –
160 –
161 –
162 –
163 –
164 –
165 –
166 –
167 –
168 –
169 –
170 –
171 –
172 –
173 –
174 –
175 –
176 –
177 –
178 –
179 –
180 –

14	SEE APPLICABLE VARIABLE FREQUENCY DRIVE DIAGRAM FOR BALANCE OF CIRCUIT.
15	INSTALL OPTIONAL REMOTE SENSOR TO TERMINALS S1 AND S2 WHEN REQUIRED. SEE PROGRAMMABLE ZONE SENSOR / REMOTE PANEL W/ASB LITERATURE FOR OPTION CONFIGURATION.
16	TERMINALS 7,8,9 10 ARE FOR OPTIONAL INDICATORS.
17	INSET D IS FOR OPTIONAL PROGRAMMABLE ZONE SENSOR.
18	AUXILIARY RELAY ENERGIZED DURING OCCUPIED PERIODS.
19	0-10 VDC DUCT MOUNTED SENSOR ONLY.
20	PROVIDE JUMPER BETWEEN RTM J6-2 RTM J6-4 TO ENABLE AUTO MODE WHEN NO OTHER MODE INPUT IS USED.
21	PROVIDE CONTACT CLOSURE BETWEEN RTM J6-11 RTM J6-12 TO ENABLE UNOCCUPIED MODE WHEN NOT USING PROGRAMMABLE ZSM-REMOTE PANEL OR BMS.
22	EBA REQUIRED FOR OPTIONAL FRESH AIR TRACKING EXHAUST.

23 OPTIONAL VENTILATION OVERRIDE

FAILURE TO DO SO MAY CAUSE
DAMAGE TO THE EQUIPMENT.

[illegible]

1 OF 1	A
--------	---

OF 1	A
------	---

OF 1	A
------	---