

5 WIRING SHOWN IS FOR 460V OR 380V. FOR 575V MOVE ALL WIRES FROM H2 TERMINAL TO H3 TERMINAL ON TNS4. FOR 415 V MOVE ALL WIRES FROM H2 TERMINAL TO H3 TERMINAL ON TNS4.

12 FUSE FU20, FU21 AND SWITCH SRD ARE USED FOR OPTIONAL FACTORY POWER CONVENIENCE OUTLET. WIRES 400A AND 401A ARE CONNECTED TO FACTORY SUPPLIED DISCONNECT SWITCH.

FAILURE TO DISCONNECT POWER
BEFORE SERVICING CAN CAUSE
SEVERE PERSONAL INJURY OR
DEATH.

FAUTE DE DECONNECTEZ LA SOURCE
ELECTRIQUE AVANT D'EFFECTUER
L'ENTRETIEN PEUT ENTRAINER DES BLESSURES
CORPORELLES SEVERES OU LA MORT.

CAD SYSTEM USED:	SIMILAR TO: 2307-4686
------------------	--------------------------

VOYAGER 3
POL BOX CONNECTION FOR
TON HI HEAT 380-575 VOLT
VARIABLE AIR VOLUME

DO NOT ENERGIZE UNIT
UNTIL CHECK-OUT AND
START-UP PROCEDURE HAS
BEEN COMPLETED.

