

5 WIRING SHOWN IS FOR 230V. FOR 208V MOVE ALL WIRES FROM H3 TERMINAL TO H2 TERMINAL ON TNS4

12 FUSE FU20, FU21 AND SWITCH SRD ARE USED FOR OPTIONAL
FACTORY POWER CONVENIENCE OUTLET. WIRES 400A AND 401A
ARE CONNECTED TO FACTORY SUPPLIED DISCONNECT SWITCH.

VOYAGER 3
CONTROL BOX CONNECTION FOR
YC 40-50 TON HI HEAT 208-230 VOLT
CONSTANT VOLUME

DO NOT ENERGIZE UNIT
UNTIL CHECK-OUT AND
START-UP PROCEDURE HAS
BEEN COMPLETED.

