

5 WIRING SHOWN IS FOR 230V. FOR 208V MOVE ALL WIRES FROM H3 TERMINAL TO H2 TERMINAL ON TNS4

12 FUSE FU20, FU21 AND SWITCH SRD ARE USED FOR OPTIONAL FACTORY POWER CONVENIENCE OUTLET. WIRES 400A AND 401A ARE CONNECTED TO FACTORY SUPPLIED DISCONNECT SWITCH.

DO NOT ENERGIZE UNIT
UNTIL CHECK-OUT AND
START-UP PROCEDURE HAS
BEEN COMPLETED.

FAILURE TO DO SO MAY CAUSE
DAMAGE TO THE EQUIPMENT.

