

5 WIRING SHOWN IS FOR 460V. FOR 575V MOVE ALL WIRES FROM H2 TERMINAL TO H3 TERMINAL ON TNS4.

12 FUSE FU20, FU21 AND SWITCH SRD ARE USED FOR OPTIONAL FACTORY POWER CONVENIENCE OUTLET. WIRES 400A AND 401A ARE CONNECTED TO FACTORY SUPPLIED DISCONNECT SWITCH.

FAILURE TO DO THE ABOVE
BEFORE SERVICING COULD RESULT
IN DEATH OR SERIOUS INJURY.

NE PAS RESPECTER CES MESURES DE PRÉCAUTION PEUT ENTRAÎNER DES BLESSURES GRAVES POUVANT ÊTRE MORTELLES.

EL NO REALIZAR LO ANTERIORMENTE
INDICADO, PODRÍA OCASIONAR LA MUERTE
O SERIAS LESIONES PERSONALES.

CONTROL BOX CONNECTION FOR
YC 40-50 TON HI HEAT 460-575 VOLT
CONSTANT VOLUME
MOD GAS HEAT

DO NOT ENERGIZE UNIT
UNTIL CHECK-OUT AND
START-UP PROCEDURE HAS
BEEN COMPLETED.

METAL PLATE 11 X 17

SI NO LO HACE, PUEDE OCASIONAR DAÑO AL EQUIPO.

