

NOTES:

- 1 WIRING SHOWN IS FOR 460V. FOR 575V MOVE ALL WIRES FROM 460V TERMINAL TO 575V TERMINAL ON TNS1.
- 2 WIRING SHOWN IS FOR 460V. FOR 575V MOVE ALL WIRES FROM 460V TERMINAL TO 575V TERMINAL ON TNS2.
- 4 WIRING SHOWN IS FOR 460V. FOR 575V MOVE ALL WIRES FROM H2 TERMINAL TO H3 TERMINAL ON TNS3.
- 5 WIRING SHOWN IS FOR 460V. FOR 575V MOVE ALL WIRES FROM H2 TERMINAL TO H3 TERMINAL ON TNS4.
- 8 FUSE FU5,FU6, RELAY XFR, CAPACITOR CF5,CF6 AND ASSOCIATED WIRES ARE ONLY USED WITH POWER EXHAUST OPTION.
- 11 WIRING SHOWN IS FOR OPTIONAL COMMUNICATION INTERFACE. COMMUNICATION WIRES FROM BMS TO TC1/LC1 ARE TO BE WIRE TIED TO BOTTOM OF THE CONTROL BOX. SEE TC1/LC1 LITERATURE FOR SWITCH SETTINGS.
- 12 FUSE FU20, FU21 AND SWITCH SRD ARE USED FOR OPTIONAL FACTORY POWER CONVENIENCE OUTLET. WIRES 400A AND 401A ARE CONNECTED TO FACTORY SUPPLIED DISCONNECT SWITCH.

WARNING

HAZARDOUS VOLTAGE!

DISCONNECT ALL ELECTRIC POWER INCLUDING REMOTE DISCONNECTS AND FOLLOW LOCK OUT AND TAG PROCEDURES BEFORE SERVICING. INSURE THAT ALL MOTOR CAPACITORS HAVE DISCHARGED STORED VOLTAGE. UNITS WITH VARIABLE SPEED DRIVE, REFER TO DRIVE INSTRUCTIONS FOR CAPACITOR DISCHARGE.

FAILURE TO DO THE ABOVE BEFORE SERVICING COULD RESULT IN DEATH OR SERIOUS INJURY.

AVERTISSEMENT

TENSION DANGEREUSE!

COUPER TOUTES LES TENSIONS ET OUVRIR LES SECTIONNEURS À DISTANCE. PUIS SUIVRE LES PROCÉDURES DE VERROUILLAGE ET DES ÉTIQUETTES AVANT TOUTE INTERVENTION. VÉRIFIER QUE TOUTS LES CONDENSATEURS DES MOTEURS SONT DÉCHARGÉS. DANS LE CAS D'UNITÉS COMPORTANT DES ENTRAÎNEMENTS À VITESSE VARIABLE, SE REPORTER AUX INSTRUCTIONS DE L'ENTRAÎNEMENT POUR DÉCHARGER LES CONDENSATEURS.

NE PAS RESPECTER CES MESURES DE PRÉCAUTION PEUT ENTRAÎNER DES BLESSURES GRAVES POUVANT ÊTRE MORTELLES.

ADVERTENCIA

¡VOLTAGE PELIGROSO!

DESCONECTE TODA LA ENERGÍA ELÉCTRICA, INCLUSO LAS DESCONEXIONES REMOTAS Y SIGA LOS PROCEDIMIENTOS DE CIERRE Y ETIQUETADO ANTES DE PROCEDER AL SERVICIO. ASEGURESE DE QUE TODOS LOS CONDENSADORES DEL MOTOR HAYAN DESCARGADO EL VOLTAJE ALMACENADO. PARA LAS UNIDADES CON EJE DE DIRECCIÓN DE VELOCIDAD VARIABLE, CONSULTE LAS INSTRUCCIONES PARA LA DESCARGA DEL CONDENSADOR.

EL NO REALIZAR LO ANTERIORMENTE INDICADO, PODRÍA OCASIONAR LA MUERTE O SERIAS LESIONES PERSONALES.

TRANE A DIVISION OF AMERICAN STANDARD INC. ALL RIGHTS RESERVED	
DRAWN BY: A.SINGLETARY © DATE: 06/13/07	REVISION DATE:
REPLACES:	
CAD SYSTEM USED: PRO/E	SIMILAR TO: 2309-3267

FILE NUMBER: 2309-3845	DRAWING NUMBER: 2309-3849	SHEET: 10F 1	REV A
---------------------------	------------------------------	-----------------	----------

CONTROL BOX CONNECTION FOR
YC 27.5-35 TON HI HEAT 460-575 VOLT
CONSTANT VOLUME
MOD GAS HEAT

IMPORTANT!

DO NOT ENERGIZE UNIT
UNTIL CHECK-OUT AND
START-UP PROCEDURE HAS
BEEN COMPLETED.

METAL PLATE 11 X 17

CAUTION

USE COPPER CONDUCTORS ONLY!

UNIT TERMINALS ARE NOT DESIGNED TO ACCEPT OTHER TYPES OF CONDUCTORS.

FAILURE TO DO SO MAY CAUSE DAMAGE TO THE EQUIPMENT.

ATTENTION

N'UTILISER QUE DES CONDUCTEURS EN CUIVRE!

LES BORNES DE L'UNITÉ NE SONT PAS CONÇUES POUR RECEVOIR D'AUTRES TYPES DE CONDUCTEURS.


L'UTILISATION DE TOUT AUTRE CONDUCTEUR PEUT ENDOMMAGER L'EQUIPEMENT.

PRECAUCIÓN

¡UTILICE ÚNICAMENTE CONDUCTORES DE COBRE!

LAS TERMINALES DE LA UNIDAD NO ESTÁN DISEÑADAS PARA ACEPTAR OTROS TIPOS DE CONDUCTORES.

SI NO LO HACE, PUEDE OCASIONAR DAÑO AL EQUIPO.

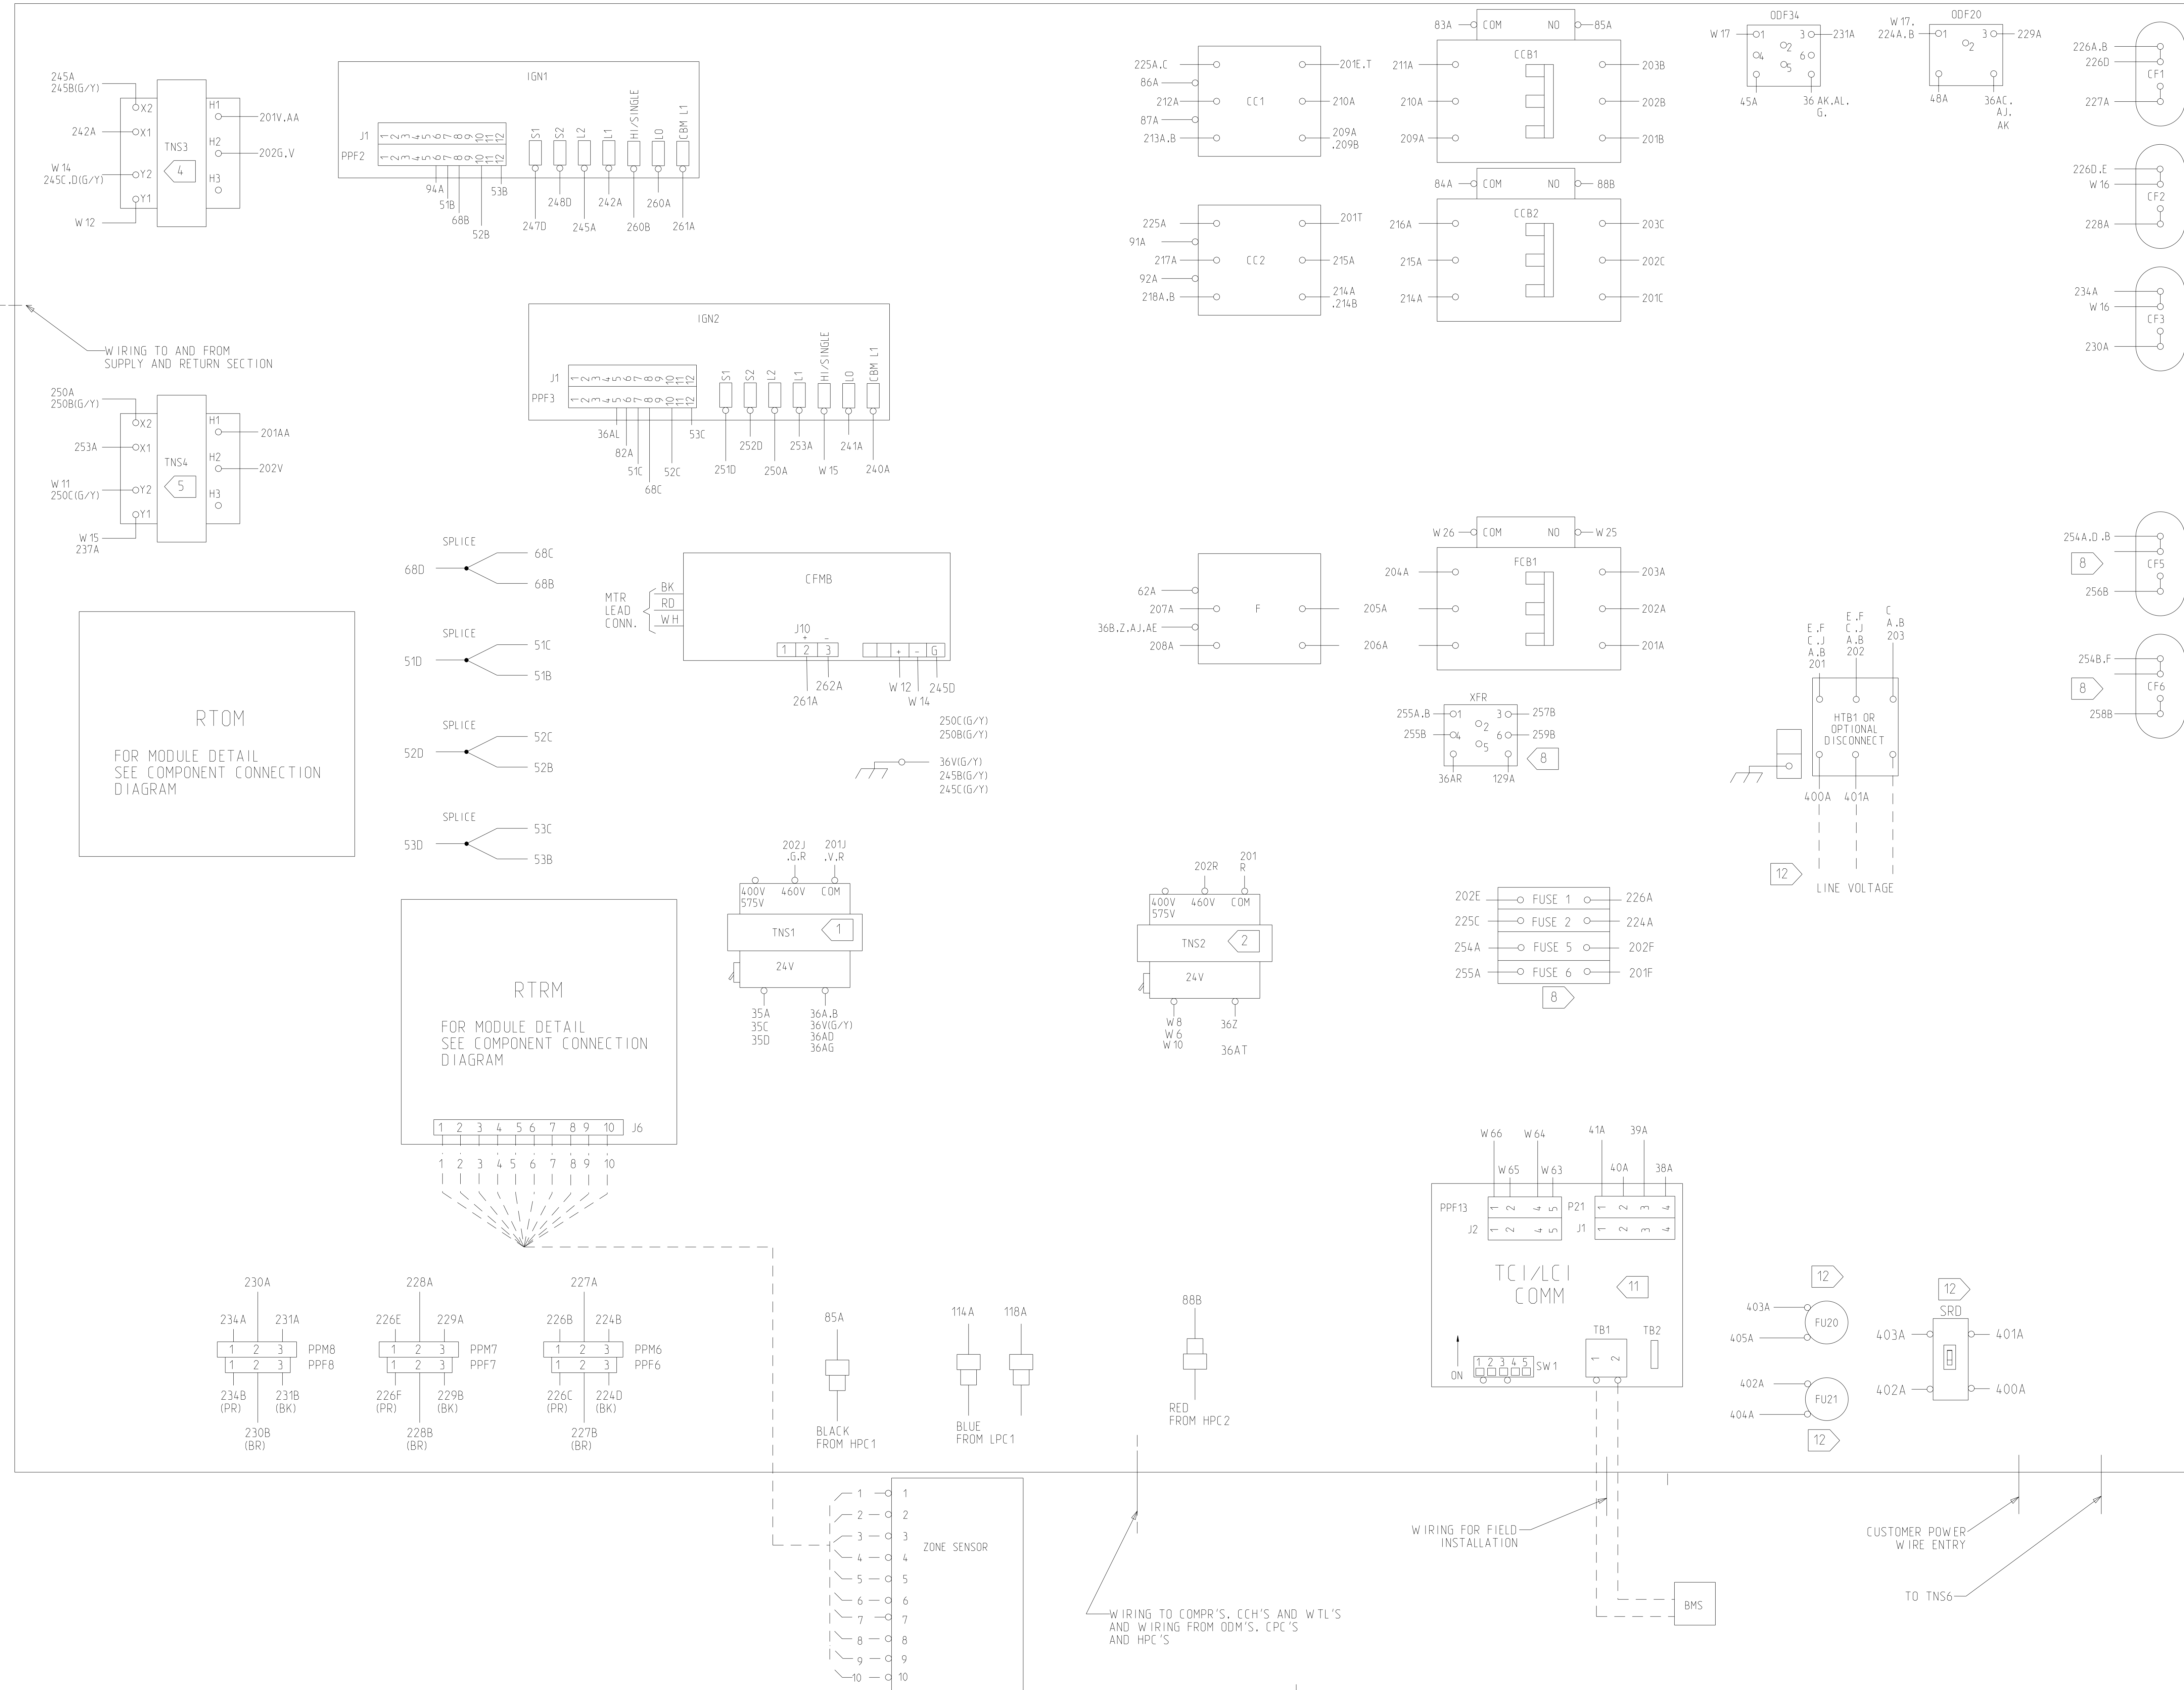

LTB1	
A	93 6
W 6.A	32 5
	119 4
B	161 3
A	118 2
A	32 1
A	137 TEST 2
A	149 TEST 1

LTB4	
W 45. A	56 14
A	55 13
--	12
A	58 11
A	59 10
A	60 9
W 45. AC .AR	36 8
B	161 7

LTB3	
	5
	4
A	3
A	153 2
A	134 1

