

WIRE COLOR	DESIGNATION	WIRE COLOR	DESIGNATION
ABBR	COLOR	ABBR	COLOR
BK	BLACK	PR	PURPLE
BL	BLUE	RD	RED
BR	BROWN	WH	WHITE
GR	GREEN	YL	YELLOW
OR	ORANGE		

- NOTES:
- 1 ALL WIRING AND DEVICES SHOWN DASHED TO BE SUPPLIED AND INSTALLED BY THE CUSTOMER IN ACCORDANCE WITH LOCAL AND NATIONAL ELECTRICAL CODES.
 - 2 IF ANY OF THE ORIGINAL WIRE, AS SUPPLIED WITH THIS UNIT, MUST BE REPLACED, REPLACE IT WITH APPLIANCE WIRING MATERIAL RATED AT 105°C.
 - 3 THREE PHASE MOTORS ARE PROTECTED UNDER PRIMARY SINGLE PHASING CONDITIONS. ALL MOTORS HAVE INTERNAL OVERLOAD PROTECTION. COMPRESSORS HAVE INTERNAL THERMAL PROTECTION.
 - 4 CONNECTIONS SHOWN ARE FOR 230V/60HZ/3PH. WHEN 208V/60HZ/3PH OR 200V/50HZ/3PH OPERATION IS REQUIRED, REMOVE WIRES 12E(BL) FROM 230V TERMINAL ON TNS3 AND CONNECT TO 208V TERMINAL ON TNS3.
 - 5 CONNECTIONS SHOWN ARE FOR 230V/60HZ/3PH. WHEN 208V/60HZ/3PH OR 200V/50HZ/3PH OPERATION IS REQUIRED, REMOVE WIRES 12D,E(BL) FROM 230V TERMINAL ON TNS1 AND CONNECT TO 208V TERMINAL ON TNS1.
 - 7 WHEN COMM INTERFACE IS INSTALLED, CONNECT CABLE FROM COMM J1 TO RTRM J4. SEE COMM INTERFACE LITERATURE FOR SWITCH SETTINGS. SEE ALSO INSET D.
 - 8 WIRES W1, W2 AND W3 USED WITH ELECTRIC HEAT OPTION ONLY. WHEN ELECTRIC HEAT IS REQUIRED REMOVE WIRE NUT FROM WIRES AND CONNECT TO HI VOLTAGE TERMINAL BLOCK (HTB) PER DIAGRAM. SEE ELECTRIC HEAT DIAGRAM FOR REMAINDER OF CIRCUIT.
 - 9 WHEN ELECTRIC HEAT OPTION IS REQUIRED, REFER TO ELECTRIC HEAT DIAGRAM FOR CUSTOMER POWER CONNECTIONS. (SEE INSET E)

- OPTIONAL MAS, RAS, RHS, OHS AND ASSOCIATED WIRING NOT USED WITH MOTORIZED OUTSIDE AIR.
- CONNECT PPF-5 TO COMM IF PRESENT. OTHERWISE CONNECT TO RTRM.
- REQUIRED FOR CO2 OR VENTILATION OVERRIDE ACCESSORY.
- TO DISABLE COMPRESSORS, REMOVE JUMPER AND CONNECT FIELD SUPPLIED CONTROL DEVICE.
- TO SHUT DOWN THE UNIT FOR EMERGENCY STOP, REMOVE JUMPER AND INSTALL FIELD SUPPLIED DEVICE.
- TERMINALS MAY NOT BE PRESENT.

WARNING
HAZARDOUS VOLTAGE!
DISCONNECT ALL ELECTRIC POWER INCLUDING REMOTE DISCONNECTS AND FOLLOW LOCK OUT AND TAG PROCEDURES BEFORE SERVICING. INSURE THAT ALL MOTOR CAPACITORS HAVE DISCHARGED STORED VOLTAGE. UNITS WITH VARIABLE SPEED DRIVE, REFER TO DRIVE INSTRUCTIONS FOR CAPACITOR DISCHARGE.

FAILURE TO DO THE ABOVE BEFORE SERVICING COULD RESULT IN DEATH OR SERIOUS INJURY.

AVERTISSEMENT
TENSION DANGEREUSE!
COUPER TOUTES LES TENSIONS ET OUVRIR LES SECTIONNEURS À DISTANCE. PUIS SUIVRE LES PROCÉDURES DE VERROUILLAGE ET DES ÉTIQUETTES AVANT TOUTE INTERVENTION. VÉRIFIER QUE TOUTS LES CONDENSATEURS DES MOTEURS SONT DÉCHARGÉS. DANS LE CAS D'UNITÉS COMPORTANT DES ENTRAÎNEMENTS À VITESSE VARIABLE, SE REPORTER AUX INSTRUCTIONS DE L'ENTRAÎNEMENT POUR DÉCHARGER LES CONDENSATEURS.

NE PAS RESPECTER CES MESURES DE PRÉCAUTION PEUT ENTRAÎNER DES BLESSURES GRAVES POUVANT ÊTRE MORTELS.

ADVERTENCIA
¡VOLTAGE PELIGROSO!
DESCONECTE TODA LA ENERGÍA ELÉCTRICA, INCLUSO LAS DESCONEXIONES REMOTAS Y SIGA LOS PROCEDIMIENTOS DE CIERRE Y ETIQUETADO ANTES DE PROCEDER AL SERVICIO. ASEGÚRESE DE QUE TODOS LOS CAPACITORES DEL MOTOR HAYAN DESCARGADO EL VOLTAJE ALMACENADO. PARA LAS UNIDADES CON C/E DE DIRECCIÓN DE VELOCIDAD VARIABLE, CONSULTE LAS INSTRUCCIONES PARA LA DESCARGA DEL CONDENSADOR.

EL NO REALIZAR LO ANTERIORMENTE INDICADO, PODRÍA OCASIONAR LA MUERTE O SERIAS LESIONES PERSONALES.

TRANE
THIS DRAWING IS PROPRIETARY AND SHALL NOT BE COPIED OR ITS CONTENTS DISCLOSED TO OUTSIDE PARTIES WITHOUT THE CONSENT OF TRANE.

DRAWN BY: S.Seis
REPLACES:
CAD SYSTEM USED:

TRANE® DATE: 4/15/08
REVISION DATE:
SIMILAR TO: 2309-3171

FILE NUMBER: 2309-3140
DRAWING NUMBER: 2313-0044
SHEET: 1 of 1
REV: B

DIAGRAM
CONNECTION ELECTRICAL
200.208-230V
WC 200E, 240E


FUSE REPLACEMENT TABLE
FU1, FU2 | 208-230V | TYPE FLO | 20 AMP

IMPORTANT!
DO NOT ENERGIZE UNIT UNTIL CHECK-OUT AND START-UP PROCEDURE HAS BEEN COMPLETED.

CAUTION
USE COPPER CONDUCTORS ONLY!
UNIT TERMINALS ARE NOT DESIGNED TO ACCEPT OTHER TYPES OF CONDUCTORS.
FAILURE TO DO SO MAY CAUSE DAMAGE TO THE EQUIPMENT.

PRECAUCIÓN
N'UTILISER QUE DES CONDUCTEURS EN CUIVRE!
LES BORNES DE L'UNITÉ NE SONT PAS CONÇUES POUR RECEVOIR D'AUTRES TYPES DE CONDUCTEURS.
L'UTILISATION DE TOUT AUTRE CONDUCTEUR PEUT ENDOMMAGER L'EQUIPEMENT.

ATTENTION
¡UTILICE ÚNICAMENTE CONDUCTORES DE COBRE!
LAS TERMINALES DE LA UNIDAD NO ESTÁN DISEÑADAS PARA ACEPTAR OTROS TIPOS DE CONDUCTORES.
SI NO LO HACE, PUEDE OCASIONAR DAÑO AL EQUIPO.

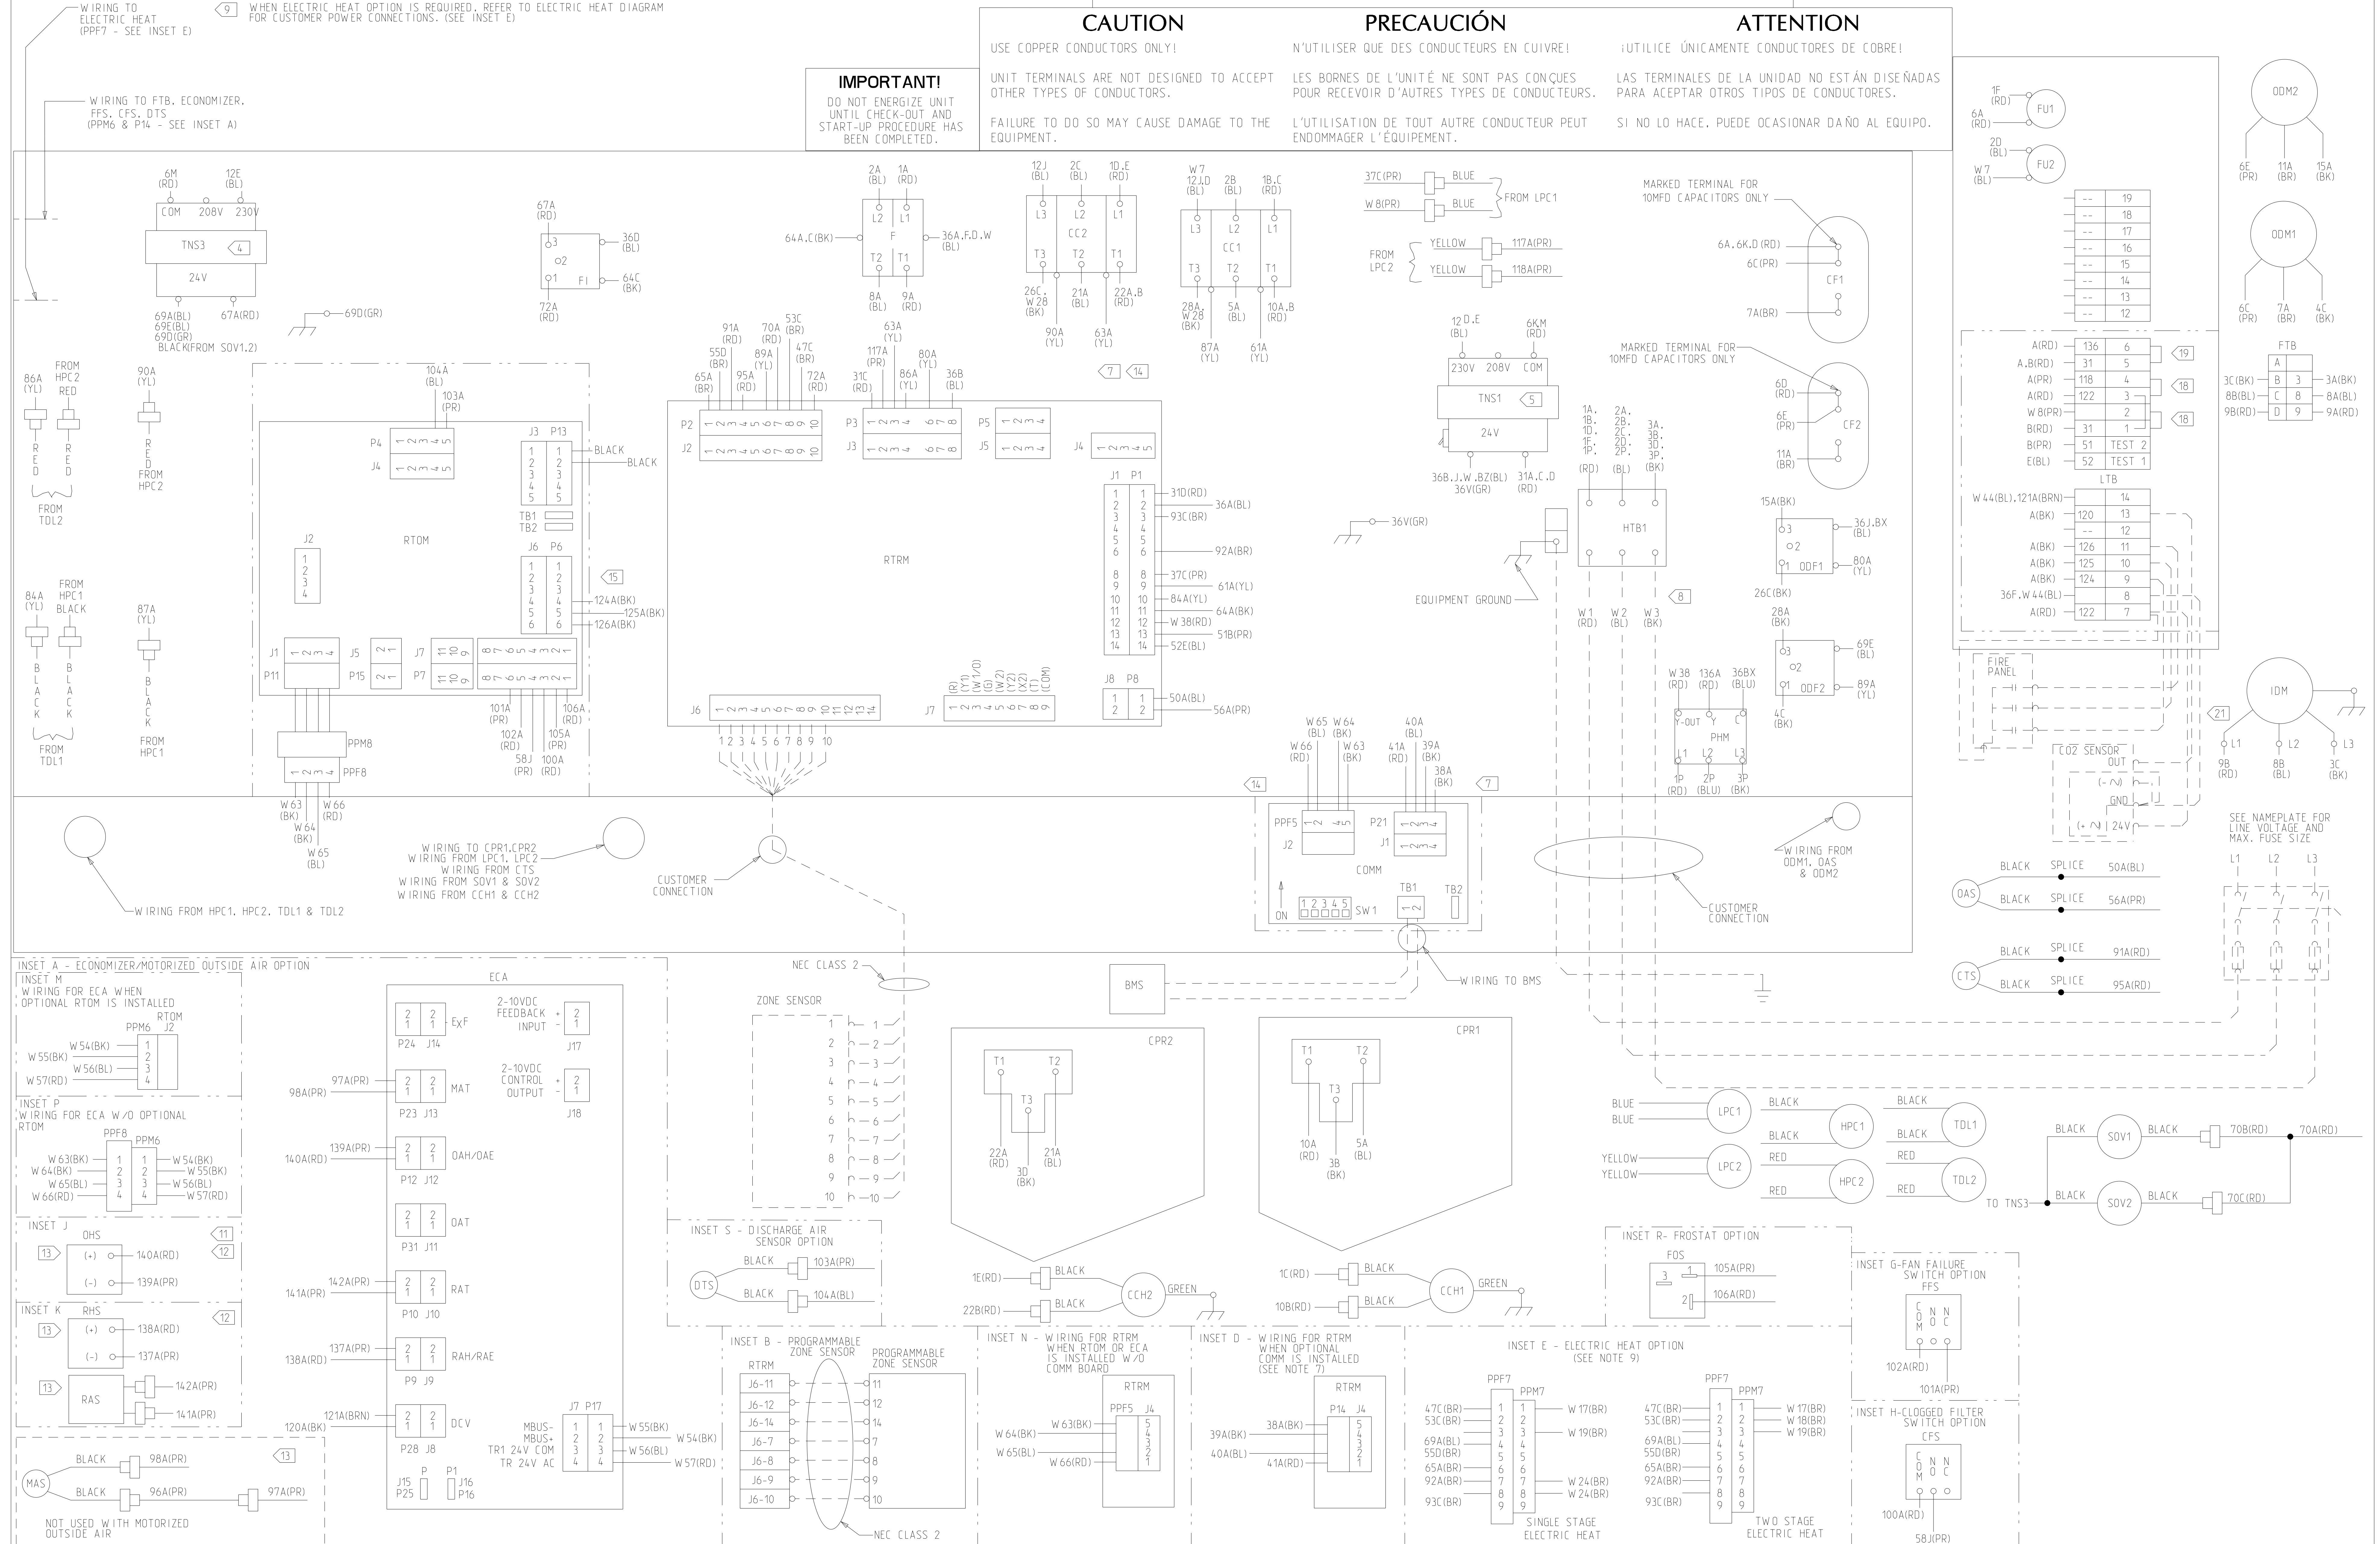

INSET A - ECONOMIZER/MOTORIZED OUTSIDE AIR OPTION

INSET M
WIRING FOR ECA WHEN OPTIONAL RTOM IS INSTALLED

INSET P
WIRING FOR ECA W/O OPTIONAL RTOM

INSET J
OHS

INSET K
RHS

INSET L
RAS

INSET S
DISCHARGE AIR SENSOR OPTION

INSET B
PROGRAMMABLE ZONE SENSOR

INSET N
WIRING FOR RTRM WHEN RTOM OR ECA IS INSTALLED W/O COMM BOARD

INSET D
WIRING FOR RTRM WHEN OPTIONAL COMM IS INSTALLED (SEE NOTE 7)

INSET E
ELECTRIC HEAT OPTION (SEE NOTE 9)

INSET R
FROSTAT OPTION

INSET G
FAN FAILURE SWITCH OPTION FFS

INSET H
CLOGGED FILTER SWITCH OPTION CFS

INSET A - ECONOMIZER/MOTORIZED OUTSIDE AIR OPTION

INSET M
WIRING FOR ECA WHEN OPTIONAL RTOM IS INSTALLED

INSET P
WIRING FOR ECA W/O OPTIONAL RTOM

INSET J
OHS

INSET K
RHS

INSET L
RAS

INSET S
DISCHARGE AIR SENSOR OPTION

INSET B
PROGRAMMABLE ZONE SENSOR

INSET N
WIRING FOR RTRM WHEN RTOM OR ECA IS INSTALLED W/O COMM BOARD

INSET D
WIRING FOR RTRM WHEN OPTIONAL COMM IS INSTALLED (SEE NOTE 7)

INSET E
ELECTRIC HEAT OPTION (SEE NOTE 9)

INSET R
FROSTAT OPTION

INSET G
FAN FAILURE SWITCH OPTION FFS

INSET H
CLOGGED FILTER SWITCH OPTION CFS

INSET A - ECONOMIZER/MOTORIZED OUTSIDE AIR OPTION

INSET M
WIRING FOR ECA WHEN OPTIONAL RTOM IS INSTALLED

INSET P
WIRING FOR ECA W/O OPTIONAL RTOM

INSET J
OHS

INSET K
RHS

INSET L
RAS

INSET S
DISCHARGE AIR SENSOR OPTION

INSET B
PROGRAMMABLE ZONE SENSOR

INSET N
WIRING FOR RTRM WHEN RTOM OR ECA IS INSTALLED W/O COMM BOARD

INSET D
WIRING FOR RTRM WHEN OPTIONAL COMM IS INSTALLED (SEE NOTE 7)

INSET E
ELECTRIC HEAT OPTION (SEE NOTE 9)

INSET R
FROSTAT OPTION

INSET G
FAN FAILURE SWITCH OPTION FFS

INSET H
CLOGGED FILTER SWITCH OPTION CFS

INSET A - ECONOMIZER/MOTORIZED OUTSIDE AIR OPTION

INSET M
WIRING FOR ECA WHEN OPTIONAL RTOM IS INSTALLED

INSET P
WIRING FOR ECA W/O OPTIONAL RTOM

INSET J
OHS

INSET K
RHS

INSET L
RAS

INSET S
DISCHARGE AIR SENSOR OPTION

INSET B
PROGRAMMABLE ZONE SENSOR

INSET N
WIRING FOR RTRM WHEN RTOM OR ECA IS INSTALLED W/O COMM BOARD

INSET D
WIRING FOR RTRM WHEN OPTIONAL COMM IS INSTALLED (SEE NOTE 7)

INSET E
ELECTRIC HEAT OPTION (SEE NOTE 9)

INSET R
FROSTAT OPTION

INSET G
FAN FAILURE SWITCH OPTION FFS

INSET H
CLOGGED FILTER SWITCH OPTION CFS

INSET A - ECONOMIZER/MOTORIZED OUTSIDE AIR OPTION

INSET M
WIRING FOR ECA WHEN OPTIONAL RTOM IS INSTALLED

INSET P
WIRING FOR ECA W/O OPTIONAL RTOM

INSET J
OHS

INSET K
RHS

INSET L
RAS

INSET S
DISCHARGE AIR SENSOR OPTION

INSET B
PROGRAMMABLE ZONE SENSOR

INSET N
WIRING FOR RTRM WHEN RTOM OR ECA IS INSTALLED W/O COMM BOARD

INSET D
WIRING FOR RTRM WHEN OPTIONAL COMM IS INSTALLED (SEE NOTE 7)

INSET E
ELECTRIC HEAT OPTION (SEE NOTE 9)

INSET R
FROSTAT OPTION

INSET G
FAN FAILURE SWITCH OPTION FFS

INSET H
CLOGGED FILTER SWITCH OPTION CFS

INSET A - ECONOMIZER/MOTORIZED OUTSIDE AIR OPTION

INSET M
WIRING FOR ECA WHEN OPTIONAL RTOM IS INSTALLED

INSET P
WIRING FOR ECA W/O OPTIONAL RTOM

INSET J
OHS

INSET K
RHS

INSET L
RAS

INSET S
DISCHARGE AIR SENSOR OPTION

INSET B
PROGRAMMABLE ZONE SENSOR

INSET N
WIRING FOR RTRM WHEN RTOM OR ECA IS INSTALLED W/O COMM BOARD

INSET D
WIRING FOR RTRM WHEN OPTIONAL COMM IS INSTALLED (SEE NOTE 7)

INSET E
ELECTRIC HEAT OPTION (SEE NOTE 9)

INSET R
FROSTAT OPTION

INSET G
FAN FAILURE SWITCH OPTION FFS

INSET H
CLOGGED FILTER SWITCH OPTION CFS

INSET A - ECONOMIZER/MOTORIZED OUTSIDE AIR OPTION

INSET M
WIRING FOR ECA WHEN OPTIONAL RTOM IS INSTALLED

INSET P
WIRING FOR ECA W/O OPTIONAL RTOM

INSET J
OHS

INSET K
RHS

INSET L
RAS

INSET S
DISCHARGE AIR SENSOR OPTION

INSET B
PROGRAMMABLE ZONE SENSOR

INSET N
WIRING FOR RTRM WHEN RTOM OR ECA IS INSTALLED W/O COMM BOARD

INSET D
WIRING FOR RTRM WHEN OPTIONAL COMM IS INSTALLED (SEE NOTE 7)

INSET E
ELECTRIC HEAT OPTION (SEE NOTE 9)

INSET R
FROSTAT OPTION

INSET G
FAN FAILURE SWITCH OPTION FFS

INSET H
CLOGGED FILTER SWITCH OPTION CFS

INSET A - ECONOMIZER/MOTORIZED OUTSIDE AIR OPTION

INSET M
WIRING FOR ECA WHEN OPTIONAL RTOM IS INSTALLED

INSET P
WIRING FOR ECA W/O OPTIONAL RTOM

INSET J
OHS

INSET K
RHS

INSET L
RAS

INSET S
DISCHARGE AIR SENSOR OPTION

INSET B
PROGRAMMABLE ZONE SENSOR

INSET N
WIRING FOR RTRM WHEN RTOM OR ECA IS INSTALLED W/O COMM BOARD

INSET D
WIRING FOR RTRM WHEN OPTIONAL COMM IS INSTALLED (SEE NOTE 7)

INSET E
ELECTRIC HEAT OPTION (SEE NOTE 9)

INSET R
FROSTAT OPTION

INSET G
FAN FAILURE SWITCH OPTION FFS

INSET H
CLOGGED FILTER SWITCH OPTION CFS

INSET A - ECONOMIZER/MOTORIZED OUTSIDE AIR OPTION

INSET M
WIRING FOR ECA WHEN OPTIONAL RTOM IS INSTALLED

INSET P
WIRING FOR ECA W/O OPTIONAL RTOM

INSET J
OHS

INSET K
RHS

INSET L
RAS

INSET S
DISCHARGE AIR SENSOR OPTION

INSET B
PROGRAMMABLE ZONE SENSOR

INSET N
WIRING FOR RTRM WHEN RTOM OR ECA IS INSTALLED W/O COMM BOARD

INSET D
WIRING FOR RTRM WHEN OPTIONAL COMM IS INSTALLED (SEE NOTE 7)

INSET E
ELECTRIC HEAT OPTION (SEE NOTE 9)

INSET R
FROSTAT OPTION

INSET G
FAN FAILURE SWITCH OPTION FFS

INSET H
CLOGGED FILTER SWITCH OPTION CFS