

6 FUSE FU5,FU6,FU30,RELAY XFR AND ASSOCIATED WIRES ARE ONLY USED WITH POWER EXHAUST OPTION.

12 MANUAL BYPASS SWITCH AND WIRES 410C, 413A, 414A, 415A
OPTIONAL.

FAILURE TO DISCONNECT POWER BEFORE SERVICING CAN CAUSE SEVERE PERSONAL INJURY OR DEATH.

FAUTE DE DECONNECTEZ LA SOURCE
ELECTRIQUE AVANT D'EFFECTUER
L'ENTRETIEN PEUT ENTRAINER DES BLESSURES
CORPORELLES SEVERES OU LA MORT.

FAILURE TO DO SO MAY CAUSE
DAMAGE TO THE EQUIPMENT.

DRAWN BY: D. SHANNON	TRANE® DATE: 9-11-08
REPLACES:	REVISION DATE: 10-16-08
CAD SYSTEM USED: PRO-E	SIMILAR TO: 2309-3517

	VOYAGER 3
	CONTROL BOX CONNECTION
	TE 40 TON 54KW 380/415 VOLT
	VARIABLE AIR VOLUME

DO NOT ENERGIZE UNIT
UNTIL CHECK-OUT AND
START-UP PROCEDURE HA
BEEN COMPLETED.

11 X 17 METAL PLATE

