

## NOTES:

1

WIRING SHOWN IS FOR 230V. FOR 208V MOVE ALL WIRES FROM 230V TERMINAL TO 208V TERMINAL.

3

WIRING SHOWN IS FOR 230V. FOR 208V MOVE ALL WIRES FROM 230V TERMINAL TO 208V TERMINAL ON TNS5.

6

FUSE FUS,FU6,FU30,RELAY XFR AND ASSOCIATED WIRES ARE ONLY USED WITH POWER EXHAUST OPTION.

10

WIRING SHOWN IS FOR OPTIONAL COMMUNICATION INTERFACE. COMMUNICATION WIRES FROM BMS TO TC1/LC1 ARE TO BE WIRE TIED TO BOTTOM OF THE CONTROL BOX. SEE TC1/LC1 LITERATURE FOR SWITCH SETTINGS.

11

FUSE FU20, FU21 AND SWITCH SRD ARE USED FOR OPTIONAL FACTORY POWER CONVENIENCE OUTLET. WIRES 400A(RD) AND 401A(BL) ARE CONNECTED TO FACTORY SUPPLIED DISCONNECT SWITCH.

12

MANUAL BYPASS SWITCH AND WIRES 410C, 413A, 414A, 415A OPTIONAL.

**WARNING****HAZARDOUS VOLTAGE!**

DISCONNECT ALL ELECTRIC POWER, INCLUDING REMOTE DISCONNECTS, BEFORE SERVICING.

FAILURE TO DISCONNECT POWER BEFORE SERVICING CAN CAUSE SEVERE PERSONAL INJURY OR DEATH.

**AVERTISSEMENT****VOLTAGE HASARDEUX!**

DECONNECTEZ TOUTES LES SOURCES ELECTRIQUES INCLUANT LES DISJONCTEURS SITUES A DISTANCE AVANT D'EFFECTUER L'ENTRETIEN.

FAUTE DE DECONNECTER LA SOURCE ELECTRIQUE AVANT D'EFFECTUER L'ENTRETIEN PEUT ENTRAÎNER DES BLESSURES CORPORELLES SEVERES OU LA MORT.

**CAUTION****USE COPPER CONDUCTORS ONLY!**

UNIT TERMINALS ARE NOT DESIGNED TO ACCEPT OTHER TYPES OF CONDUCTORS.

FAILURE TO DO SO MAY CAUSE DAMAGE TO THE EQUIPMENT.

## TRANE

THIS DRAWING IS PROPRIETARY AND SHALL NOT BE COPIED OR ITS CONTENTS DISCLOSED TO OUTSIDE PARTIES WITHOUT THE CONSENT OF TRANE.

DRAWN BY:

D. SHANNON

TRANE® DATE:

9-11-08

REPLACES:

REVISION DATE:

10-16-08

CAD SYSTEM USED:

PRO-E

SIMILAR TO:

2309-3523

FILE NUMBER:

2313-0251

DRAWING NUMBER:

2313-0294

SHEET:

1 OF 1

REV

C

## VOYAGER 3

CONTROL BOX CONNECTION  
TE 27.5-35 TON 36KW 208-230 VOLT  
CONSTANT VOLUME

**IMPORTANT!**

DO NOT ENERGIZE UNIT  
UNTIL CHECK-OUT AND  
START-UP PROCEDURE HAS  
BEEN COMPLETED.

11 X 17 METAL PLATE

