

FUSE REPLACEMENT TABLE				
FU1 FU2	208-230V	CLASS CC	20 AMP	
	380-415V	CLASS CC	20 AMP	
FU3 FU4	460-575V	CLASS CC	15 AMP	
	208-230V	CLASS CC	20 AMP	
	380-415V	N/A	N/A	
FU5 FU6 FU30	460-575V	N/A	N/A	
	208-230V	CLASS CC	15 AMP	
	380-415V	CLASS CC	7.5 AMP	
FU20 FU21	460-575V	CLASS CC	7.5 AMP	
	208-230V	CLASS CC	10 AMP	
	460-575V	CLASS CC	5 AMP	

