

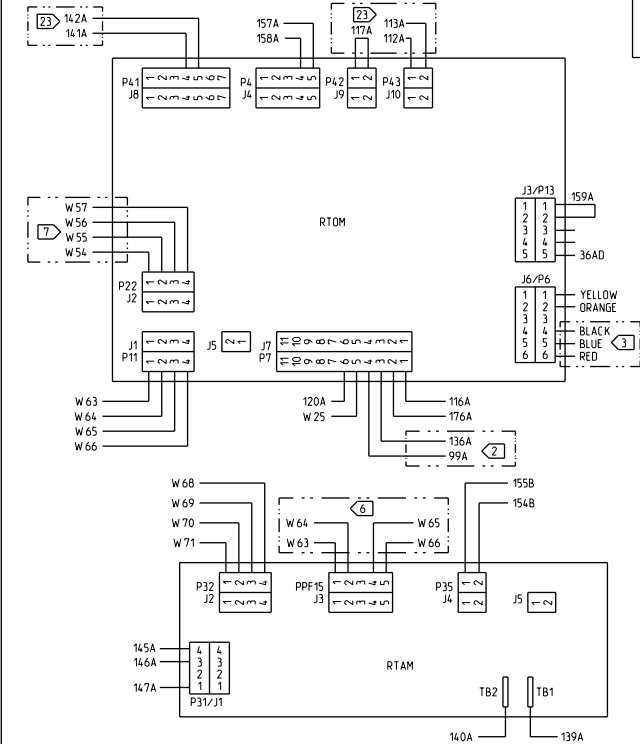
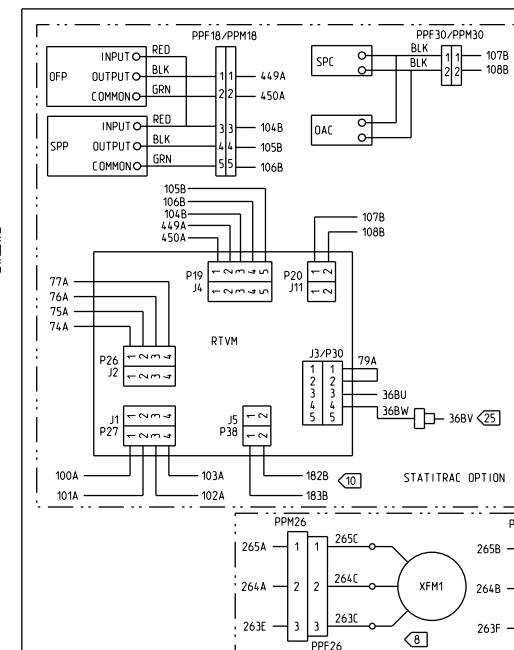




- 23 WIRE 117A IS REQUIRED TO ENABLE DEHUMIDIFICATION. WIRES 141A AND 142A ARE USED WITH DEHUMIDIFICATION AND CUSTOMER INSTALLED SPACE HUMIDITY SENSOR (SHS). WIRES 112A AND 113A ARE USED WITH DEHUMIDIFICATION AND CUSTOMER INSTALLED HUMIDISTAT (HST).

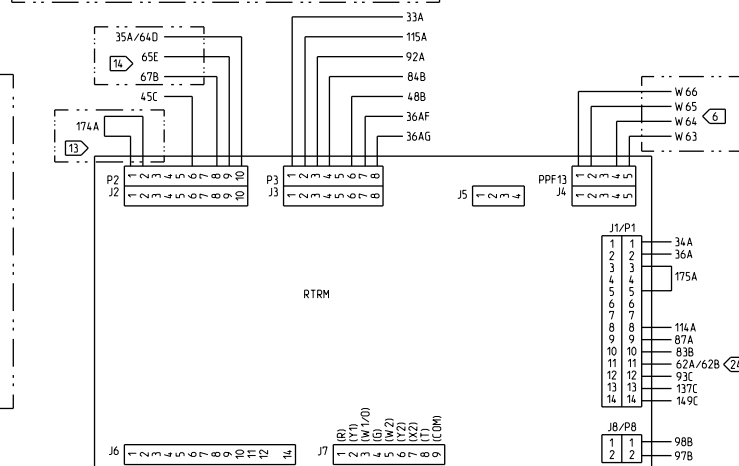


- 25 DISCONNECT WIRES 36BW AND 36BV ON HORIZONTAL UNITS.

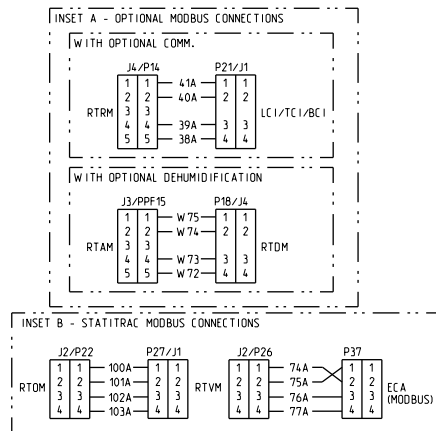


## CONDENSER SECTION WIRING

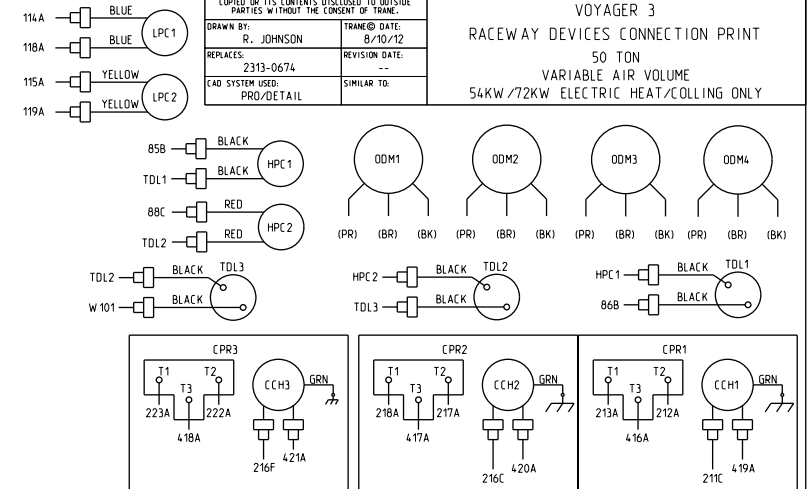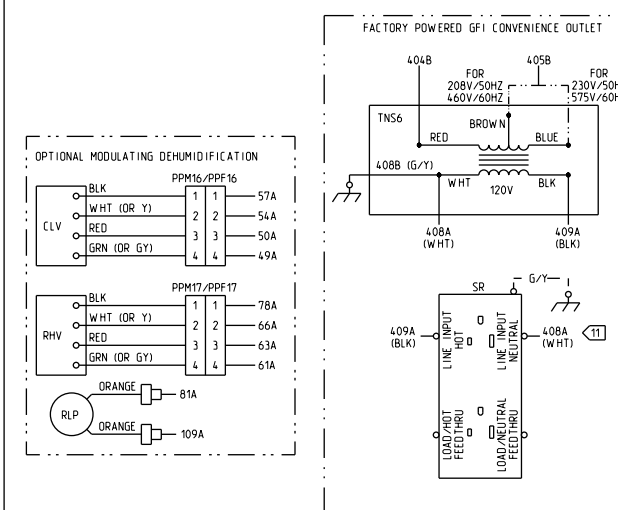

## HEAT SECTION WIRING

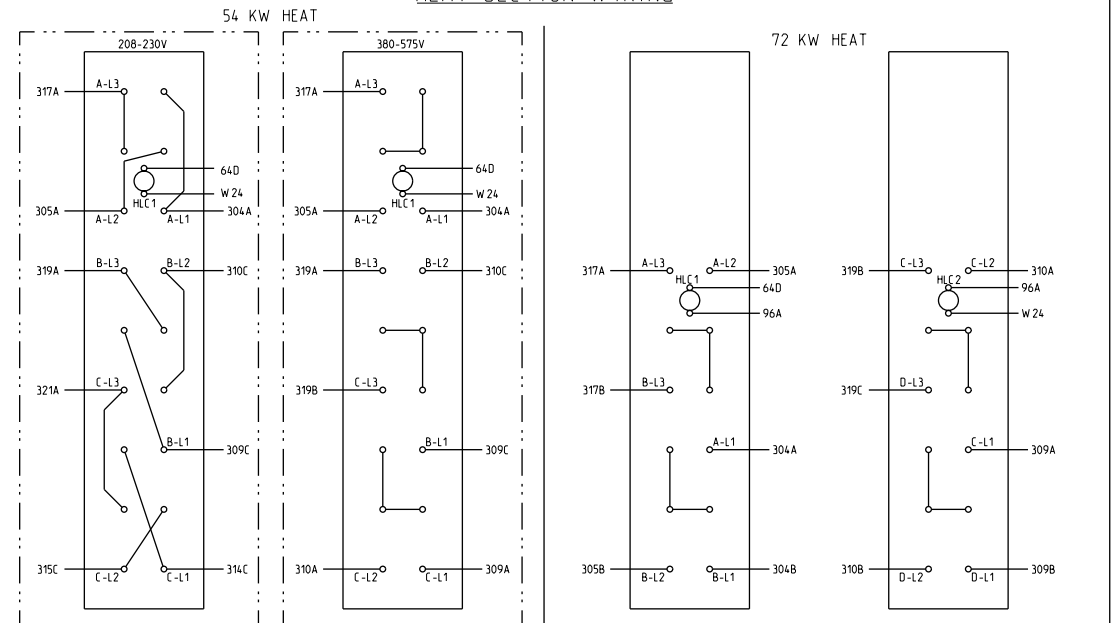

RETURN AIR  
SECTION WIRING

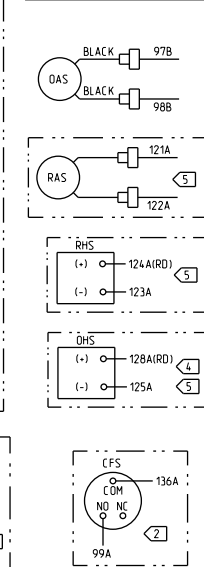

SUPPLY AIR  
SECTION WIRING

