 
 


CONDENSER SECTION


INSET 3A - CONDENSER FAN MOTORS

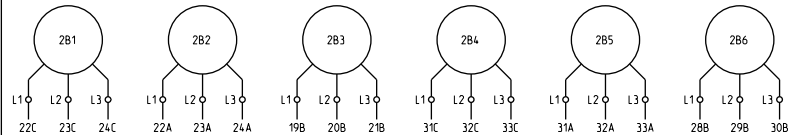


105T-130T ONLY

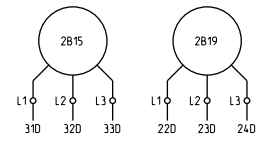


130T ONLY

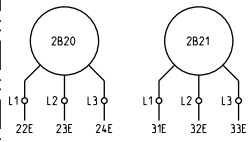


INSET 3B - COMPRESSORS

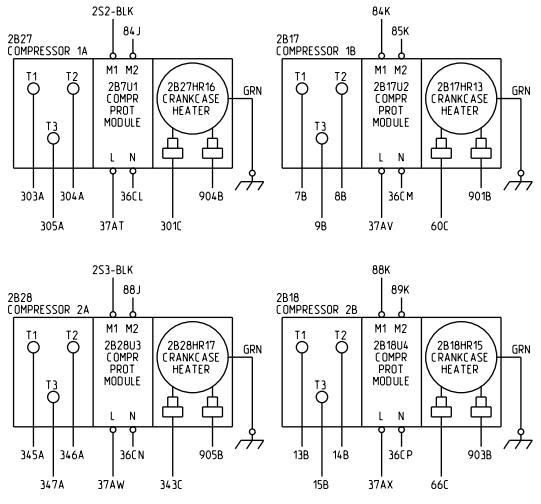


INSET 3F - SATURATED CONDENSING TEMP SENSORS

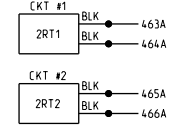


INSET 3D - OPTIONAL HOT GAS BYPASS SOLENOID VALVE

 

INSET 3E - HIGH AND LOW PRESSURE CUTOUTS

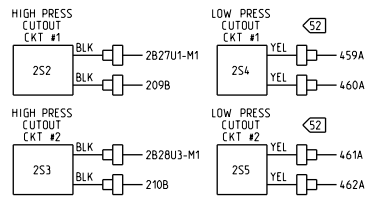

INSET 3C - CONVENIENCE OUTLET

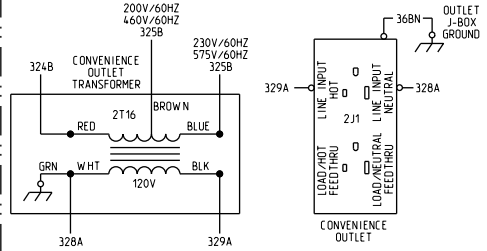


| DEVICE PREFIX LOCATION CODE |                               |
|-----------------------------|-------------------------------|
| AREA                        | LOCATION                      |
| 1                           | INSIDE UNIT CONTROL BOX       |
| 2                           | CONDENSER SECTION             |
| 3                           | AIR HANDLER SECTION           |
| 4                           | HEATING SECTION               |
| 5                           | EXTERNAL FIELD MOUNTED DEVICE |

IMPORTANT!


DO NOT ENERGIZE UNIT UNTIL CHECK-OUT AND START-UP PROCEDURE HAS BEEN COMPLETED.

AIR HANDLER SECTION


INSET 3AB - SUPPLY AIR FAN MOTORS

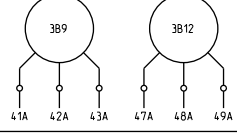


INSET 3Z - SUPPLY AIR TEMP SENSOR

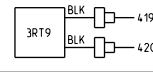


INSET 3AA - FILTER SWITCH

 


INSET 3P - AIRFLOW PROVING SWITCHES

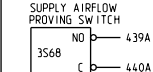


INSET 3AC - EXHAUST FAN MOTOR

 


INSET 3L - SOLENOID CHARGE ISOLATION CKT #1

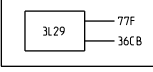


INSET 3M - SOLENOID CHARGE ISOLATION CKT #2

 


INSET 3S - OUTDOOR AIR TEMP/HUMIDITY SENSORS

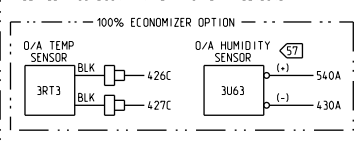


INSET 3T - RETURN AIR TEMP/HUMIDITY SENSORS

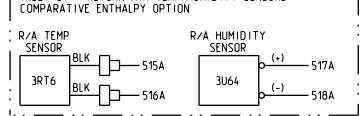


INSET 3K - HIGH DUCT TEMP T-STAT

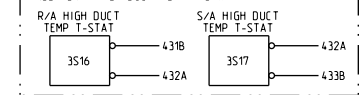


INSET 3AE - FINAL FILTER SWITCH

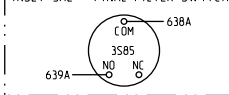


INSET 3V - ECONOMIZER ACTUATOR

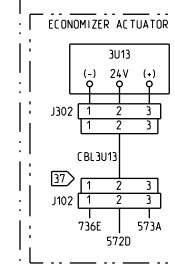


100% EXHAUST W/O STAT/TRAC

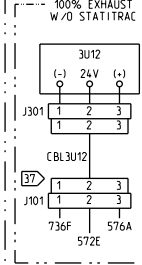


100% EXHAUST W/ STAT/TRAC

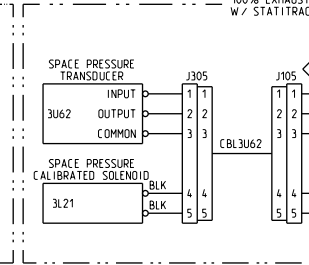


100% EXHAUST W/ STAT/TRAC

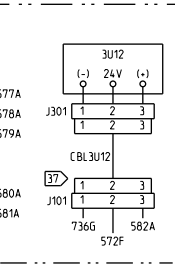

INSET 3G - LEAVING EVAP TEMP SENSORS

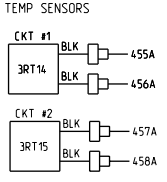


INSET 3J - ENTERING EVAP TEMP SENSORS

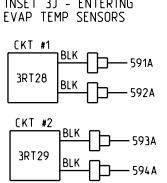


HEAT SECTION


INSET 4F - 2-STAGE NATURAL GAS HEAT

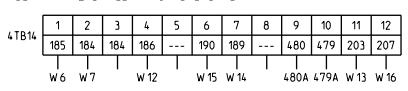


INSET 4H - MODULATING NATURAL GAS HEAT

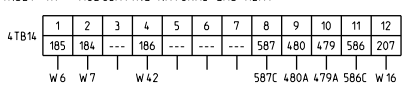

INSET 4J - ELECTRIC HEAT

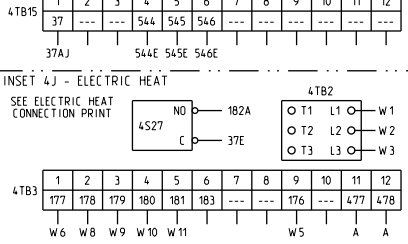

INSET 3Y - STEAM OR HOT WATER HEAT

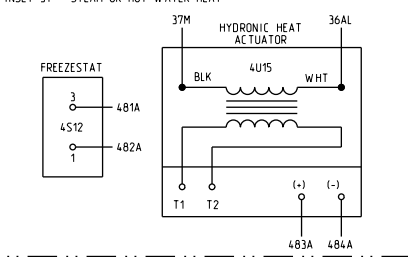

CAUTION

USE COPPER CONDUCTORS ONLY!

UNIT TERMINALS ARE NOT DESIGNED TO ACCEPT OTHER TYPES OF CONDUCTORS.

FAILURE TO DO SO MAY CAUSE DAMAGE TO THE EQUIPMENT.

ATTENTION

N'UTILISER QUE DES CONDUCTEURS EN CUIVRE!

LES BORNES DE L'UNITÉ NE SONT PAS CONÇUES POUR RECEVOIR D'AUTRES TYPES DE CONDUCTEURS.

L'UTILISATION DE TOUT AUTRE CONDUCTEUR PEUT ENDOMMAGER L'EQUIPEMENT.

PRECAUCIÓN

¡UTILICE ÚNICAMENTE CONDUCTORES DE COBRE!

LAS TERMINALES DE LA UNIDAD NO ESTÁN DISEÑADAS PARA ACEPTAR OTROS TIPOS DE CONDUCTORES.

SI NO LO HACE, PUEDE OCASIONAR DAÑO AL EQUIPO.