

NOTES:

- 1 ALL WIRING AND DEVICES SHOWN DASHED TO BE SUPPLIED AND INSTALLED BY THE CUSTOMER IN ACCORDANCE WITH LOCAL AND NATIONAL ELECTRICAL CODES.
- 2 IF ANY OF THE ORIGINAL WIRE, AS SUPPLIED WITH THIS UNIT, MUST BE REPLACED, REPLACE IT WITH APPLIANCE WIRING MATERIAL RATED AT 105°C AND 600V.
- 3 THREE PHASE MOTORS ARE PROTECTED UNDER PRIMARY SINGLE PHASING CONDITIONS. ALL MOTORS HAVE INTERNAL OVERLOAD PROTECTION. COMPRESSORS HAVE INTERNAL THERMAL PROTECTION.
- 4 WIRE W15 IS PRESENT ONLY WITH THE LOW AMBIENT CONTROLLER OPTION - DUAL FAN.
- 5 TO SHUT DOWN THE UNIT FOR EMERGENCY STOP, REMOVE JUMPER BETWEEN LTB-9 AND LTB-10 AND INSTALL FIELD SUPPLIED DEVICE.
- 7 CONNECTIONS SHOWN INCLUDE OPTIONAL CONDENSATE OVERFLOW SWITCH (COF). IF COF IS NOT INSTALLED, CONNECT WIRE W5(R) TO 104A(R).
- 8 CONNECTIONS SHOWN INCLUDE OPTIONAL FROSTAT (FOS). IF FOS IS NOT INSTALLED, CONNECT WIRE W8 TO WIRE 101T.
- 9 CONNECTIONS SHOWN IS FOR STANDARD 10 MOTOR. FOR OPTIONAL 10 HP ID MOTOR CONNECTIONS, REMOVE WIRE 136A, REPLACE WITH WIRE 136C AND CONNECT AS SHOWN IN INSET A.
- 10 WIRE NUMBER 3K IS ONLY PRESENT WITH OPTIONAL 10HP MOTOR W/EXTERNAL OVERLOADS.

FUSE REPLACEMENT TABLE				
FUSE NO.	UNIT TONNAGE	UNIT VOLTAGE	FUSE TYPE	FUSE AMPS
FU1	ALL	208/230V	CC	#300V 20A
FU2	ALL	208/230V	CC	20A

IMPORTANT!

DO NOT ENERGIZE UNIT UNTIL CHECK-OUT AND START-UP PROCEDURE HAS BEEN COMPLETED.

WIRE COLOR DESIGNATION			
ABBR	COLOR	ABBR	COLOR
BK	BLACK	V (PR)	PURPLE
BL	BLUE	R	RED
BR	BROWN	TN	TAN
G	GREEN	W	WHITE
O	ORANGE	Y	YELLOW

TRANE		FILE NUMBER:	DRAWING NUMBER:	SHEET:	REV
THIS DRAWING IS PROPRIETARY AND SHALL NOT BE COPIED OR ITS CONTENTS DISCLOSED TO OUTSIDE PARTIES WITHOUT THE CONSENT OF TRANE.		23132229	23132232	1 OF 1	B
DRAWN BY: L. D'ALBANI		FOUNDATION			
REPLACES: --		DIAGRAM			
CAD SYSTEM USED: Pro/DETAIL		CONNECTION - CONTROL BOX			
		208/230V GAS HEAT			

CAUTION

USE COPPER CONDUCTORS ONLY!

UNIT TERMINALS ARE NOT DESIGNED TO ACCEPT OTHER TYPES OF CONDUCTORS.

FAILURE TO DO SO MAY CAUSE DAMAGE TO THE EQUIPMENT.

PRECAUCIÓN

N'UTILISER QUE DES CONDUCTEURS EN CUIVRE!

LES BORNES DE L'UNITÉ NE SONT PAS CONÇUES POUR RECEVOIR D'AUTRES TYPES DE CONDUCTEURS.

L'UTILISATION DE TOUT AUTRE CONDUCTEUR PEUT ENDOMMAGER L'ÉQUIPEMENT.

ATTENTION

¡UTILICE ÚNICAMENTE CONDUCTORES DE COBRE!

LAS TERMINALES DE LA UNIDAD NO ESTÁN DISEÑADAS PARA ACEPTAR OTROS TIPOS DE CONDUCTORES.

SI NO LO HACE, PUEDE OCASIONAR DAÑO AL EQUIPO.

