

CUSTOMER NOTES:

1. CUSTOMER TO ASSEMBLE FLUE GAS RECIRCULATION LINE AS SHOWN. BALLOON NUMBERS 1 THRU 4 AND 6 THRU 13 ARE LOCATED IN A LOOSE PARTS BOX. BALLOON NUMBER 5 IS STRAPPED TO SIDE OF THE DIRECT FIRED GENERATOR.
2. CUSTOMER TO RUN CONDUIT 'Z' TO THE BURNER CONTROL PANEL (BCP) AND ATTACH NUMBERED WIRES TO THEIR SPECIFIC TERMINALS AS SHOWN IN DETAIL 'A'.

BALLOON	QTY	DESCRIPTION	PART NUMBER
1	1	FGR VALVE (BUTTERFLY)	SUPPLIED W/BURNER
2	2	FGR VALVE GASKETS	SUPPLIED W/BURNER
3	8	SCREW: 5/8-11 X 3.50	X25030060700
4	8	NUT: 5/8-11	X28011500000
5	1	PIPE ASSY-4"NPS (PIPE 31) (PIPE 32) (SLEEVE 33) (ANGLE SUPPORT 35)	SHIPS ASSEMBLED (26301923010E) (26301924010E) (26301413010E) (26301919010E)
6	1	PIPE SUPPORT ASSY (ANGLE SUPPORT 36) (BASE SUPPORT 37)	SHIPS ASSEMBLED (26301920010E) (26301921010E)
7	2	SCREW: 3/8-16 X 1.12	X25014400000
8	2	NUT: 3/8-16	X28060207090
9	2	WASHER: 3/8 FLAT	X22010005000
10	1	PIPE: 1/2 NPS	26301926010E
11	1	VALE: CHECK 1/2 NPTI	X15020301030
12	1	HOSE	SUPPLIED W/BURNER
13	2	CLAMPS	SUPPLIED W/BURNER

