


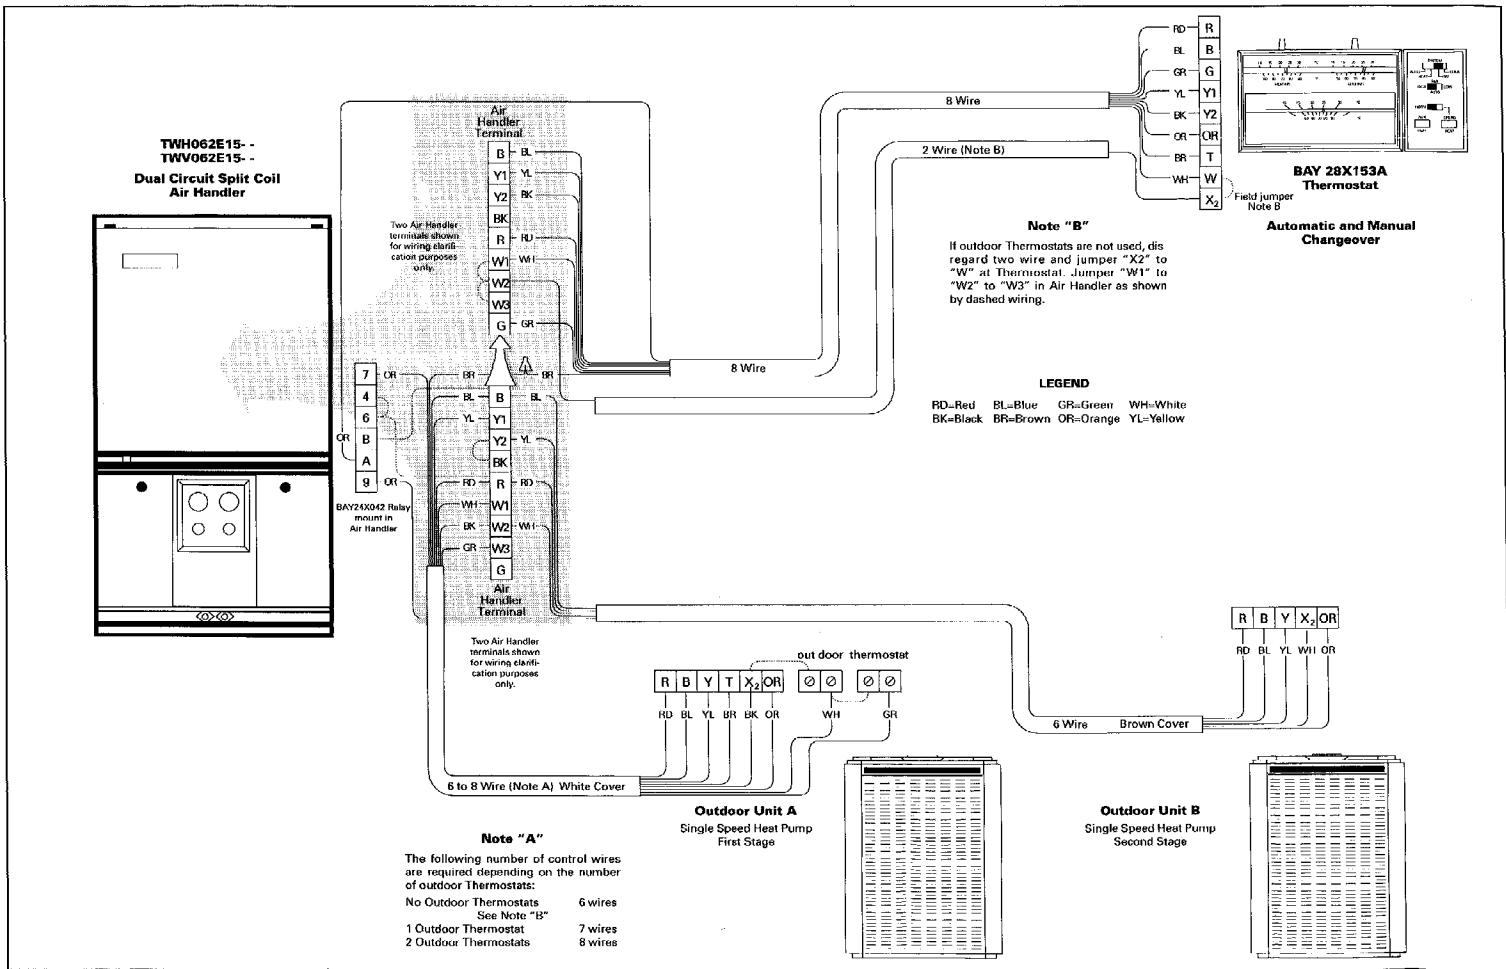

II⁺ Heat Pump Systems Control Wiring Diagram

2 Stage Cooling / 3 Stage Heating

Additional Heat Staging By Outdoor Thermostats








II⁺ Air Conditioning Systems Control Wiring Diagram


Manual Changeover Only — 2 Stage Cooling 3 Stage Heating

TWH062E15-
TWH062E15-



Dual Circuit Split Coil
Air Handler

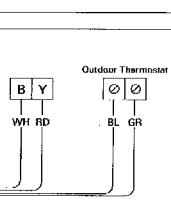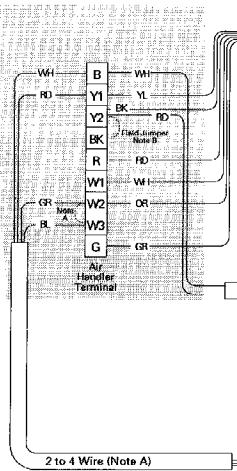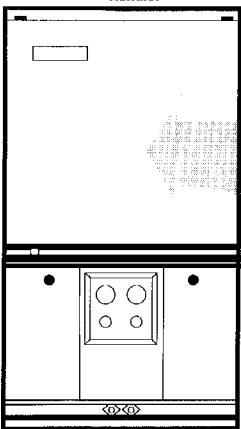

Outdoor Unit A
Single Speed Cooling
First Stage

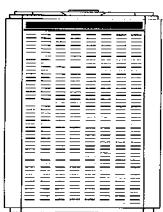

Outdoor Unit B
Single Speed Cooling
Second Stage

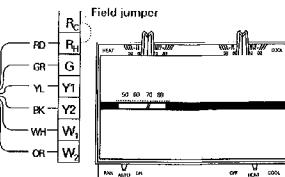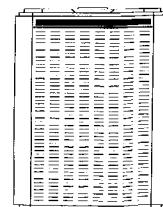

BAY 28X183
Thermostat
BAY 28X185
Sub-base

Manual Changeover

Note "A"
If Outdoor Thermostat is not used, use 2
wire and add field jumper in Air Handler
from W2 to W3 as shown by dashed
wiring.

Note "B"
Field added jumper required for high
airflow (Black Wire) setting.

LEGEND
RD=Red BL=Blue GR=Green WH=White
BK=Black BR=Brown OR=Orange YL=Yellow