
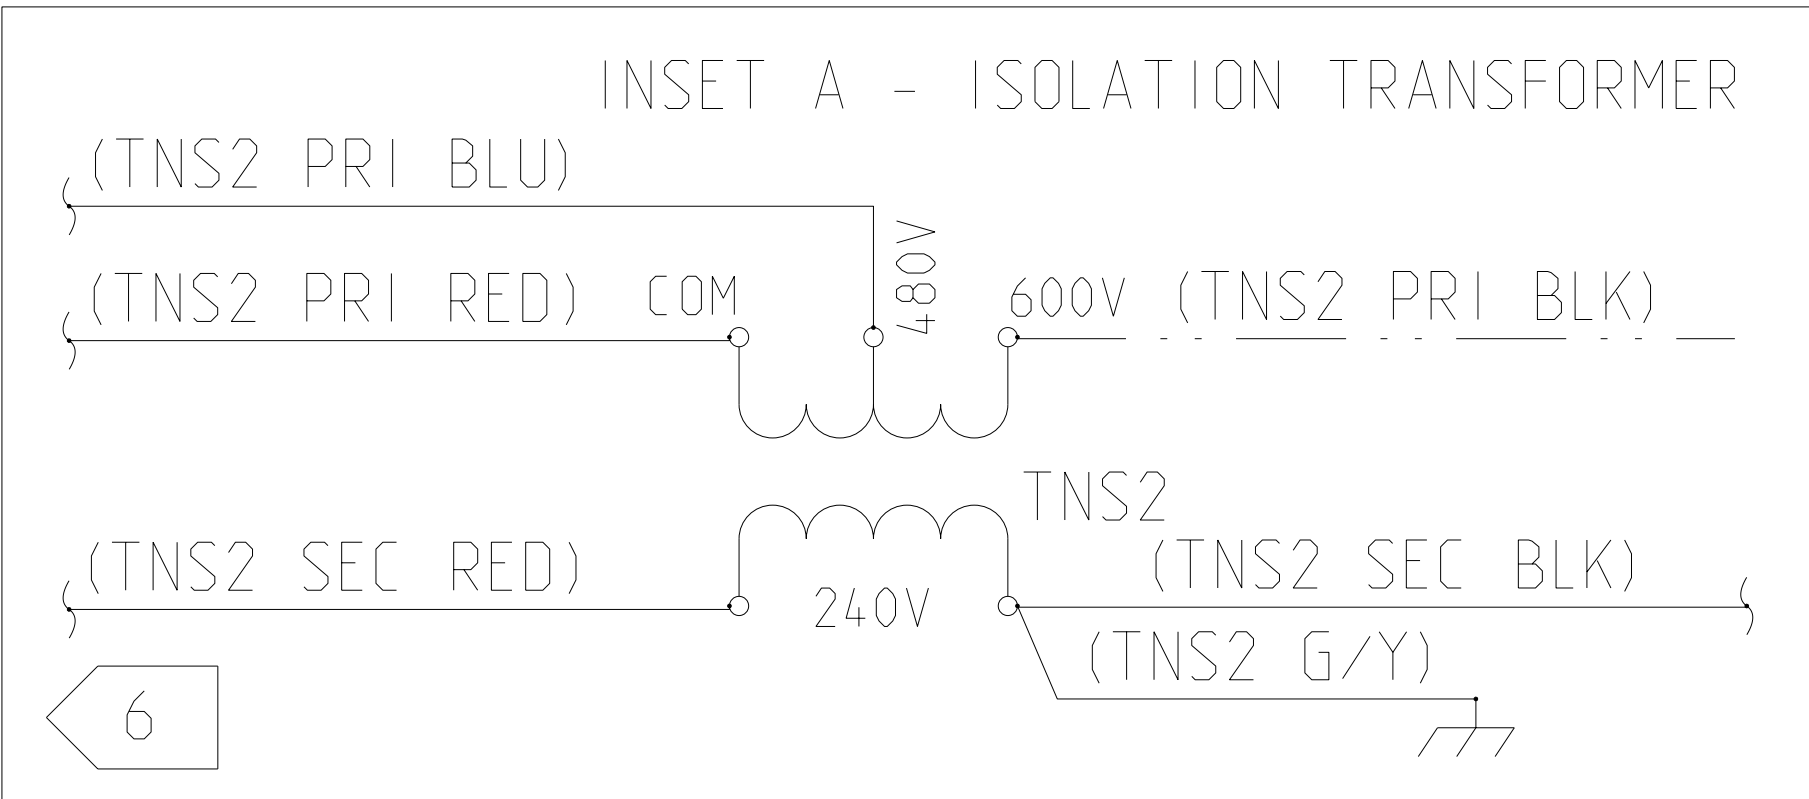


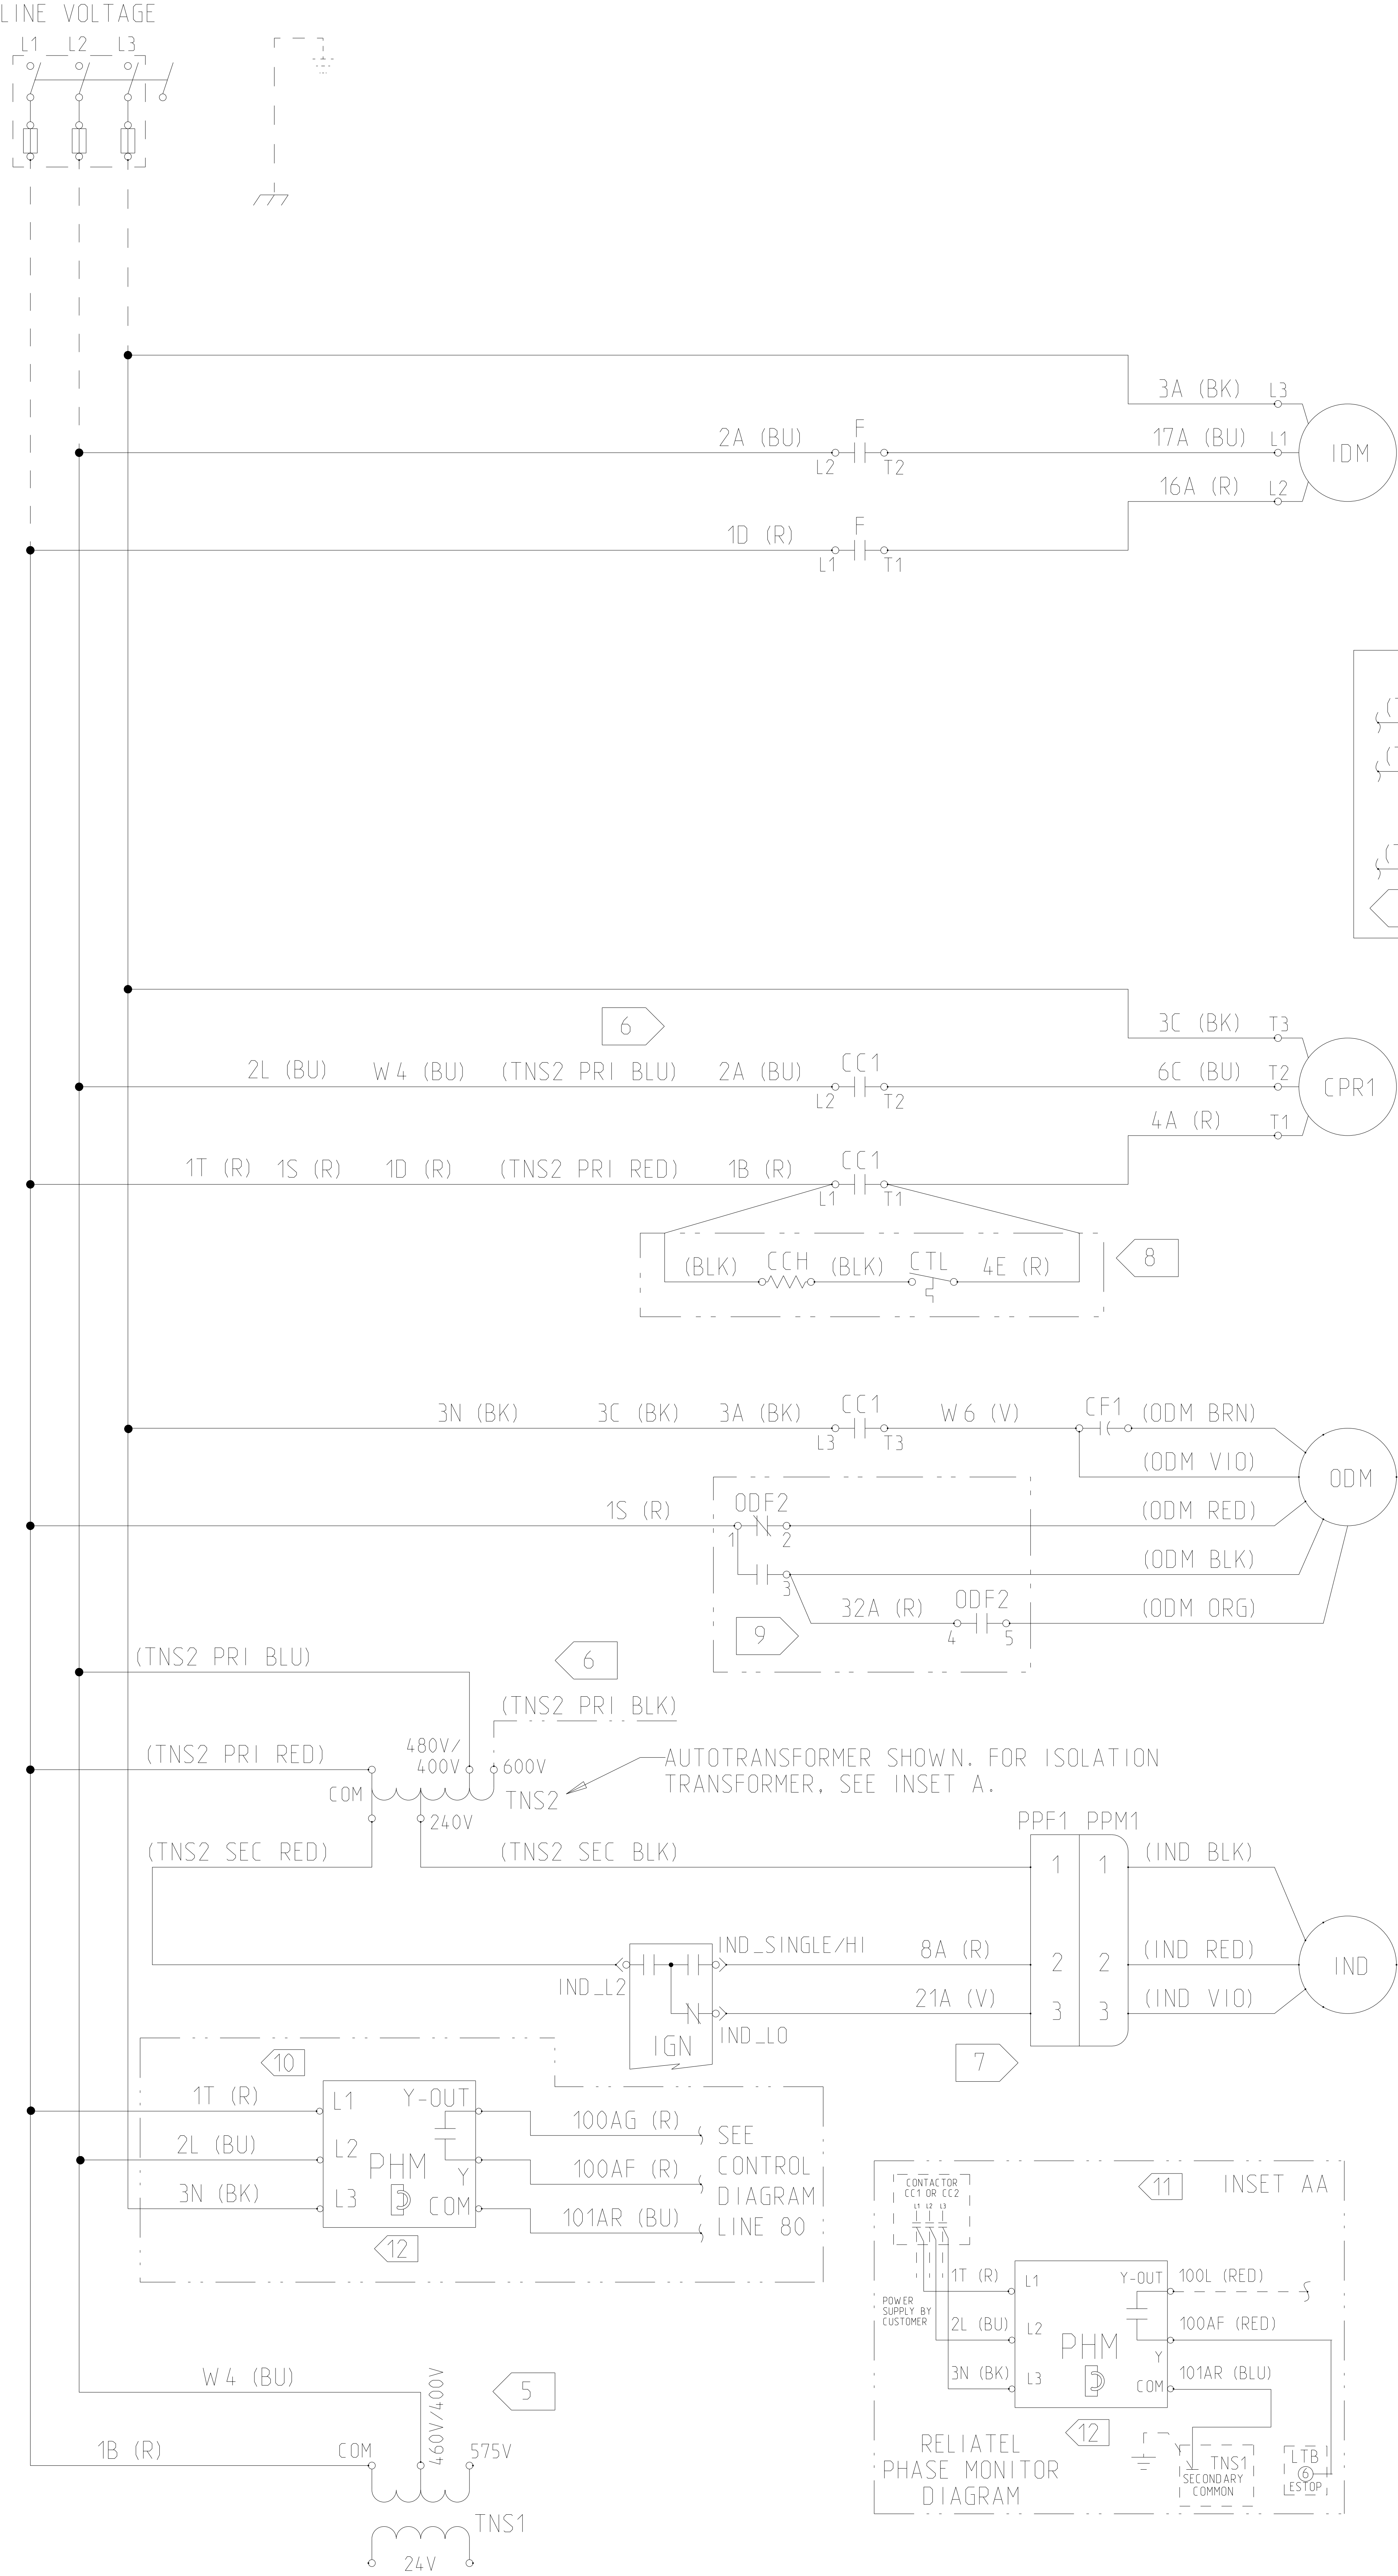

REF	DESCRIPTION	LINE
CC1	COMPRESSOR CONTACTOR	23,25,30
CCH	CRANKCASE HEATER	27
CF1	OD MOTOR CAPACITOR	30
CPR1	COMPRESSOR	23
CTL	COIL TEMP LIMIT SWITCH	27
F	FAN CONTACTOR	10,12
IDM	ID FAN MOTOR	10
IGN	IGNITION MODULE	41
IND	INDUCER MOTOR	41
ODF2	OD FAN SPEED RELAY	32,34
ODM	OD FAN MOTOR	31
PHM	PHASE MONITOR	44
TNS1	LOW VOLTAGE TRANSFORMER	51
TNS2	INDUCER AUTOTRANSFORMER	37

COLOR	ABBR	COLOR	ABBR
BLACK	BK	ORANGE	O
BLUE	BU	RED	R
BROWN	BR	VIOLET (PURPLE)	V
GRAY (SLATE)	GY	WHITE	W
GREEN/YELLOW	G/Y	YELLOW	Y

⚠ WARNING

HAZARDOUS VOLTAGE!

DISCONNECT ALL ELECTRIC POWER INCLUDING REMOTE DISCONNECTS AND FOLLOW LOCK OUT AND TAG PROCEDURES BEFORE SERVICING. INSURE THAT ALL MOTOR CAPACITORS HAVE DISCHARGED STORED VOLTAGE. UNITS WITH VARIABLE SPEED DRIVE, REFER TO DRIVE INSTRUCTIONS FOR CAPACITOR DISCHARGE.

FAILURE TO DO THE ABOVE BEFORE SERVICING COULD RESULT IN DEATH OR SERIOUS INJURY.

⚠ AVERTISSEMENT

TENSION DANGEREUSE!

COUPER TOUTES LES TENSIONS ET OUVRIR LES SECTIONNEURS A DISTANCE. PUIS SUIVRE LES PROCÉDURES DE VERROUILLAGE ET DES ÉTIQUETTES AVANT TOUTE INTERVENTION. VÉRIFIER QUE TOUTS LES CONDENSATEURS DES MOTEURS SONT DÉCHARGÉS. DANS LE CAS D'UNITÉS COMPORTANT DES ENTRAÎNEMENTS A VITESSE VARIABLE, SE REPORTER AUX INSTRUCTIONS DE L'ENTRAÎNEMENT POUR DÉCHARGER LES CONDENSATEURS.

⚠ ADVERTENCIA

¡VOLTAJE PELIGROSO!

DESCONECTE TODA LA ENERGÍA ELÉCTRICA, INCLUSO LAS DESCONEXIONES REMOTAS Y SIGA LOS PROCEDIMIENTOS DE CIERRE Y ETIQUETADO ANTES DE PROCEDER AL SERVICIO. ASEGURESE DE QUE TODOS LOS CAPACITORES DEL MOTOR HAYAN DESCARGADO EL VOLTAJE ALMACENADO. PARA LAS UNIDADES CON EJE DE DIRECCIÓN DE VELOCIDAD VARIABLE, CONSULTE LAS INSTRUCCIONES PARA LA DESCARGA DEL CONDENSADOR.

EL NO REALIZAR LO ANTERIORMENTE INDICADO, PODRÍA OCASIONAR LA MUERTE O SERIAS LESIONES PERSONALES.

- UNLESS OTHERWISE NOTED, ALL SWITCHES ARE SHOWN AT 25°C (77°F), AT ATMOSPHERIC PRESSURE, AT 50% RELATIVE HUMIDITY WITH ALL UTILITIES TURNED OFF AND AFTER A NORMAL SHUTDOWN HAS OCCURRED.
- DASHED LINES INDICATE RECOMMENDED FIELD WIRING BY OTHERS. DASHED LINE ENCLOSURES AND/OR DASHED DEVICE OUTLINES INDICATE COMPONENTS PROVIDED BY THE FIELD. PHANTOM LINE ENCLOSURES INDICATE ALTERNATE CIRCUITRY OR AVAILABLE SALES OPTIONS.
- NUMBERS ALONG THE RIGHT SIDE OF THE SCHEMATIC DESIGNATE THE LOCATION OF CONTACTS BY LINE NUMBER. AN UNDERLINED NUMBER INDICATES A NORMALLY CLOSED CONTACT.
- THREE-PHASE MOTORS ARE PROTECTED UNDER PRIMARY SINGLE PHASING CONDITIONS. ALL MOTORS HAVE INTERNAL OVERLOAD PROTECTION AND COMPRESSORS HAVE INTERNAL THERMAL PROTECTION.

- 5 CONNECTIONS SHOWN ARE FOR 380-415V/50HZ/3PH, 380V/60HZ/3PH, AND 460V/60HZ/3PH UNITS. WHEN 575V/60HZ/3PH OPERATION IS REQUIRED, MOVE WIRE W4(BLU) FROM THE 460V TERMINAL ON TNS1 TO THE 575V TERMINAL.
- 6 CONNECTIONS SHOWN ARE FOR 380-415V/50HZ/3PH, 380V/60HZ/3PH, AND 460V/60HZ/3PH UNITS. WHEN 575V/60HZ/3PH OPERATION IS REQUIRED, REMOVE WIRE (TNS2 PRI BLU) FROM CC1-L2 AND CONNECT WIRE (TNS2 PRI BLK) TO CC1-L2.
- 7 CONNECTIONS SHOWN ARE FOR DUAL-STAGE GAS HEAT OPERATION. WHEN SINGLE-STAGE OPERATION IS REQUIRED, WIRE 21A(VIO) IS NOT CONNECTED, AND WIRE (IND VIO) IS NOT PRESENT.
- 8 THESE CONNECTIONS ARE FOR UNITS WITH A CRANKCASE HEATER INSTALLED. FOR 5-TON, CTL AND WIRE 4E(RED) ARE NOT PRESENT, AND CCH WIRES ARE CONNECTED TO CC1-L1 AND CC1-T1.
- 9 CONNECTIONS SHOWN ARE FOR DEHUMIDIFICATION OPTION (2-SPEED ODM). FOR 1-SPEED ODM, WIRES 1S(RED), 32A(RED), (ODM RED), (ODM ORG), AND COMPONENT ODF2 ARE NOT PRESENT AND WIRE (ODM BLK) IS CONNECTED TO CC1-L1.
- 10 OPTIONAL PHASE MONITOR CONNECTIONS SHOWN ARE FOR ELECTRO-MECHANICAL CONTROLS. IF PHM IS NOT INSTALLED, WIRES 1T, 2L, 3N 100AF, 100AG, AND 101AR ARE NOT PRESENT. FOR RELIATEL CONTROLS, SEE INSET AA.
- 11 OPTIONAL PHASE MONITOR CONNECTIONS FOR RELIATEL CONTROLS. CONNECT ENDS OF WIRE 100AG TOGETHER (NOT USED). MOVE 100L FROM LTB-6 TO PHM Y-OUT. CONNECT 100AF TO LTB-6. CONNECT WIRE 101AR TO TNS1 SECONDARY COM.
- 12 CUT PHM JUMPER FOR 50 HZ.

CAUTION

USE COPPER CONDUCTORS ONLY!

UNIT TERMINALS ARE NOT DESIGNED TO ACCEPT OTHER TYPES OF CONDUCTORS.

FAILURE TO DO SO MAY CAUSE DAMAGE TO THE EQUIPMENT.

ATTENTION

N'UTILISER QUE DES CONDUCTEURS EN CUIVRE!

LES BORNES DE L'UNITÉ NE SONT PAS CONÇUES POUR RECEVOIR D'AUTRES TYPES DE CONDUCTEURS.

PRECAUCIÓN

¡UTILICE ÚNICAMENTE CONDUCTORES DE COBRE!

LAS TERMINALES DE LA UNIDAD NO ESTÁN DISEÑADAS PARA ACEPTAR OTROS TIPOS DE CONDUCTORES.

SI NO LO HACE, PUEDE OCASIONAR DAÑO AL EQUIPO.

IMPORTANT

DO NOT ENERGIZE UNIT UNTIL CHECK-OUT AND START-UP PROCEDURE HAS BEEN COMPLETED.

THIS DRAWING IS PROPRIETARY AND SHALL NOT BE COPIED OR ITS CONTENTS DISCLOSED TO OUTSIDE PARTIES WITHOUT THE WRITTEN CONSENT OF TRANE.

DRAWN BY: K. VICKMORIK © DATE: 23Aug2000

DO NOT SCALE PRINT

THIRD ANGLE PROJECTION

POWER - GAS HEAT, 3-7.5 TON, 380V-50HZ/380V-60HZ/460V/575V PWR, EM/RT CNTL, BD IDM

TRANE

A DIVISION OF TRANE TECHNOLOGY, INC.

4366-1005

DIAGRAM

S