


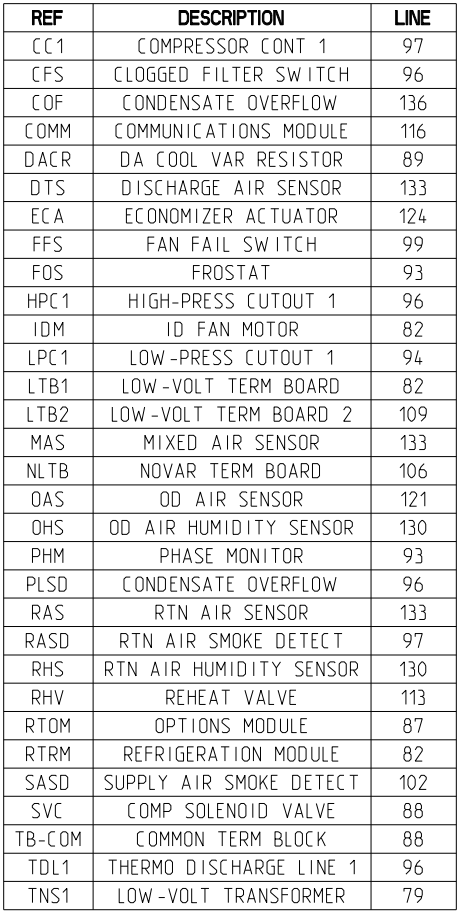

- 1 CONNECTIONS SHOWN INCLUDE OPTIONAL COMM. IF NOT INSTALLED, CONNECT PLUG 3P4 TO TRM-3J4. REFER TO ACCOMPANYING LITERATURE FOR PROPER CONNECTION/COMBINATION OF OPTIONAL COMPONENTS.
- 2 TO DISABLE THE COMPRESSOR, REMOVE THE JUMPER ON LTB1 BETWEEN PINS 1 & 2 AND CONNECT FIELD SUPPLIED CONTROL DEVICE.
- 3 TO SHUT DOWN THE UNIT FOR EMERGENCY STOP, REMOVE THE JUMPERS ON LTB1 BETWEEN PINS 5 & 6 AND CONNECT FIELD SUPPLIED CONTROL DEVICE OR INSTALL OPTIONAL FIRESTAT.
- 4 INSTALL OPTIONAL REMOTE SENSOR TO PINS S1 & S2 WHEN REQUIRED. SEE PROGRAMMABLE ZONE SENSOR/REMOTE PANEL WITH NIGHT SETBACK LITERATURE FOR CORRECT SETTINGS.
- 5 TO ENABLE SUPPLY AIR TEMPERING, REMOVE PLUG 5P3.
- 6 REQUIRED FOR OPTIONAL REFERENCE ENTHALPY CONTROL.
- 7 REQUIRED FOR OPTIONAL COMPARATIVE ENTHALPY CONTROL.
- 8 OPTIONAL MAS, RAS, RHS, OHS, AND ASSOCIATED WIRING ARE NOT USED WITH MOTORIZED OUTSIDE AIR DAMPER.
- 9 TO PREVENT FULL LOAD OPERATION OF VARIABLE LOAD COMPRESSOR, REMOVE JUMPER ON LTB1 BETWEEN PINS 3 & 4.
- 10 FUTURE CHANGES - NOT USED.
- 11 IF DEHUMIDIFICATION OPTION IS INSTALLED, CUT AND ISOLATE WIRE 124B.
- 12 REQUIRED FOR OPTIONAL DEHUMIDIFICATION. SEE CO2 SENSOR & VENTILATION OVERRIDE ACCESSORY DIAGRAM FOR ADDITIONAL WIRING.
- 13 NLTB AND ASSOCIATED WIRING IS ALSO INCLUDED IN ENHANCED DEHUMIDIFICATION, AND IS STANDARD EQUIPMENT ON THIS UNIT.
- 14 IDM RPM INDICATOR 0-2.4V ACROSS TP1 AND GROUND.
- 15 DISCHARGE AIR COOL SETPOINT INDICATOR 0-2.4V ACROSS TEST POINT (TP) AND GROUND.

THANE THIS DRAWING IS PROPERTY OF THANE COUNTY WATER DEPARTMENT. NO REUSE OR REPRODUCTION OF THIS DRAWING IS ALLOWED WITHOUT THE WRITTEN CONSENT OF THANE. DRAWN BY: © NAME J. Woosley DATE: 27-Oct-2010 DO NOT SCALE PRINT		4366-7216 DIAGRAM CONTROLS THC(037-067)E(3A) 17-SEER		SHEET 1 REV E
---	--	--	--	------------------------------------