

- ALL WIRING AND DEVICES SHOWN DASHED TO BE SUPPLIED AND INSTALLED BY THE CUSTOMER IN ACCORDANCE WITH LOCAL AND NATIONAL ELECTRICAL CODES. PHANTOM LINE ENCLOSURES INDICATE ALTERNATE CIRCUITRY OR AVAILABLE SALES OPTIONS.
- IF ANY OF THE ORIGINAL WIRES, AS SUPPLIED WITH THIS UNIT, MUST BE REPLACED, REPLACE WITH APPLIANCE WIRING MATERIAL RATED AT 105°C.
- THREE PHASE MOTORS ARE PROTECTED UNDER PRIMARY SINGLE PHASING CONDITIONS. ALL MOTORS HAVE INTERNAL OVERLOAD PROTECTION. COMPRESSORS HAVE INTERNAL THERMAL PROTECTION.
- TO ENABLE LEAD/LAG, CUT AND ISOLATE WIRE 101PP.
- IDM RPM INDICATION 0-7.5VDC. SEE POWER DIAGRAM FOR RPM TABLE.
- CCH2 LEADS ARE BLACK WITH BROWN TAPE WRAPPED AROUND THE END OF EACH LEAD.
- CONNECTIONS SHOWN INCLUDE OPTIONAL COMM. IF COMM IS NOT INSTALLED, CONNECT PLUG 3P4 TO RTRM-3J4. REFER TO ACCOMPANYING LITERATURE FOR PROPER CONNECTION/COMBINATION OF OPTIONAL COMPONENTS.
- TO DISABLE THE COMPRESSORS, REMOVE THE JUMPERS ON LT81 BETWEEN PINS 1 & 2 AND PINS 3 & 4 AND CONNECT FIELD SUPPLIED CONTROL DEVICE.
- TO SHUT DOWN THE UNIT FOR EMERGENCY STOP, REMOVE THE JUMPER ON LT81 BETWEEN PINS 5 & 6 AND CONNECT FIELD SUPPLIED CONTROL DEVICE OR INSTALL OPTIONAL FIRESTAT.
- INSTALL OPTIONAL REMOTE SENSOR (NOT SHOWN) TO PINS S1 AND S2 (NOT SHOWN) WHEN REQUIRED. SEE PROGRAMMABLE ZONE SENSOR/REMOTE PANEL WITH NIGHT SETBACK LITERATURE FOR CORRECT SETTINGS.
- TO ENABLE SUPPLY AIR TEMPERING, REMOVE PLUG 5P3.
- REQUIRED FOR OPTIONAL REFERENCE ENTHALPY CONTROL.
- REQUIRED FOR OPTIONAL COMPARATIVE ENTHALPY CONTROL.
- FOR STANDARD ID FAN OPERATION ENSURE RTRM 3J9, RTOM 5J12, AND RTOM 5J8 PINS 6-7 ARE OPEN (NO CONNECTIONS).
- FOR OPTIONAL MULTI-SPEED ID FAN CONNECT RTRM 3J9 WITH 3P9, RTOM 5J8 PINS 6-7 WITH 5P8B1.
- FUTURE CHANGES - NOT USED.
- PLUG PPM-RT IS NOT CONNECTED TO ANYTHING. IT IS ONLY USED FOR FACTORY RUNTEST HOOKUP.
- FOR VAV BOX RELAY (VHR) NORMALLY CLOSED FUNCTION, CONNECT TO WIRES 634A(PR) AND 635A(BK). FOR NORMALLY OPEN RELAY FUNCTION, CONNECT TO WIRES 635A(BK) AND 636A(YL).

WARNING
HAZARDOUS VOLTAGE!
DISCONNECT ALL ELECTRIC POWER INCLUDING REMOTE DISCONNECTS AND FOLLOW LOCK OUT AND TAG PROCEDURES BEFORE SERVICING. INSURE THAT ALL MOTOR CAPACITORS HAVE DISCHARGED STORED VOLTAGE. UNITS WITH VARIABLE SPEED DRIVE, REFER TO DRIVE INSTRUCTIONS FOR CAPACITOR DISCHARGE.

AVERTISSEMENT
TENSION DANGEREUSE!
COUPER TOUTES LES TENSIONS ET OUVRIR LES SECTIONNEURS A DISTANCE. PUIS SUIVRE LES PROCEDURES DE VERROUILLAGE ET DES ETIQUETTES AVANT TOUTE INTERVENTION. VÉRIFIER QUE TOUTS LES CONDENSATEURS DES MOTEURS SONT DÉCHARGÉS. DANS LE CAS D'UNITÉS COMPORTANT DES ENTRAINEMENTS A VITESSE VARIABLE, SE REPORTER AUX INSTRUCTIONS DE L'ENTRAÎNEMENT POUR DÉCHARGER LES CONDENSATEURS.

ADVERTENCIA
¡VOLTAJE PELIGROSO!
DESCONECTE TODA LA ENERGÍA ELÉCTRICA, INCLUIDO LAS DESCONECIONES REMOTAS Y SIGA LOS PROCEDIMIENTOS DE CIERRE Y ETIQUETADO ANTES DE PROCEDER AL SERVICIO. ASEGÚRESE DE QUE TODOS LOS CONDENSADORES DEL MOTOR HAYAN DESCARGADO EL VOLTAJE ALMACENADO. PARA LAS UNIDADES CON EJE DE DIRECCIÓN DE VELOCIDAD VARIABLE, CONSULTE LAS INSTRUCCIONES PARA LA DESCARGA DEL CONDENSADOR.

FAILURE TO DO THE ABOVE BEFORE SERVICING COULD RESULT IN DEATH OR SERIOUS INJURY.
NE PAS RESPECTER LES MESURES DE PRÉCAUTION PEUT ENTRAINER DES BLESSURES GRAVES POUVANT ÊTRE MORTELLES.
EL NO REALIZAR LO ANTERIORMENTE INDICADO, PODRÍA OCASIONAR LA MUERTE O SERIAS LESIONES PERSONALES.

TRANE
THIS DRAWING IS PROPRIETARY AND SHALL NOT BE COPIED OR ITS CONTENTS DISCLOSED TO OUTSIDE PARTIES WITHOUT THE WRITTEN CONSENT OF TRANE.
DRAWN BY: K. EDWARDS
DATE: 3/07/13
THIRD ANGLE PROJECTION
DO NOT SCALE PRINT

4366-8253
DIAGRAM
CONNECTION PRINT
TSC120EW - RELIATEL CONTROLS
WITH MULTI-ZONE VAV

REV **A**

IMPORTANT
DO NOT ENERGIZE UNIT UNTIL CHECK-OUT AND START-UP PROCEDURE HAS BEEN COMPLETED.



CAUTION
USE COPPER CONDUCTORS ONLY!
UNIT TERMINALS ARE NOT DESIGNED TO ACCEPT OTHER TYPES OF CONDUCTORS.
FAILURE TO DO SO MAY CAUSE DAMAGE TO THE EQUIPMENT.

ATTENTION
N'UTILISER QUE DES CONDUCTEURS EN CUIVRE!
LES BORNES DE L'UNITÉ NE SONT PAS CONÇUES POUR RECEVOIR D'AUTRES TYPES DE CONDUCTEURS.


PRECAUCIÓN
¡UTILICE ÚNICAMENTE CONDUCTORES DE COBRE!
LAS TERMINALES DE LA UNIDAD NO ESTÁN DISEÑADAS PARA ACEPTAR OTROS TIPOS DE CONDUCTORES.

SEE NAMEPLATE FOR LINE VOLTAGE AND MAX FUSE SIZE
L1 L2 L3


CONTROL BOX - VERTICAL

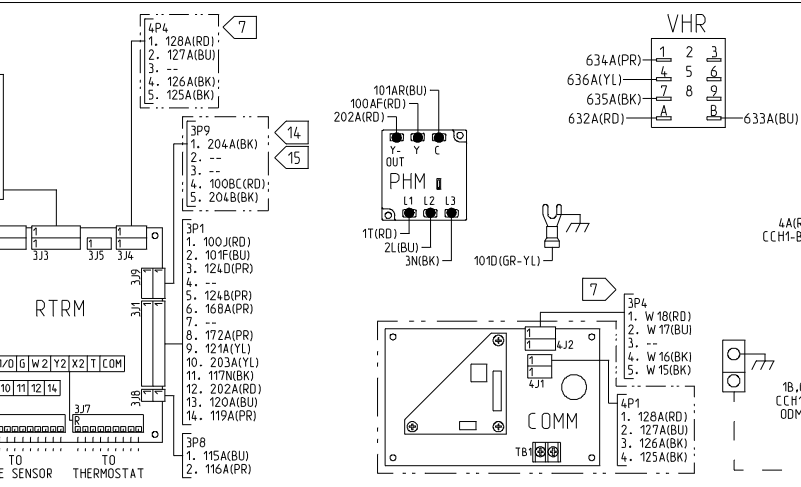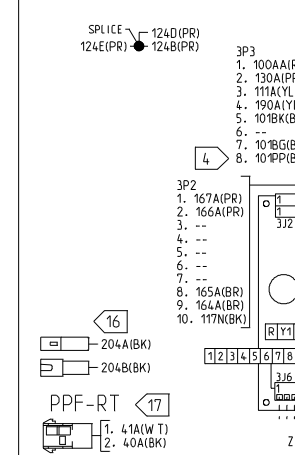


CONTROL BOX - HORIZONTAL

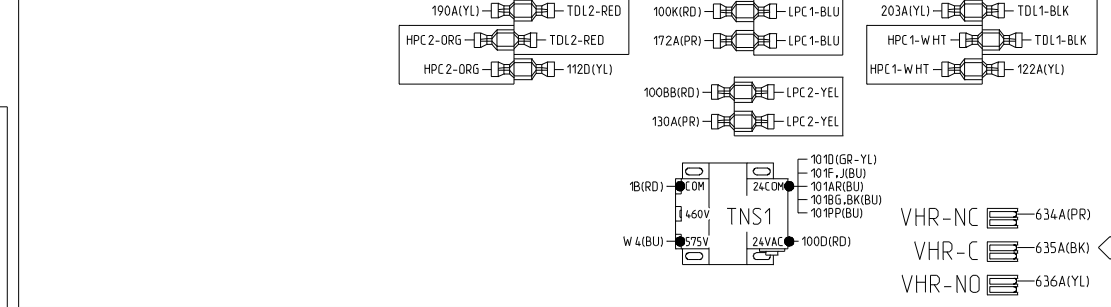


ID FAN CONTROLS PANEL

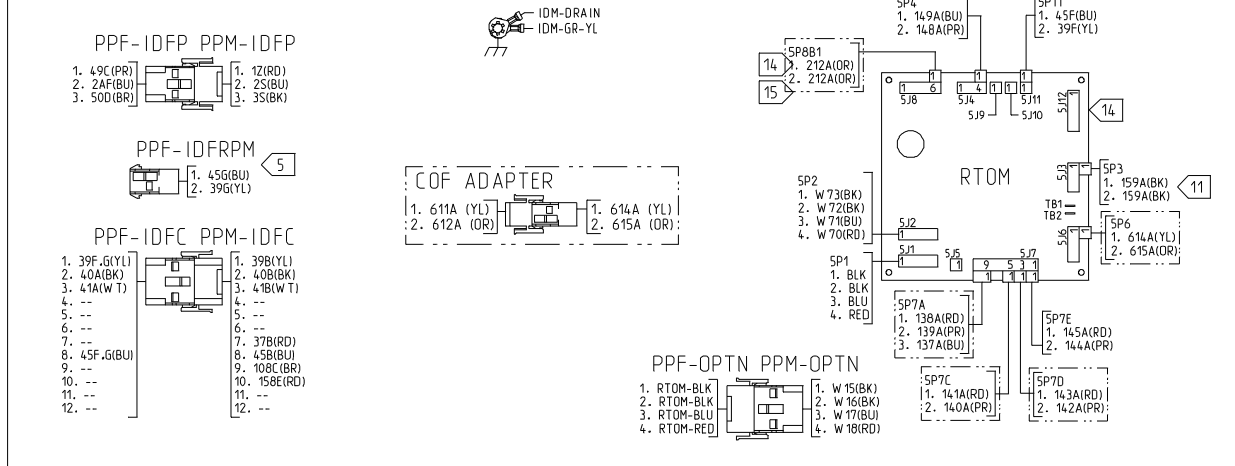


SUPPLY AIR SECTION

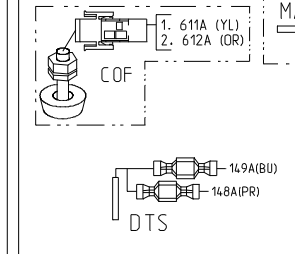


ID FAN COMPARTMENT

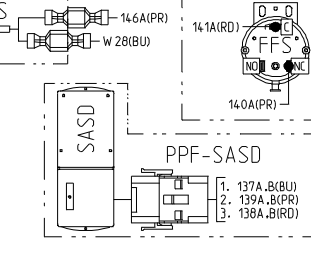


OUTDOOR SECTION

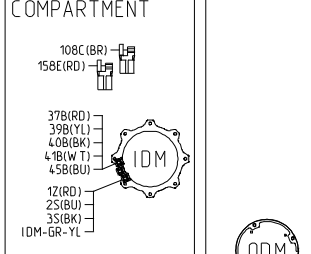


TBUE COMPARTMENT

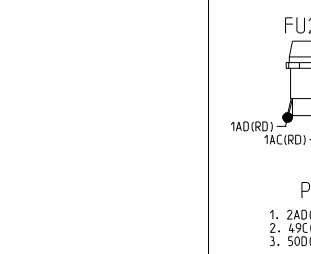


RETURN AIR SECTION

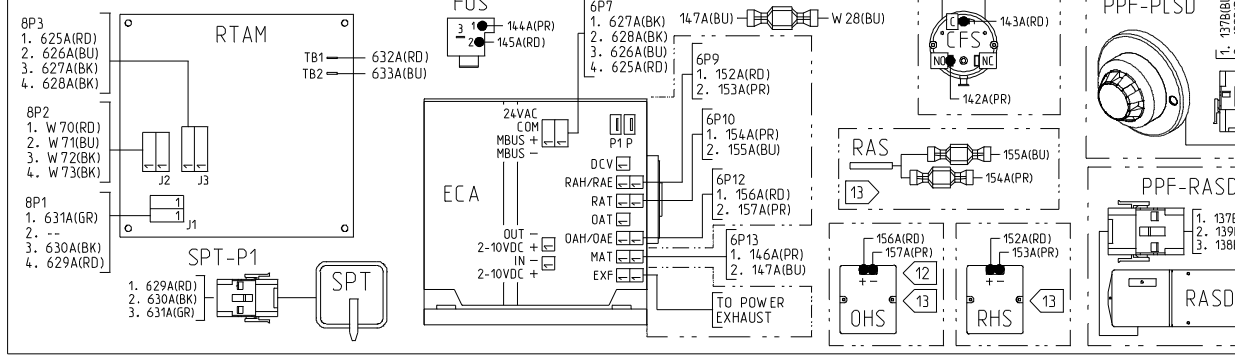


HEATER SECTION

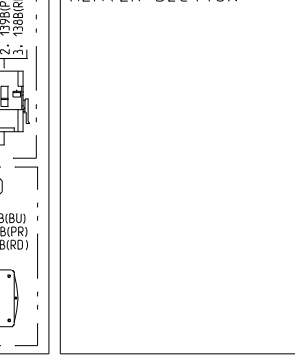

OUTDOOR SECTION

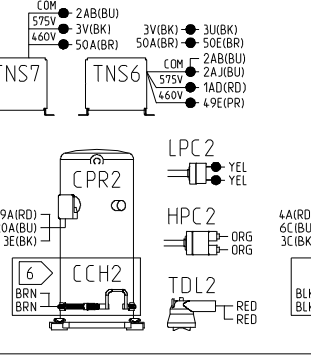

TBUE COMPARTMENT

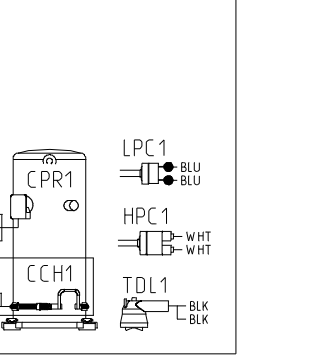

ZONE SENSOR

TO RTRM-3J6-1	1
TO RTRM-3J6-2	2
TO RTRM-3J6-3	3
TO RTRM-3J6-4	4
TO RTRM-3J6-5	5
TO RTRM-3J6-6	6
TO RTRM-3J6-7	7
TO RTRM-3J6-8	8
TO RTRM-3J6-9	9
TO RTRM-3J6-10	10

PROGRAMMABLE ZONE SENSOR W/ NIGHT SETBACK

TO RTRM-3J6-7	7
TO RTRM-3J6-8	8
TO RTRM-3J6-9	9
TO RTRM-3J6-10	10
TO RTRM-3J6-11	11
TO RTRM-3J6-12	12
TO RTRM-3J6-14	14

THERMOSTAT

TO RTRM-3J7-R	RC
TO RTRM-3J7-W/1/0	W1
TO RTRM-3J7-W/2	W2
TO RTRM-3J7-G	G
TO RTRM-3J7-COM	COM
TO RTRM-3J7-Y1	Y1
TO RTRM-3J7-Y2	Y2