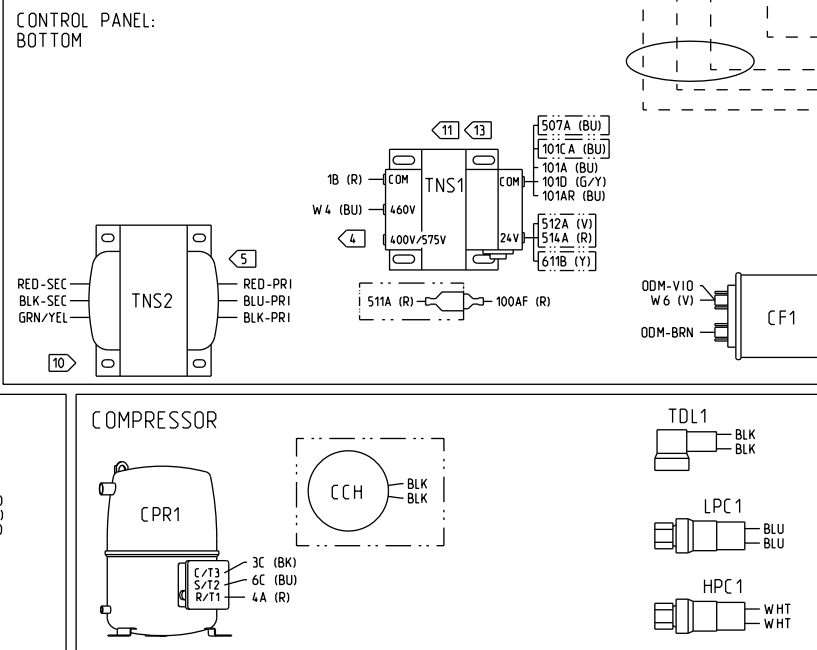
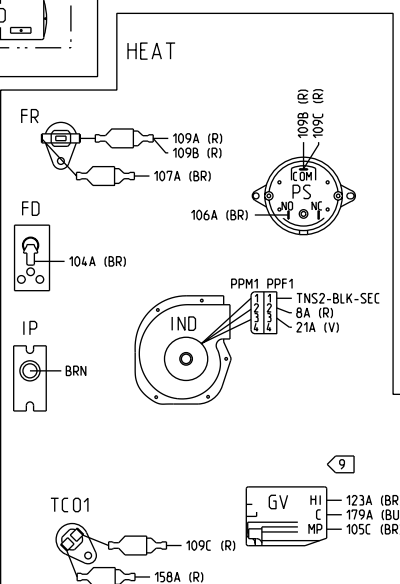
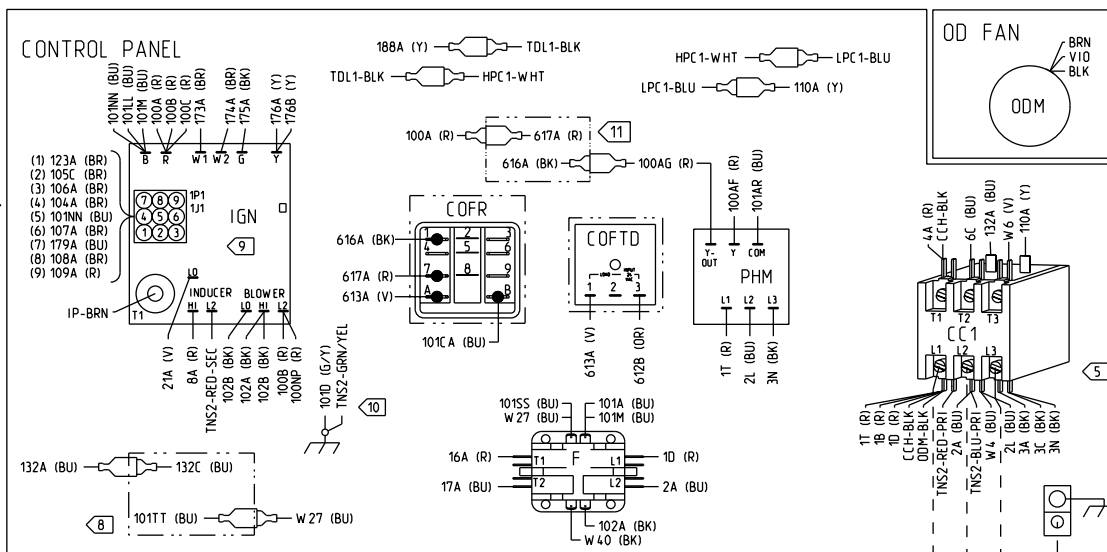


 WARNING	AVERTISSEMENT	 ADVERTENCIA
HAZARDOUS VOLTAGE! DISCONNECT ALL ELECTRICAL POWER INCLUDING REMOTE DISCONNECTS BEFORE WORKING ON THIS TAG. PROCEED BEFORE SERVICING. INSURE THAT ALL MOTOR CAPACITORS HAVE DISCHARGED STORED VOLTAGE. UNITS WITH VARIABLE SPEED DRIVE, REFER TO THE INSTRUCTIONS FOR THE CAPACITOR DISCHARGE. FAILURE TO DO THE ABOVE BEFORE SERVICING COULD RESULT IN DEATH OR SERIOUS INJURY.	TENSION DANGEREUSE! COUPER TOUTES LES TENSIONS ET OUVRIER LES SECTIONNEMENTS A DISTANCE. NE PAS COMMENCER LES TRAVAUX DE VERROUILLAGE ET DES ETIQUETTES AVANT TOUTE INTERVENTION. VÉRIFIER QUE TOUTS LES CONDENSATEURS DES MOTEURS SONT DÉCHARGÉS. DANS LE CAS D'UNITÉS COMPORTANT DES ENTRAINEMENTS À VITESSE VARIABLE, VOUS RÉFÉRER AUX INSTRUCTIONS DE L'ENTRAÎNEMENT POUR DÉCHARGER LES CONDENSATEURS. NE PAS RESPECTER CES MESURES DE PRÉCAUTION PEUT PROVOQUER ÊTRE MORTELLES.	VOLTAJE PELIGROSO! DESCONECTE TODA LA ENERGÍA ELÉCTRICA INCLUIDO LAS DESCONEXIONES REMOTAS Y PROCEDA ANTES DE SERVICIO. VERIFIQUE QUE TODOS LOS CAPACITORES DEL MOTOR HAYAN DESCARGADO EL VOLTAJE ALMACENADO. PARA LAS UNIDADES CON EJE DE VARIACIÓN DE VELOCIDAD, CONSULTE LAS INSTRUCCIONES PARA LA DESCARGA DEL CONDENSADOR. NO REALIZAR LO ANTERIORMENTE INDICADO, PODRÍA OCASIONAR LA MUERTE O SERIAS LESIONES PERSONALES.

TRANE

THIS DRAWING IS PROPRIETARY AND SHALL NOT BE
COPIED OR ITS CONTENTS DISCLOSED TO OUTSIDE
PARTIES WITHOUT THE WRITTEN CONSENT OF TRANE

DRAWN BY: © TRANE DATE: 6/10/2011

R JOHNSON

DO NOT SCALE PRINT	THIRD ANGLE PROJECTION 
---------------------------	--

IMPORTANT
DO NOT ENERGIZE UNIT UNTIL
CHECK-OUT AND START-UP
PROCEDURE HAS BEEN COMPLETED.

4366-8389	REV A
DIAGRAM CONNECTION PRINT Y(S,H)C(072.090)E(4,W) ELECTROMECHANICAL	

CAUTION
USE COPPER CONDUCTORS ONLY!
UNIT TERMINALS ARE NOT DESIGNED TO
ACCEPT OTHER TYPES OF CONDUCTORS.
FAILURE TO DO SO MAY CAUSE DAMAGE TO
THE EQUIPMENT.

ATTENTION
N'UTILISER QUE DES CONDUCTEURS EN
CUIVRE!
LES BORNES DE L'UNITÉ NE SONT PAS
CONÇUES POUR RECEVOIR D'AUTRES TYPES
DE CONDUCTEURS.
L'UTILISATION DE TOUT AUTRE CONDUCTEUR
PEUT ENDOMMAGER L'ÉQUIPEMENT.

PRECAUCIÓN
¡UTILICE ÚNICAMENTE CONDUCTORES DE
COBRE!
LAS TERMINALES DE LA UNIDAD NO ESTÁN
DISEÑADAS PARA ACEPTAR OTROS TIPOS DE
CONDUCTORES.
SI NO LO HACE, PUEDE OCASIONAR DAÑO AL
EQUIPO.