

DEVICE	DESCRIPTION
4R1	INBOARD BEARING TEMPERATURE SENSOR
4R2	OUTBOARD BEARING TEMPERATURE SENSOR
4R3	OIL PUMP DISCHARGE PRESSURE TRANSDUCER
4R4	OIL TANK PRESSURE TRANSDUCER
4R5	OIL TANK TEMPERATURE SENSOR
4R6	EVAPORATOR ENTERING WATER TEMPERATURE SENSOR
4R7	EVAPORATOR LEAVING WATER TEMPERATURE SENSOR
4R8	CONDENSER ENTERING WATER TEMPERATURE SENSOR
4R9	CONDENSER LEAVING WATER TEMPERATURE SENSOR
4R11	CONDENSER SATURATED REFRIGERANT TEMPERATURE SENSOR
4R16	COMPRESSOR DISCHARGE REFRIGERANT TEMPERATURE SENSOR

NOTES:

- UNLESS OTHERWISE SPECIFIED, WB2 RH BUS CABLE VARIATIONS APPLY TO ALL 210-250 DUPLEX SHELL COMBINATIONS, LH OR RH CIRCUITS, AND MAR OR NMAR WATER BOX COMBINATIONS.
- STARTER AND UNIT CABLE VARIATIONS CONNECT IN PLACE OF COMPONENTS AT LOCATIONS LABELED A THRU C, SHOWN IN VARIATION 3 BELOW.

