



TRANE

DATE: 24-MAR-2016

RTHB
ADAPTIVEVIEW PANEL UPGRADE
DEVICE DESCRIPTIONS

DRAWING NUMBER
50711878

PAGE 1 OF 1

REV
B

NOTE: DEVICES LISTED MAY NOT ALWAYS APPEAR ON SCHEMATIC WIRING DIAGRAM

DEVICE	DESCRIPTION	LINE
1A1	ADAPTIVEVIEW DISPLAY	68
1A2	UC800 CONTROLLER	71
1A4	POWER SUPPLY MODULE 1	81
1A5	POWER SUPPLY MODULE 2	70
1A6	(OPTIONAL) TRACER SC, TRANE INTELLIGENT SYSTEMS CONTROLLER	83
1A7	(OPTIONAL) COMMS INTERFACE, LCH-C COMMUNICATIONS	142
1A8	DUAL LOW VOLTAGE BINARY INPUT, LOW PRESSURE CUTOUT/OIL FLOW	94
1A9	DUAL LOW VOLTAGE BINARY INPUT, EXTERNAL STOP/EMERGENCY STOP	103
1A11	(OPTIONAL) DUAL LOW VOLTAGE BINARY INPUT, EXT. BASELOAD COMMAND/ICE BUILDING CONTROL	112
1A12	(OPTIONAL) DUAL ANALOG INPUT/OUTPUT, EXT. BASELOAD SETPOINT/REFRIGERANT MONITOR	162
1A13	(OPTIONAL) DUAL ANALOG INPUT/OUTPUT, RLA OUT/CONDENSER CONTROL OUT	172
1A14	(OPTIONAL) DUAL ANALOG INPUT/OUTPUT, CHILLED WATER SETPOINT INCUSTOMER CURRENT LIMIT IN	195
1A15	DUAL HIGH VOLTAGE BINARY INPUT, HIGH PRESSURE CUTOUT/SOLID STATE STARTER CUTOUT	86
1A17	DUAL HIGH VOLTAGE BINARY INPUT, CHILLED WATER FLOW/CONDENSER WATER FLOW	103
1A18	DUAL TRIAC OUTPUT, LOAD SOLENOID/UNLOAD SOLENOID	127
1A19	DUAL RELAY OUTPUT, OIL HEATER	135
1A20	DUAL RELAY OUTPUT, START COND. WATER PUMP/START CHILLED WATER PUMP	144
1A21	(OPTIONAL) DUAL RELAY OUTPUT, ICE MAKING STATUS	153
1A22	(OPTIONAL) QUAD RELAY OUTPUT, CUSTOMER PROGRAMMABLE RELAYS	189
1A23	(OPTIONAL) COMM 4 MODULE	151
1A24	(OPTIONAL) DUAL ANALOG INPUT/OUTPUT, WATER FLOW MEASUREMENT	135
1F10	FUSE, CONTROL POWER	64
1F11	FUSE, LOW VOLTAGE	67
1T10	TRANSFORMER, LOW VOLTAGE	69
1X1	TERMINAL BLOCK, CONTROL VOLTAGE 1	
1X2	TERMINAL BLOCK, LOW VOLTAGE	
1X3	TERMINAL BLOCK, POWER SUPPLY INPUT	
1X4	TERMINAL BLOCK, CONTROL VOLTAGE 2	
2A3	STARTER MODULE	30
2K1	(EXISTING OR CUSTOMER SUPPLIED) START CONTACTOR	37
2K2	(EXISTING OR CUSTOMER SUPPLIED) RUN CONTACTOR	40
2K3	(EXISTING OR CUSTOMER SUPPLIED) SHORTING CONTACTOR	43
2K4	(EXISTING OR CUSTOMER SUPPLIED) TRANSITION CONTACTOR	46
2T1	TRANSFORMER, CURRENT, LINE A	5
2T2	TRANSFORMER, CURRENT, LINE B	10
2T3	TRANSFORMER, CURRENT, LINE C	15
2T6	TRANSFORMER, POTENTIAL, LINE A TO B	37
2T7	TRANSFORMER, POTENTIAL, LINE B TO C	39
2T8	TRANSFORMER, POTENTIAL, LINE A TO C	41
2U2	(EXISTING OR CUSTOMER SUPPLIED) SOLID STATE STARTER	5, 44
4B10	TEMPERATURE SENSOR, ENTERING CONDENSER WATER TEMPERATURE	204
4B11	TEMPERATURE SENSOR, LEAVING CONDENSER WATER TEMPERATURE	208
4B12	TEMPERATURE SENSOR, ENTERING EVAPORATOR WATER TEMPERATURE	212
4B13	TEMPERATURE SENSOR, LEAVING EVAPORATOR WATER TEMPERATURE	216
4B14	TEMPERATURE SENSOR, COMPRESSOR DISCHARGE TEMPERATURE	220
4B15	TEMPERATURE SENSOR, CONDENSER SATURATED TEMPERATURE	224
4B16	TEMPERATURE SENSOR, EVAPORATOR SATURATED TEMPERATURE	223
4B17	PRESSURE SENSOR, CONDENSER REFRIGERANT PRESSURE	228
4B18	(OPTIONAL) OUTDOOR AIR TEMPERATURE	232
4B19	ELECTRONIC EXPANSION VALVE 1	228
4B20	ELECTRONIC EXPANSION VALVE 2	232
4B24	(OPTIONAL) SENSOR, EVAPORATOR WATER DIFFERENTIAL PRESSURE	127
4B25	(OPTIONAL) SENSOR, CONDENSER WATER DIFFERENTIAL PRESSURE	130
4HR1/2	(EXISTING OR CUSTOMER SUPPLIED) OIL TANK HEATERS	140
4L1	(EXISTING OR CUSTOMER SUPPLIED) MASTER SOLENOID VALVE	142
4L2	(EXISTING OR CUSTOMER SUPPLIED) LOAD SOLENOID VALVE	131
4L3	(EXISTING OR CUSTOMER SUPPLIED) UNLOAD SOLENOID VALVE	129
4S1	(EXISTING OR CUSTOMER SUPPLIED) HIGH PRESSURE CUTOUT	89
4S2	(EXISTING OR CUSTOMER SUPPLIED) OIL FLOW SWITCH	93
4S3	(EXISTING OR CUSTOMER SUPPLIED) LOW PRESSURE CUTOUT	91
5K1	(EXISTING OR CUSTOMER SUPPLIED) EVAPORATOR WATER PUMP CONTROL	146
5K1-AUX	(EXISTING OR CUSTOMER SUPPLIED) EVAPORATOR WATER PUMP CONTROL AUX	105
5K2	(EXISTING OR CUSTOMER SUPPLIED) CONDENSER WATER PUMP CONTROL	150
5K2-AUX	(EXISTING OR CUSTOMER SUPPLIED) CONDENSER WATER PUMP CONTROL AUX	107
5K10	(EXISTING OR CUSTOMER SUPPLIED) ICE MACHINE STATUS RELAY	159
5K11	(EXISTING OR CUSTOMER SUPPLIED) RELAY, CUSTOMER PROVIDED, UNIT STATUS, PROGRAMMABLE, DEFAULT IS UNIT ALARM	189
5K12	(EXISTING OR CUSTOMER SUPPLIED) RELAY, CUSTOMER PROVIDED, UNIT STATUS, PROGRAMMABLE, DEFAULT IS UNIT ALARM	190
5K13	(EXISTING OR CUSTOMER SUPPLIED) RELAY, CUSTOMER PROVIDED, UNIT STATUS, PROGRAMMABLE, DEFAULT IS UNIT RUNNING	192
5K14	(EXISTING OR CUSTOMER SUPPLIED) RELAY, CUSTOMER PROVIDED, UNIT STATUS, PROGRAMMABLE, DEFAULT IS UNIT RUNNING	193
5K15	(EXISTING OR CUSTOMER SUPPLIED) RELAY, CUSTOMER PROVIDED, UNIT STATUS, PROGRAMMABLE, DEFAULT IS MAXIMUM UNIT CAPACITY	196
5K16	(EXISTING OR CUSTOMER SUPPLIED) RELAY, CUSTOMER PROVIDED, UNIT STATUS, PROGRAMMABLE, DEFAULT IS MAXIMUM UNIT CAPACITY	197
5K17	(EXISTING OR CUSTOMER SUPPLIED) RELAY, CUSTOMER PROVIDED, UNIT STATUS, PROGRAMMABLE, DEFAULT IS LIMITED UNIT OPERATION	199
5K18	(EXISTING OR CUSTOMER SUPPLIED) RELAY, CUSTOMER PROVIDED, UNIT STATUS, PROGRAMMABLE, DEFAULT IS LIMITED UNIT OPERATION	200
5S1	(EXISTING OR CUSTOMER SUPPLIED) EVAPORATOR WATER FLOW SWITCH	105, 96
5S2	(EXISTING OR CUSTOMER SUPPLIED) CONDENSER WATER FLOW SWITCH	107, 99
5S4	(EXISTING OR CUSTOMER SUPPLIED) EXTERNAL AUTO STOP	100
5S10	(EXISTING OR CUSTOMER SUPPLIED) EMERGENCY STOP SWITCH	102
5S11	(EXISTING OR CUSTOMER SUPPLIED) EXTERNAL BASELOAD COMMAND SWITCH	109
5S12	(EXISTING OR CUSTOMER SUPPLIED) START ICE MAKING CONTACT	111

DEVICE PREFIX CODE

1 = MAIN UNIT CONTROL PANEL DEVICE
2 = STARTER PANEL DEVICE
3 = PURGE DEVICE
4 = UNIT MOUNTED DEVICE
5 = CUSTOMER PROVIDED DEVICE
6 = ENGINE DRIVEN GENERATOR DEVICE
7 = REDUCED VOLTAGE PANEL DEVICE

DASHED LINES INDICATE WIRING BY OTHERS

THIS DRAWING IS PROPRIETARY AND SHALL NOT BE
COPIED OR ITS CONTENTS DISCLOSED TO THIRD
PARTIES WITHOUT THE WRITTEN CONSENT OF TRANE

⚠ WARNING

HAZARDOUS VOLTAGE!
DISCONNECT ALL ELECTRIC POWER INCLUDING
REMOTE DISCONNECTS AND FOLLOW LOCK OUT
AND TAG PROCEDURES BEFORE SERVICING.
INSURE THAT ALL MOTOR CAPACITORS HAVE
DISCHARGED STORED VOLTAGE. UNITS WITH
VARIABLE SPEED DRIVE, REFER TO DRIVE
INSTRUCTIONS FOR CAPACITOR DISCHARGE.
FAILURE TO DO THE ABOVE BEFORE SERVICING
COULD RESULT IN DEATH OR SERIOUS INJURY.

⚠ AVERTISSEMENT

TENSION DANGEREUSE!
COUPER TOUTES LES TENSIONS ET OUVRI
LES SECTIONNEURS A DISTANCE, PUIS SUIVRE
LES PROCEDURES DE VERROUILLAGE ET DES
ETIQUETTES AVANT TOUTE INTERVENTION.
VERIFIER QUE TOUTES LES CONDENSEURS
DES MOTEURS SONT DECHARGES. DANS LE CAS
D'UNITE A VITESSE VARIABLE, SE REPORTER AUX
INSTRUCTIONS DE L'ENTRAINEMENT POUR
DECHARGER LES CONDENSEURS.
NE PAS RESPECTER CES MESURES DE
PRECAUTION PEUT ENTRAINER DES BLESSURES
GRAVES POUVANT ETRE MORTELLES.

⚠ ADVERTENCIA

¡VOLTAJE PELIGROSO!
DESCONECTE TODA LA ENERGIA ELECTRICA,
INCLUIDO LAS DESCONEXIONES REMOTAS Y SIGA
LOS PROCEDIMIENTOS DE CERRAR Y ETIQUETADO
ANTES DE PROCEDER AL SERVICIO. ASEGURESE
DE QUE TODOS LOS CAPACITORES DEL MOTOR
HAYAN DESCARGADO EL VOLTAJE ALMACENADO.
PARA LAS UNIDADES CON EJE DE DIRECCION
DE VELOCIDAD VARIABLE, CONSULTE LAS
INSTRUCCIONES PARA LA DESCARGA
DEL CONDENSADOR.
EL NO REALIZAR LO ANTERIORMENTE INDICADO,
PODRIA OCASIONAR LA MUERTE O SERIAS
LESIONES PERSONALES.

CAUTION

USE COPPER CONDUCTORS ONLY!

ATTENTION

N'UTILISER QUE DES CONDUCTEURS
EN CUIVRE!

PRECAUCIÓN

(UTILICE ÚNICAMENTE CONDUCTORES
DE COBRE)

UNIT TERMINALS ARE NOT DESIGNED TO ACCEPT
OTHER TYPES OF CONDUCTORS.

FAILURE TO DO SO MAY CAUSE
DAMAGE TO THE EQUIPMENT.

LES BORNES DE L'UNITÉ NE SONT
PAS CONÇUES POUR RECEVOIR D'AUTRES
TYPES DE CONDUCTEURS.

L'UTILISATION DE TOUT AUTRE CONDUCTEUR
PEUT ENDOMMAGER L'EQUIPEMENT.

LOS TERMINALES DE LA UNIDAD NO ESTÁN
DISEÑADOS PARA ACEPTAR OTROS TIPOS
DE CONDUCTORES.

SI NO SE HACE, PUEDE OCASIONAR
DAÑO AL EQUIPO.