

ALL phases of this installation must comply with NATIONAL, STATE AND LOCAL CODES

Model:

WG23X048

FUSE KIT

IMPORTANT—This Document is customer property and is to remain with this unit. Please return to service information pack upon completion of work.



WARNING

DISCONNECT POWER BEFORE SERVICING




WARNING

ELECTRICAL SHOCK WARNING
LOCK OUT UNIT DISCONNECT SWITCH IN OPEN POSITION BEFORE SERVICING UNIT. FAILURE TO FOLLOW THIS WARNING COULD RESULT IN PROPERTY DAMAGE, PERSONAL INJURY, OR DEATH.

Installation Instructions for WG32X048

1. Turn off electric power to unit.
2. Remove the junction box cover.
3. Remove strain relief in bottom of junction box through which white lead passes.
4. Disconnect white lead from thermostat wiring and gas control.
5. Remove white lead from furnace.
6. Install WG23X048 fuse assembly making certain the fuse is located as shown.
7. Route lead through wire clip and attach push-on terminal to gas control.
8. Excessive wire on this lead should be coiled and held with a cable tie which is supplied to prevent wire from touching the panels of the furnace.
9. Excess wire on the end for connection to the thermostat wiring may be cut and stripped to the proper length.
10. Install strain relief and junction box cover. Make certain no leads (especially at the rear) are pinched under the cover.
11. Turn on electric power.
12. Check for operation.

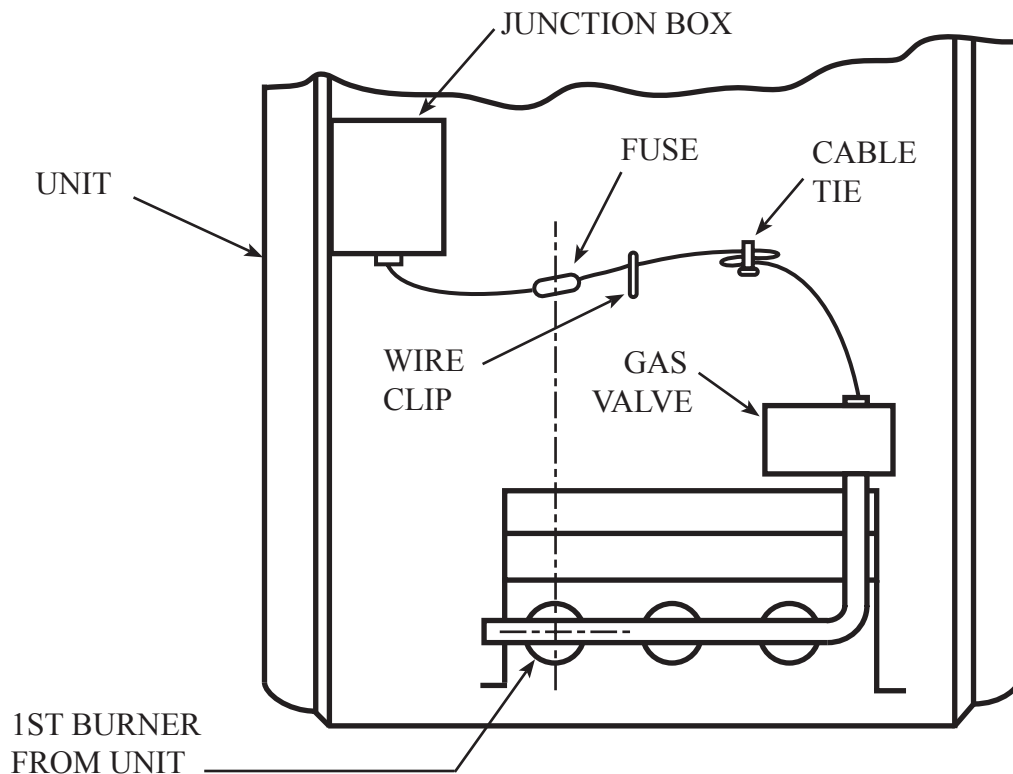

From A306809

Trane
6200 Troup Highway
Tyler, TX 75707
www.trane.com

*For more information contact
your local dealer (distributor)*

03/09

*Since the manufacturer has a policy of continuous product and product data improvement,
it reserves the right to change design and specifications without notice.*