INSTALLATION INSTRUCTIONS

ALL phases of this installation must comply with NATIONAL, STATE AND LOCAL CODES

Model:

CNT06554

24 Volt Electronic Expansion Valve Control

for Air Handler Installations

IMPORTANT — This Document is customer property and is to remain with this unit. Please return to service information pack upon completion of work.

- 1. Remove the existing control.
 - a. Remove the factory wiring connections.
 - b. Remove the four 1/4" screws at the corners of the control board.
- 2. Install the new control in reverse order. Set dip switches per the information and table below.

GAM5 AIR HANDLER CONFIGURATION DIP SWITCH SETTING

- Refrigeration Switch

Note: Ensure that the system refrigerant is set to match your application, either R-410A or R-22 using the Refrigerant Switch located on the Expansion Valve Control board (EVC) in the Control Pocket.


Factory default is R-410A.

Note: A "power cycle" is needed for the EVC to recognize the change.

GAM5 AIR HANDLER CONFIGURATION DIP SWITCH SETTINGS

- Electronic Expansion Valve Control

SV	V2 Switch	Settings	(Configuration)
DS1	DS2	DS3	Model Number
OFF	ON	OFF	GAM5A0A18M11SA
OFF	ON	OFF	GAM5A0A24M21SA
ON	ON	OFF	GAM5A0B30M21SA
ON	ON	0	GAM5A0B36M31SA
OFF	OFF	ON	GAM5A0C42M31SA
OFF	OFF	ON	GAM5A0C48M41SA
ON	OFF	ON	GAM5A0C60M51SA

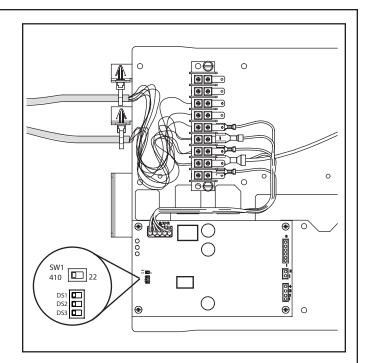

AM4 AIR HANDLER CONFIGURATION DIP SWITCH SETTING

- Refrigeration Switch

Note: Ensure that the system refrigerant is set to match your application, either R-410A or R-22 using the Refrigerant Switch located on the Expansion Valve Control board (EVC) in the Control Pocket.

Factory default is R-410A.

Note: A "power cycle" is needed for the EVC to recognize the change.

AM4 AIR HANDLER CONFIGURATION DIP SWITCH SETTINGS

- Electronic Expansion Valve Control

DS1	DS2	DS3	Model Number
OFF	ON	055	*AM4A0A18S11SA
		OFF -	*AM4A0A24A21SA
ON	OFF	ON	*AM4A0A30S21SA
		ON	*AM4A0A36S21SA
OFF	OFF	ON	*AM4A0B42S31SA
OFF	ON	OFF	*AM4A0B48S41SA
ON	OFF	ON	*AM4A0C60S51SA

