

ALL phases of this installation must comply with
NATIONAL, STATE AND LOCAL CODES

Model:
CNT06726

3-Relay Communicating Electric Heat Control

for Family 7 & 8 Air Handler Installations

IMPORTANT — This Document is customer property and is to remain with this unit. Please return to service information pack upon completion of work.

1. Remove the existing control.
 - a. Remove the factory wiring connections. Label wires as necessary.
 - b. Remove the 1/4" ground screw.
 - c. Push the top of the two plastic tabs outward to release the control board.
2. Install the new control in reverse order. Set jumper per the table below.
 - a. For 3 phase heaters, cut JP1 jumper. See illustration for JP1 location.

JUMPER POSITION SETTINGS

- Electronic Heat Control

Model	Jumper Position
BAYEVAC05BK1AA	5kW
BAYEVAC05LG1AA	5kW
BAYEVAC08BK1AA	8kW
BAYEVAC08LG1AA	8kW
BAYEVAC10BK1AA	10kW
BAYEVAC10LG1AA	10kW
BAYEVAC10LG3AA	10kW
BAYEVBC15BK1AA	15kW
BAYEVBC15LG3AA	15kW

