

INSTALLATION INSTRUCTIONS

18-GJ41D1-5

ALL phases of this installation must comply with
NATIONAL, STATE AND LOCAL CODES

Model:
CNT07751

Airflow Control (AFC) for Air Handler Installations

NOTE: This control is compatible with the
Hydronic Heat Control, CNT06197

IMPORTANT — This Document is customer property and is to remain with this unit. Please return to service information pack upon completion of work.


1. Remove the existing control.
 - a. Remove the personality module (PM) from existing control.
 - b. Remove the factory wiring connections. Label wires as necessary.

NOTE: Lift the low voltage terminal block. The individual thermostat wires do not need to be removed.

 - c. Remove the six mounting screws and set aside
2. Install the new control.
 - a. Install the new control in reverse order.

NOTE: Ensure the terminal block is properly aligned when installing on the new board.

 - b. Install the personality module (PM) onto the new control.
 - c. Power up the air handler and test for proper operation.

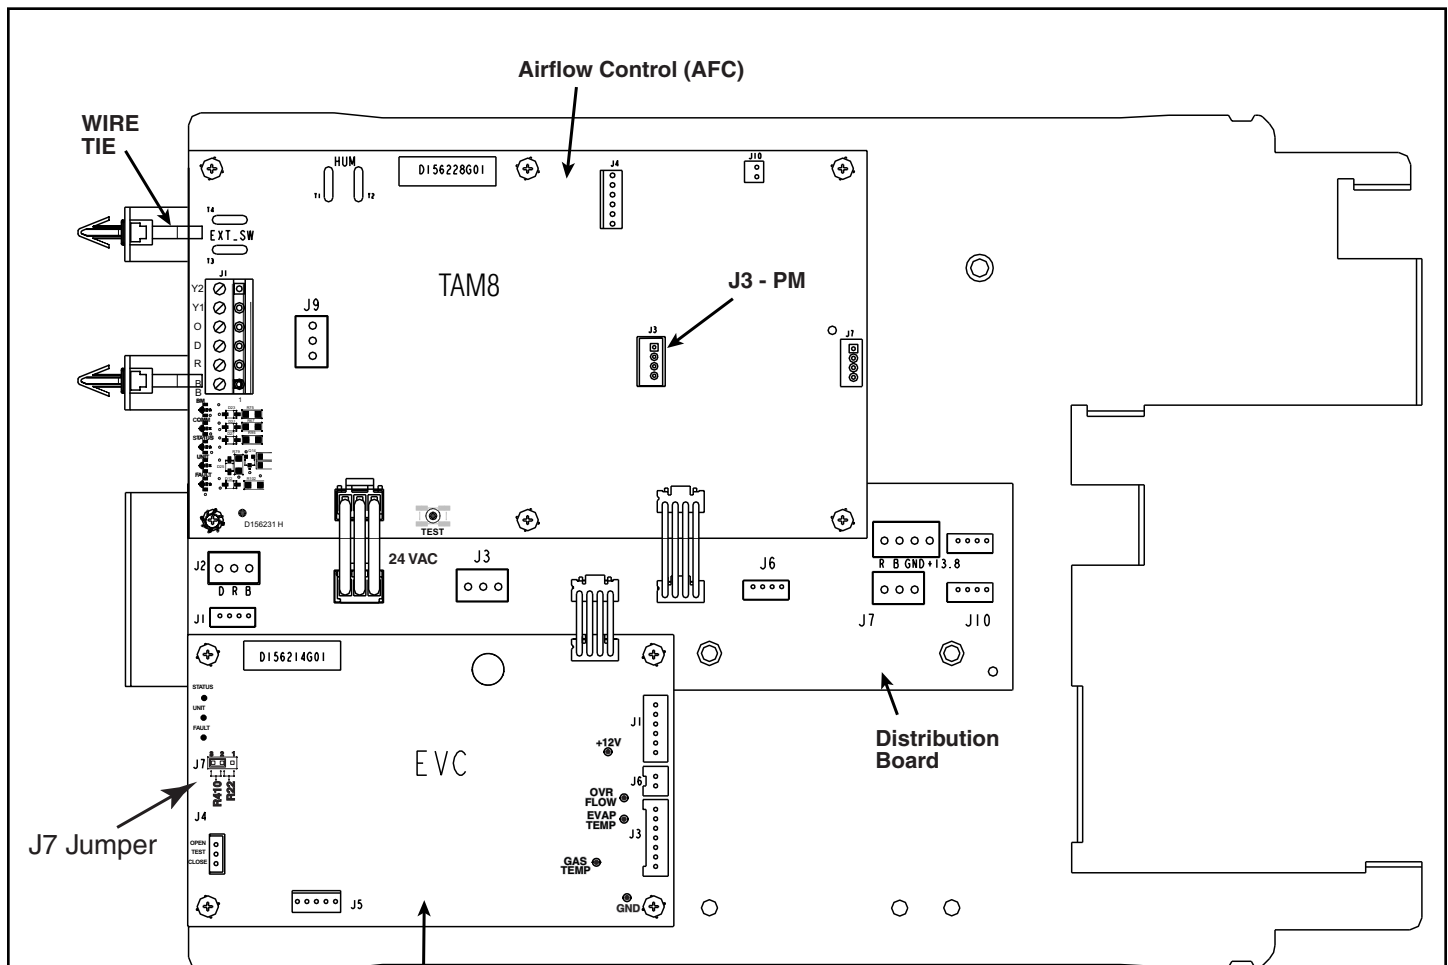

6200 Troup Highway
Tyler, TX 75707

© 2017 Trane

The manufacturer has a policy of continuous product and product data improvement and reserves the right to change design and specification without notice.