

**WARNING!**  
**MANUAL OUTSIDE AIR DAMPER SUPPLIED**  
**IN RETURN AIR SECTION OF UNIT. TO**  
**ACCESS, REMOVE UNIT END PANEL,**  
**REMOVE AND DISCARD SHIPPING BRACKET,**  
**REINSTALL SCREW INTO UNIT BASE, AND**  
**FOLLOW INSTALLATION INSTRUCTIONS**  
**INSIDE ACCESSORY BOX.**

