




TRANE®

Installation

Replacement of THT01392 and BAS00986 with THT01408 and BAS01006

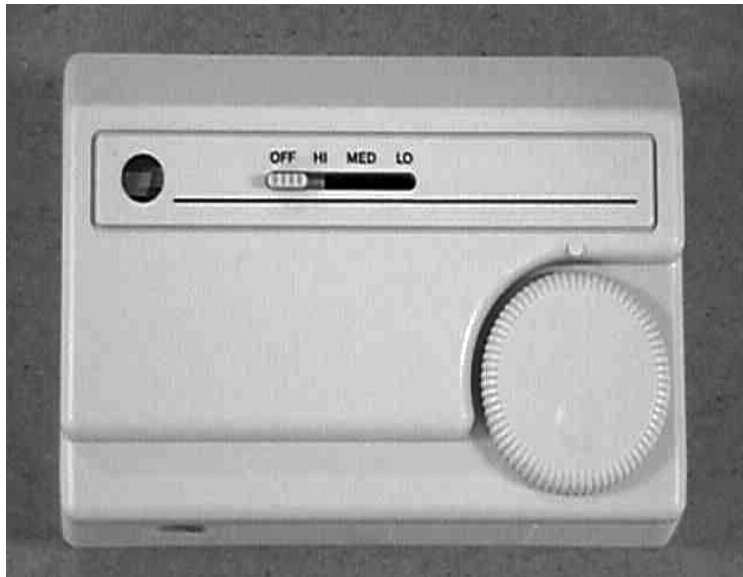


Models: FCCB, FCAB, FCBB, FCIB, FFAB, FFBB, FFIB, FFMB

Installation

Fan Controller, THT01392, and Base, BAS00986, are no longer available. Fan Controller, THT01408, and Base, BAS01006, are functional replacements, although some minor revisions will need to be made. See the following instructions for installation.


1. Remove controller head from base.
2. Detach the existing pin-connector style base from wall.
3. Mark location of all wires and remove from the existing base. See Figure 1.
4. Install new base on wall. Note that on the new controller, all wires plug directly into the head piece. The base is only used for mounting purposes.
5. If wires going to existing base terminate in female spade type quick connections, simply plug into the same connection number on the new controller head. If the wires are stripped, female spade connectors must first be installed on the wires, then inserted into the like number terminal on the new thermostat head. Note that only terminals 1-5 will be used for this controller. Also note that wire 2 (neutral) should go into the slot marked 10-GN. See Figure 2.
6. Install the new head onto the base.

Figure 1 — Existing Base

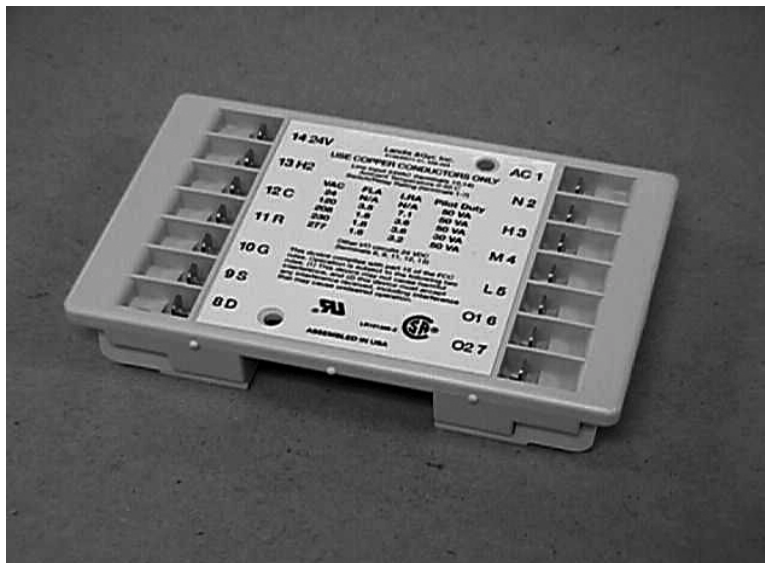

Installation

Figure 2 — New Controller Head

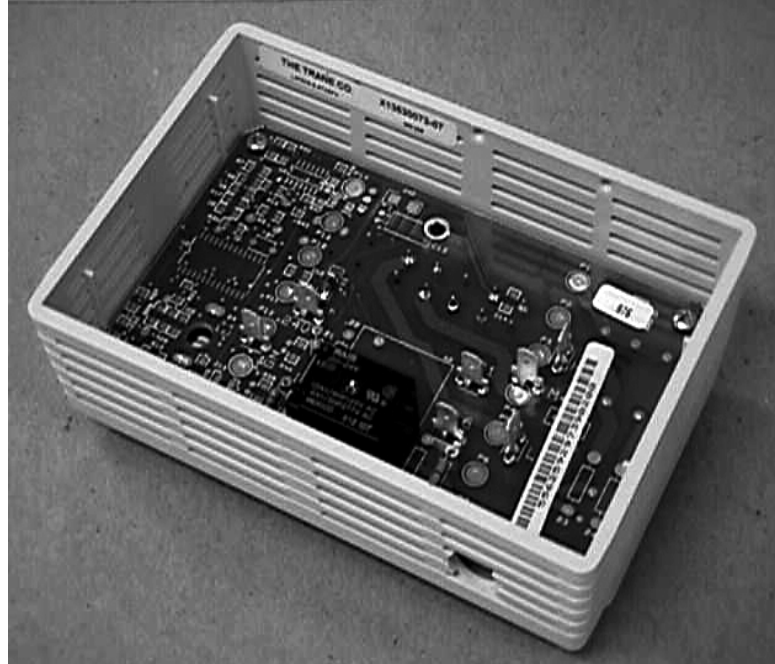



The Trane Company
Aftermarket Business Unit
3600 Pammel Creek Road
La Crosse, WI 54601
www.trane.com
An American Standard Company

Literature Order Number	PART-SVN03A-EN
File Number	SV-CAP-Controls-PART-SVN03-0801
Supersedes	New
Stocking Location	La Crosse

Since The Trane Company has a policy of continuous product and product data improvement, it reserves the right to change design and specifications without notice. Only qualified technicians should perform the installation and servicing of equipment referred to in this publication.