



Service Parts Installation Sheet

PM214 Power Supply Module

Order Numbers: S3090-0585-62

This document describes how to remove an existing power supply module and install a new power supply module in its place. Refer to *Power Supply Module PM214 Installation, Operation, and Troubleshooting Guide* (BAS-SVX13B-EN) for detailed information on this power supply module.


Remove the Existing Power Supply Module

WARNING

Hazardous Voltage!

Disconnect all electric power, including remote disconnects, before installing or servicing the power supply module. Follow proper lockout/tagout procedures to ensure the power cannot be inadvertently energized. Failure to disconnect power before installing or servicing the power supply module could result in death or serious injury.

1. Perform the lockout/tagout procedures for line voltage power to the cabinet.
2. Disconnect wires from the existing power supply.
3. Insert a flat-head screwdriver into the DIN rail latch.

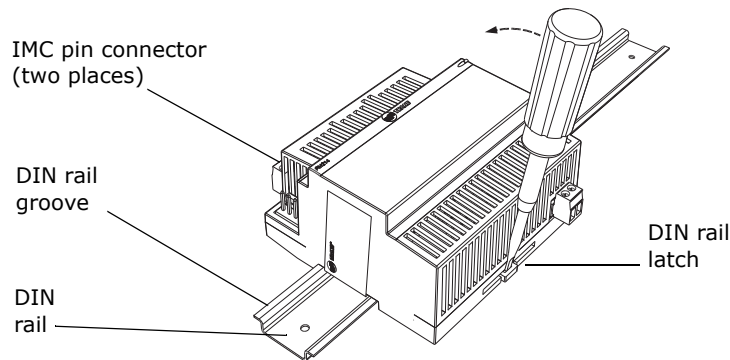

NOTICE


Avoid Equipment Damage!

Do not use excessive force. Excessive force could cause equipment damage.

4. Push the screwdriver forward to pry the DIN latch and free the enclosure from the rail.
5. Lift the side of the power supply module with the DIN rail latch to fully disengage it from the DIN rail.
6. Raise the side of the power supply module closest to the IMC pin connectors to unhook the power supply module DIN rail groove from the edge of the DIN rail.

Mount the New Power Supply Module

1. Install the new power supply module in the same location as the module you removed previously.
2. Hook the power supply module DIN rail groove to the edge of the DIN rail closest to the IMC pin connectors.
3. Press down on the side of the power supply module that holds the DIN rail latch. Press until you hear the latch click.

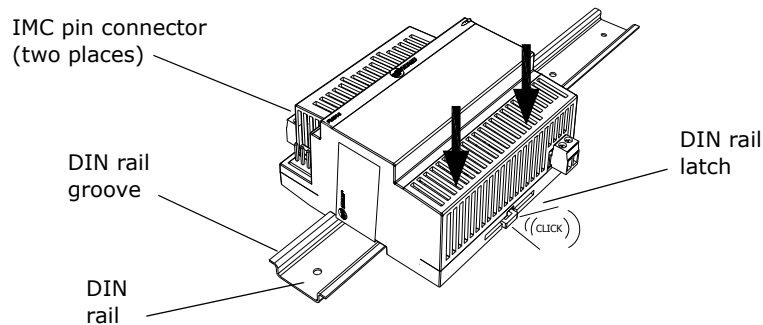

4. Reconnect the wires that were disconnected when removing the existing power supply module. Verify the power wiring before applying power.

Note: Ensure that all wiring and the enclosure meets local electrical codes.

Troubleshooting Tips

⚠ WARNING **Hazardous Voltage!**

Failed power supply modules can store hazardous voltage for an extended period. Do not open the power supply module enclosure. Failure to comply could result in death or serious injury.

- Power supply module PM214 contains hazardous voltage during normal operation.
- There is a failure if the power supply status LED does not light or blinks when power is applied to the power supply.
- No serviceable components are inside the power supply. Replace on failure.



www.trane.com

For more information, contact your local Trane office or e-mail us at comfort@trane.com

Trane and the Trane logo are trademarks of Trane in the United States and other countries. All trademarks referenced in this document are the trademarks of their respective owners.

Literature Order Number	X39641127-01 A
Date	June 2008
Supersedes	New

Trane has a policy of continuous product and product data improvement and reserves the right to change design and specifications without notice.